



OSG-8971 User Guide

Thank You for Choosing Ross

You've made a great choice. We expect you will be very happy with your purchase of Ross Technology.

Our mission is to:

1. Provide a Superior Customer Experience
 - offer the best product quality and support
2. Make Cool Practical Technology
 - develop great products that customers love

Ross has become well known for the Ross Video Code of Ethics. It guides our interactions and empowers our employees. I hope you enjoy reading it below.

If anything at all with your Ross experience does not live up to your expectations be sure to reach out to us at solutions@rossvideo.com.



David Ross
CEO, Ross Video
dross@rossvideo.com

Ross Video Code of Ethics

Any company is the sum total of the people that make things happen. At Ross, our employees are a special group. Our employees truly care about doing a great job and delivering a high quality customer experience every day. This code of ethics hangs on the wall of all Ross Video locations to guide our behavior:

1. We will always act in our customers' best interest.
2. We will do our best to understand our customers' requirements.
3. We will not ship crap.
4. We will be great to work with.
5. We will do something extra for our customers, as an apology, when something big goes wrong and it's our fault.
6. We will keep our promises.
7. We will treat the competition with respect.
8. We will cooperate with and help other friendly companies.
9. We will go above and beyond in times of crisis. *If there's no one to authorize the required action in times of company or customer crisis - do what you know in your heart is right. (You may rent helicopters if necessary.)*

OSG-8971 · User Guide

- Ross Part Number: **8971DR-004-01**
- Revision: 4
- Release Date: October 14, 2025
- Software Version: **v2.1**

The information contained in this Guide is subject to change without notice or obligation.

Copyright

©2025 Ross Video Limited, Ross®, and any related marks are trademarks or registered trademarks of Ross Video Limited. All other trademarks are the property of their respective companies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Ross Video. While every precaution has been taken in the preparation of this document, Ross Video assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Patents

Patent numbers US 7,034,886; US 7,508,455; US 7,602,446; US 7,802,802 B2; US 7,834,886; US 7,914,332; US 8,307,284; US 8,407,374 B2; US 8,499,019 B2; US 8,519,949 B2; US 8,743,292 B2; GB 2,419,119 B; GB 2,447,380 B; and other patents pending.

Notices

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as commitment by Ross Video Limited. Ross Video Limited assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

Note: As required by the GNU General Public License, and the Lesser GNU Public License (LGPL), source code can be obtained from Ross Video for at least 3 years. Contact Ross Video Technical Support for more information. If you have any questions or comments regarding this License Agreement, please contact:

Ross Video Limited
8 John Street
P.O. Box 220
Iroquois, ON
Canada K0E 1K0
techsupport@rossvideo.com

Safety Notices

Refer to the **“Important Regulatory and Safety Notices”** document that accompanied your product.

Statement of Compliance

This product has been determined to be compliant with the applicable standards, regulations, and directives for the countries where the product is marketed.

Compliance documentation, such as certification or Declaration of Compliance for the product is available upon request by contacting techsupport@rossvideo.com. Please include the product; model number identifiers and serial number and country that compliance information is needed in request.

EMC Notices

US FCC Part 15

This equipment has been tested and found to comply with the limits for a class A Digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a Commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



Notice — *Changes or modifications to this equipment not expressly approved by Ross Video Ltd. could void the user's authority to operate this equipment.*

Canada

This Class "A" digital apparatus complies with Canadian ICES-003 and part 15 of the FCC Rules.
Cet appareil numérique de la classe "A" est conforme à la norme NMB-003 du Canada.

European Union

This equipment is in compliance with the essential requirements and other relevant provisions established under regulation (EC) No 765/2008 and Decision No 768/2008/EC referred to as the "New Legislative Framework".



Warning — *This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.*

Australia/New Zealand

This equipment is in compliance with the provisions established under the Radiocommunications Act 1992 and Radiocommunications Labeling (Electromagnetic Compatibility) Notice 2008.

Korea

This equipment is in compliance with the provisions established under the Radio Waves Act.

Class A equipment (Broadcasting and communications service for business use)

This device is a business-use (Class A) EMC-compliant device. The seller and user are advised to be aware of this fact. This device is intended for use in areas outside home.

Type of Equipment	User's Guide
A급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.
Class A Equipment (Industrial Broadcasting & Communication Equipment)	This equipment is Industrial (Class A) electromagnetic wave suitability equipment and seller or user should take notice of it, and this equipment is to be used in the places except for home.

International

This equipment has been tested under the requirements of CISPR 22:2008 or CISPR 32:2015 and found to comply with the limits for a Class A Digital device.



Notice — *This is a Class A product. In domestic environments, this product may cause radio interference, in which case the user may have to take adequate measures.*

Maintenance/User Serviceable Parts

Routine maintenance to this openGear product is not required. This product contains no user serviceable parts. If the module does not appear to be working properly, please contact Technical Support using the numbers listed in “**Contact Us**” of this manual. All openGear products are covered by a generous 5-year warranty and will be repaired without charge for materials or labor within this period. See the “**Warranty and Repair Policy**” section in this manual for details.

Environmental Information

The equipment may contain hazardous substances that could impact health and the environment.

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.



If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration. You can also contact Ross Video for more information on the environmental performances of our products.

Security and Privacy

If you would like more information on how Ross Video security and privacy practices have been applied to the OSG-8971, what you should know about maintaining security of this product, and how we can partner with you to ensure security throughout this product's life-cycle, contact techsupport@rossvideo.com.

Ross Video has implemented reasonable administrative, technical, and physical safeguards to help protect against security incidents and privacy breaches involving a Ross Video product provided those products are used in accordance with Ross Video instructions for use. However, as systems and threats evolve, no system can be protected against all vulnerabilities and we consider our customers the most important partner in maintaining security and privacy safeguards. If you have any concerns, we ask that you bring them to our attention, and we will investigate. Where appropriate, we will address the issue with product changes, technical bulletins and/or responsible disclosures to customers and regulators. Ross Video continuously strives to improve security and privacy throughout the product life-cycle using practices such as:

- Privacy and Security by Design
- Product and Supplier Risk Assessment
- Vulnerability and Patch Management
- Secure Coding Practices and Analysis
- Vulnerability Scanning
- Access Controls appropriate to Customer Data
- Incident Response
- Clear paths for two-way communication between customers and Ross Video

If you would like to report a potential product related privacy or security issue (incident, breach, or vulnerability), contact techsupport@rossvideo.com.

Company Address



Ross Video Limited

8 John Street
Iroquois, Ontario
Canada, K0E 1K0

Ross Video Incorporated

P.O. Box 880
Ogdensburg, New York
USA 13669-0880

General Business Office: (+1) 613 • 652 • 4886

Fax: (+1) 613 • 652 • 4425

Technical Support: (+1) 613 • 652 • 4886

After Hours Emergency: (+1) 613 • 349 • 0006

E-mail (Technical Support): techsupport@rossvideo.com

E-mail (General Information): solutions@rossvideo.com

Website: <http://www.rossvideo.com>

Contents

Introduction	11
Related Publications	11
Documentation Conventions	12
Interface Elements	12
User Entered Text	12
Referenced Guides	12
Menu Sequences	12
Important Instructions	12
Contacting Ross Video Technical Support	12
Before You Begin	13
Overview	13
SDI to SRT Workflow	13
SRT to SDI Workflow	13
Features	14
Support for H.264 Media Compression	14
Support for H.265 Media Compression	14
DashBoard Interfaces	15
SNMP Monitoring and Control	15
Installation Overview	15
General Configuration Overview	15
Define the Network Settings for the OSG-8971	15
Assign a Function to Each SDI	16
Configure the Decoder Channels	16
Configure the Encoder Channels	16
Integration Examples	17
Encoding an SDI Input to an SRT Output	17
Decoding an SRT Input to an SDI Output	18
Setup with Multiple Channels	19
Workflows and UHD Mode	20
Encoding Two Channels of UHD	20
Decoding Two Channels of UHD	21
Hardware Overview	23
Overview	23
Main PCB Overview	23
Supported Rear Module	24
UHD Mode Configurations	25
UHD Mode is Disabled on SDI 1 and 2	25
UHD Mode is Enabled on SDI 1 Only	25
UHD Mode is Enabled on SDI 2 Only	26
UHD Mode is Enabled on SDI 1 and 2	26
Physical Installation	27
Before You Begin	27
Removing the Blank Plates from the Rear Panel	27
Installing the Rear Module into the openGear Frame	28
Installing the OSG-8971 into an openGear Frame	28

Cabling	29
Cabling the Ethernet Port on the openGear Frame	29
Cabling the MEDIA Port on the Rear Module	29
Cabling the SDI BNCs on the Rear Module	30
Getting Started	31
Before You Begin	31
Launching DashBoard	31
Configuring the Initial Network Settings	31
Accessing the OSG-8971 Interfaces in DashBoard	32
Security Configuration	34
Editing the Network Settings	35
Before You Begin	35
Configure the MEDIA Port of the OSG-8971	35
Changing the Network Settings of the OSG-8971	36
Licensed Features	37
License Keys Overview	37
Installing a License Key	37
Disabling a License Key	37
Reference Setup	39
Frame Rate Compatibility	39
Specifying a Global Analog Reference Source	40
Monitoring the Reference Signal via DashBoard	41
Configuring the Time Source	41
I/O Configuration	43
Default I/O Settings	43
Enabling UHD Mode for SDI 1 and/or SDI 2	43
Assigning a Function to an SDI	44
Decoding Setup	45
Overview	45
Defining the Network Streams for Decoding	45
Assigning an SRT Stream to a Decode Channel	46
Decoding an SRT Stream	48
Encoding Setup	51
Overview	51
Defining the Transport Stream for Encoding	51
Adjusting the Video Settings	52
Embedded Audio Setup	53
Encoding an SRT Stream	54
Mapping the Decoded Key/Fill	57
Before You Begin	57
Mapping the SDI I/O	57

Upgrading the Software	59
DashBoard Interface Overview	61
Global Interface	61
Signal Tab	61
Product Tab	63
Hardware Tab	64
Setup Tab	65
Network Tab	66
Global Alarm Enables Tab	69
Security Tab	70
Configure Licenses Tab	71
Logging Tab	71
OSG-8971 Interface	71
Decode Tab	71
Encode Tab	78
Technical Specifications	87
Supported Rear Modules	87
Supported Video Formats	87
SDI Specifications	88
MEDIA Port Specifications	89
Environment	89
Power	89
Service Information	91
Reloading the Software on the Card	91
Warranty and Repair Policy	91
Software Licenses	93
BSD	93
Dual GPL	93
GPL	93
LGPL	97
MIT	98
zlib	98
Glossary	99

Introduction

This guide covers the installation, configuration, and use of the openGear OSG-8971. The following chapters are included:

- **“Introduction”** summarizes the guide and provides important terms, and conventions.
- **“Before You Begin”** summarizes the features of the OSG-8971, and provides overviews of the installation, configuration, and workflow of the OSG-8971.
- **“Integration Examples”** provides simplified integration examples for an OSG-8971.
- **“Hardware Overview”** presents information on the features of the OSG-8971 card.
- **“Physical Installation”** provides additional information for installing the OSG-8971, and DashBoard before you can proceed to cabling and configuring your OSG-8971.
- **“Cabling”** outlines how to connect to your facility network, and peripheral devices.
- **“Getting Started”** provides instructions for launching DashBoard, and accessing the OSG-8971 interfaces in DashBoard.
- **“Editing the Network Settings”** outlines how to update the network settings assigned to the OSG-8971.
- **“Licensed Features”** outlines the available software licensed features, and how to install a software key for a licensed feature.
- **“Reference Setup”** provides instructions for specifying a reference source for the OSG-8971.
- **“I/O Configuration”** outlines how to assign a function (input or output) to an SDI port, and specify the output format.
- **“Decoding Setup”** outlines how to configure the OSG-8971 as a decoder for an SRT connection.
- **“Encoding Setup”** outlines how to configure the OSG-8971 as an SRT encoder.
- **“Upgrading the Software”** provides instructions on how to upgrade the OSG-8971 software via DashBoard.
- **“DashBoard Interface Overview”** summarizes the menus and parameters of the OSG-8971 tabs in DashBoard.
- **“Technical Specifications”** provides the specifications for the OSG-8971.
- **“Service Information”** provides information on the warranty and repair policy for your OSG-8971.
- **“Software Licenses”** provides third-party software license information for your OSG-8971.
- **“Glossary”** provides a list of terms used throughout this guide.

Related Publications

It is recommended to consult the following Ross documentation before installing and configuring your OSG-8971:

- ***DashBoard User Guide***, Ross Part Number: 8351DR-004
- ***MFC-OG3-N and MFC-8322-S User Guide***, Ross Part Number: 8322DR-004
- ***OGX-FR Series Quick Start Guide***, Ross Part Number: 8322DR-202
- ***OGX-FR Series User Guide***, Ross Part Number: 8322DR-204
- ***Streaming Gateway User Guide***, Ross Part Number: 3900DR-514

Documentation Conventions

Special text formats are used in this guide to identify parts of the user interface, text that a user must enter, or a sequence of menus and sub-menus that must be followed to reach a particular command.

Interface Elements

Bold text is used to identify a user interface element such as a dialog box, menu item, or button. For example:

In the **Network** tab, click **Apply**.

User Entered Text

Courier text is used to identify text that a user must enter. For example:

In the **Language** box, enter **English**.

Referenced Guides

Text set in bold and italic represent the titles of referenced guides, manuals, or documents. For example:

For more information, refer to the ***OGX-FR Series User Guide***.

Menu Sequences

Menu arrows are used in procedures to identify a sequence of menu items that you must follow. For example, if a step reads "**File** > **Save As**," you would click the **File** menu and then click **Save As**.

Important Instructions

Star icons are used to identify important instructions or features. For example:

- ★ Contact your IT department before connecting to your facility network to ensure that there are no conflicts.

Contacting Ross Video Technical Support

At Ross Video, we take pride in the quality of our products, but if problems occur, help is as close as the nearest telephone.

Our 24-hour Hot Line service ensures you have access to technical expertise around the clock. After-sales service and technical support is provided directly by Ross Video personnel. During business hours (Eastern Time), technical support personnel are available by telephone. After hours and on weekends, a direct emergency technical support phone line is available. If the technical support person who is on call does not answer this line immediately, a voice message can be left and the call will be returned shortly. This team of highly trained staff is available to react to any problem and to do whatever is necessary to ensure customer satisfaction.

- **Toll Free Technical Support (North America):** 1-844-652-0645
- **Toll Free Technical Support (International):** +800 1005 0100
- **Technical Support:** (+1)613-652-4886
- **After Hours Emergency:** (+1) 613-349-0006
- **E-mail:** techsupport@rossvideo.com
- **Website:** <http://www.rossvideo.com>

Before You Begin

If you have questions pertaining to the operation of the OSG-8971, contact us at the numbers listed in “**Contacting Ross Video Technical Support**”.

Overview

The OSG-8971 is a solution for remote contribution and remote broadcast operation applications requiring the ability to transport the latest SDI technology such as HDR and UHD reliably over a public network. Its modular design allows it to scale to meet the need of any applications. The OSG-8971 can bridge media at high density between remote sites and your production facility with up to 20 x 2160p or 60 x 1080p video per openGear frame.

The OSG-8971 supports the Secure Reliable Transport (SRT) protocol to detect and correct for packet losses when used on lossy networks such as the public Internet. SRT diagnostic tools are provided to ease tuning of the link, help troubleshoot network reliability-related problems, and detect latency that could affect reliability.

SDI to SRT Workflow

Figure 1 provides a general functional block diagram of the OSG-8971 where an SDI video signal (with embedded PCM audio) is received by an SDI port and is converted to an H.264 SRT output.

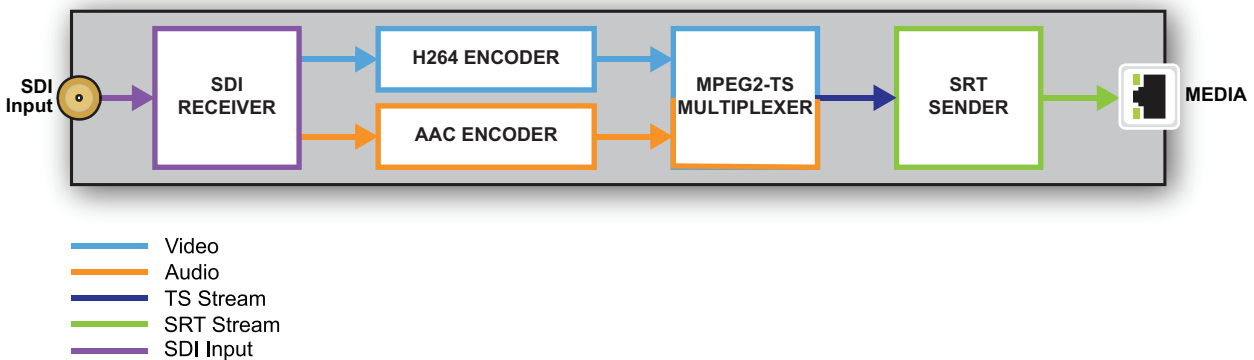


Figure 1 Functional Block Diagram — SDI Input to H.264 SRT Output

SRT to SDI Workflow

Figure 2 provides a general functional block diagram of the OSG-8971 where an H.264 SRT stream is the source and is decoded to an SDI video signal (with embedded PCM audio) for an SDI output.

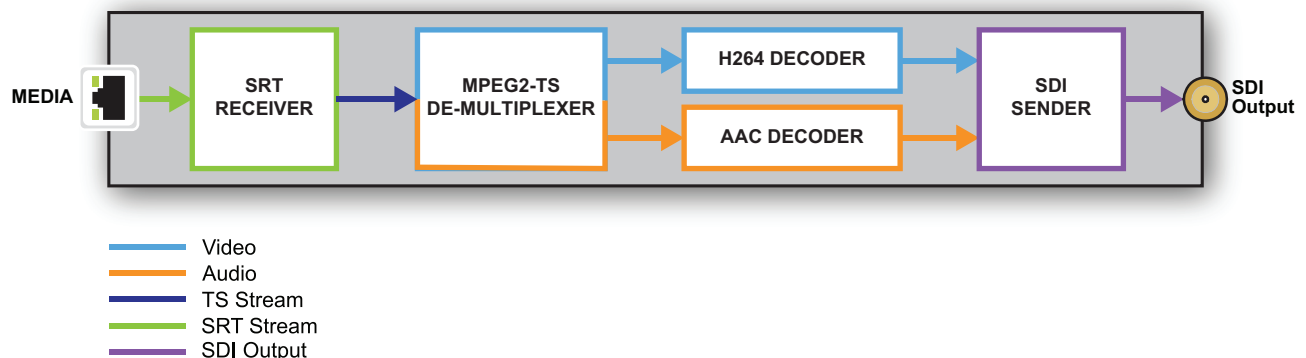


Figure 2 Functional Block Diagram — H.264 SRT Input to an SDI Output

Features

The OSG-8971 includes the following features:

- Transports media reliably over a public network through support with SRT
- Synchronizes media with your facility using a built-in frame sync
- Uses high-efficiency H.265/H.264 codecs with UHD¹ support
- Supports up to 16 channels of AAC per video stream (OSG-8971-A16-LICENSE required)
- Support for the following Chroma/Bit Depth:
 - › H.264: 4:2:0, 8bit
 - › H.265: 4:2:0, 8bit and 4:2:0, 10bit
- Accepts a Genlock from any of the two openGear frame reference signals to synchronize the decoded outputs
- Supports MPEG-TS presentation timestamp insertion and decode to automatically compensate for network delay at the receiver
- Supports the following SRT profiles:
 - › H.264: Baseline, Main, and High
 - › H.265: Main and Main10
- Supports presentation timestamp and NTP to allow stream re-alignment
- Each card provides up to:
 - › 6 x 1080p connections; or
 - › 3 x 1080p connections plus 1 x 2160p connection (OSG-8971-UHD-LICENSE required); or
 - › 2 x 2160p connections (OSG-8971-UHD-LICENSE required)
- Reports status and configuration remotely via DashBoard
- Fully compliant with openGear specifications
- 5-year transferable warranty

Support for H.264 Media Compression

The OSG-8971 supports up to:

- 6 x H.264, encode, decode, or a mix in HD/3G at a bit-rate up to 60Mbps.
- 2 x UHD¹ encode, decode, or mix at bit-rates up to 100Mbps.

You can select between Baseline, Main, and High profile as well as selecting GOP size and maximum bit-rate to optimize for the available bandwidth.

Support for H.265 Media Compression

The OSG-8971 supports up to:

- 6 x H.265, encode, decode, or a mix in HD/3G at a bit-rate up to 60Mbps.
- 2 x UHD¹ encode, decode, or mix at bit-rates up to 100Mbps.

You can select a profile as well as selecting GOP size and maximum bit-rate to optimize for the available bandwidth.

1. UHD support requires an OSG-8971+UHD license.

DashBoard Interfaces

The OSG-8971 requires an Ethernet network connection between it and a computer that will run the DashBoard client. The OSG-8971 includes DashBoard interfaces for configuration, and operation. These interfaces are accessed by expanding the OSG-8971 node in the DashBoard Tree View and selecting the appropriate sub-node to display the menus and options in the DashBoard window.

For More Information on...

- the OSG-8971 DashBoard interfaces, refer to “**DashBoard Interface Overview**”.

SNMP Monitoring and Control

The Network Controller Card in the openGear frame can provide optional support for remote monitoring of your frame and using Simple Network Management Protocol (SNMP), which is compatible with many third-party monitoring and control tools.

For More Information on...

- enabling SNMP Monitoring and Control for your frame, refer to the **MFC-OG3-N and MFC-8322-S User Guide**.
- SNMP controls for the OSG-8971, refer to your OSG-8971 Management Information Base (MIB).

Installation Overview

The user needs to ensure the following tasks are performed:

1. Install the OSG-8971 rear module and card in the openGear frame. Refer to “**Physical Installation**”.
2. Cable each Ethernet connection on the rear module. Refer to “**Cabling the MEDIA Port on the Rear Module**”.
3. Cable the SDI I/O as required. Refer to “**Cabling the SDI BNCs on the Rear Module**”.

General Configuration Overview

Figure 3 provides a generalized workflow of configuring your OSG-8971.

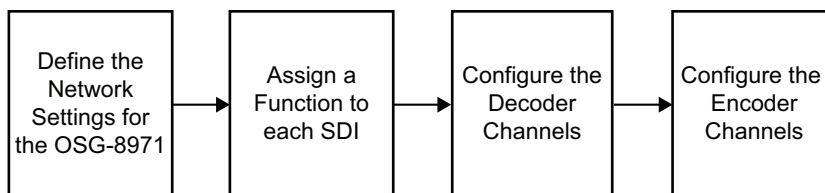


Figure 3 Configuration Workflow

Define the Network Settings for the OSG-8971

The OSG-8971 connects to your facility network via the Network Controller Card installed in the same openGear frame. This enables the OSG-8971 to communicate with a computer running the latest DashBoard client software.

The OSG-8971 rear module provides one 1GbE (MEDIA) port that can be configured for media traffic.

For More Information on...

- configuring the initial network settings, refer to “**Configuring the Initial Network Settings**”.

- the OSG-8971 in DashBoard, refer to **“Accessing the OSG-8971 Interfaces in DashBoard”**.

Assign a Function to Each SDI

Each of the six BNCs on the rear module can be assigned as an SDI input or SDI output. If the OSG-8971+UHD license is enabled, SDI 1 and/or SDI 2 can support 2160p 50Hz and 2160p 59.94Hz formats. Refer to **“Assigning a Function to an SDI”**.

Configure the Decoder Channels

Configuring the decoder channels requires you to specify the network connection (via the MEDIA port on the rear module) that will provide the SRT stream, map the stream to a specific decoder channel, and then set the corresponding SDI to Output. Refer to **“Decoding Setup”**.

Configure the Encoder Channels

The number of encoder channels is determined by the number of SDIs that are configured as Inputs (for example, SDI 1 is tied to Encoder Channel 1, SDI 2 is tied to Encoder Channel 2, etc). Configuring an encoder channel requires you to set the corresponding SDI to Input, specify the network connection to output the SRT stream (via the MEDIA port on the rear module), and start the encoding process for that channel. Refer to **“Encoding Setup”**.

Integration Examples

This chapter provides five simplified integration examples. Note that your needs may differ from what is presented here.

Encoding an SDI Input to an SRT Output

Figure 4 illustrates a workflow where the OSG-8971 encodes a single SDI input and assigns it to one H.264 stream over SRT on a private network.

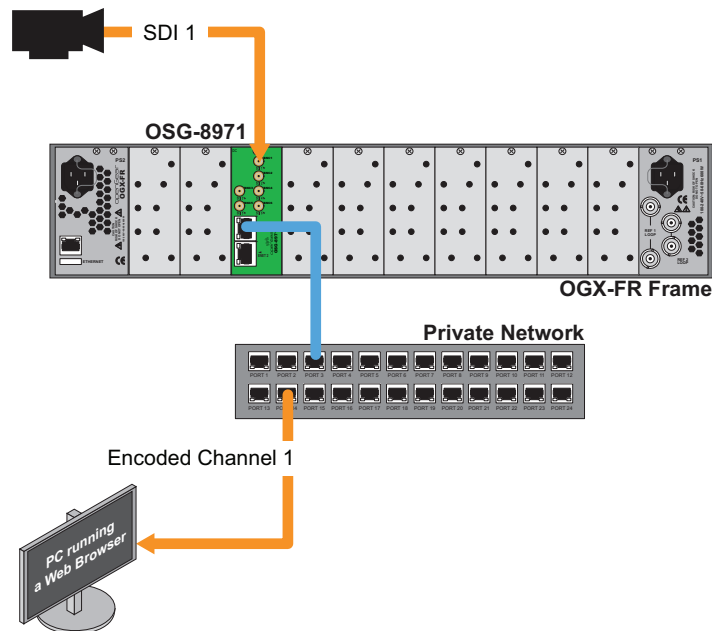


Figure 4 Workflow — One SDI Input to One H.264 SRT Stream

This setup would require you to:

1. Connect SDI 1 to an SDI source. Refer to **“Cabling the SDI BNCs on the Rear Module”**.
2. Connect the OSG-8971 to your network. Refer to **“Cabling the MEDIA Port on the Rear Module”** and **“Configuring the Initial Network Settings”**.
3. Set the SDI 1 Encode/Decode mode to Input. Refer to **“Assigning a Function to an SDI”**.
4. Configure Encode Channel 1 to transmit to an SRT peer. Refer to **“Defining the Transport Stream for Encoding”**.
5. Start the encoder channel. Refer to **“To encode an SDI signal to an SRT stream”**.

Decoding an SRT Input to an SDI Output

Figure 5 illustrates a workflow where the OSG-8971 decodes a single H.264 SRT stream and assigns it to one SDI output.

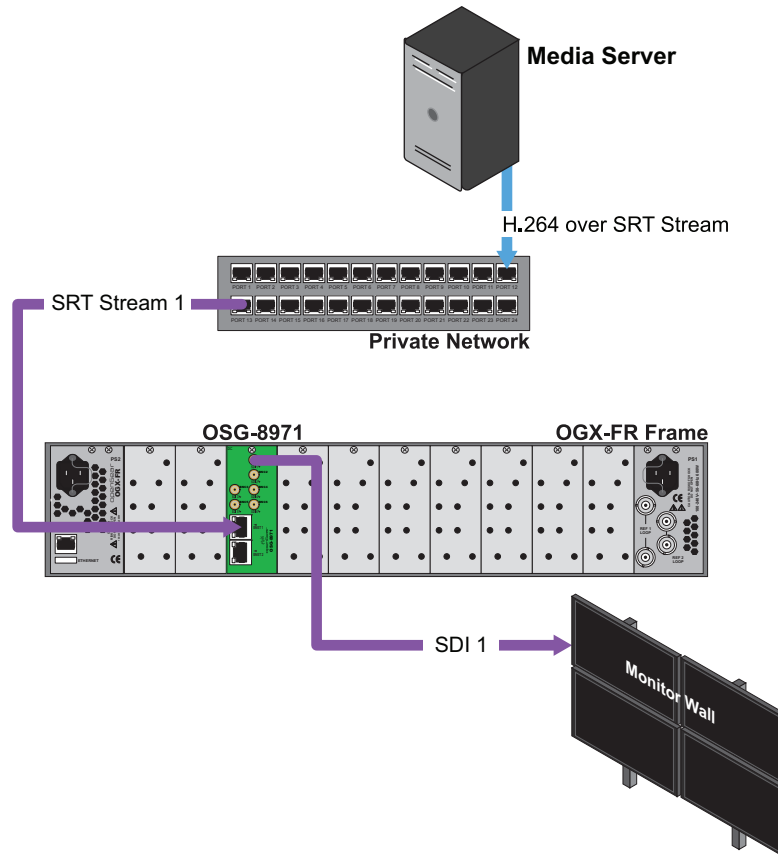


Figure 5 Workflow — One H.264 SRT Stream to One SDI Output

This setup requires you to:

1. Connect SDI 1 to a downstream device. Refer to **“Cabling the SDI BNCs on the Rear Module”**.
2. Connect the OSG-8971 to your network. Refer to **“Cabling the MEDIA Port on the Rear Module”** and **“Configuring the Initial Network Settings”**.
3. Set the SDI 1 Encode/Decode mode to Output. Refer to **“Assigning a Function to an SDI”**.
4. Configure Decode Channel 1 to receive from an SRT peer. Refer to **“Assigning an SRT Stream to a Decode Channel”**.

Setup with Multiple Channels

You can configure independent streams for encoding and decoding. **Figure 6** illustrates a workflow with multiple channels. This example includes: two SDI inputs that are encoded and assigned to two independent streams, and two SRT streams that are decoded and assigned to two independent SDI outputs.

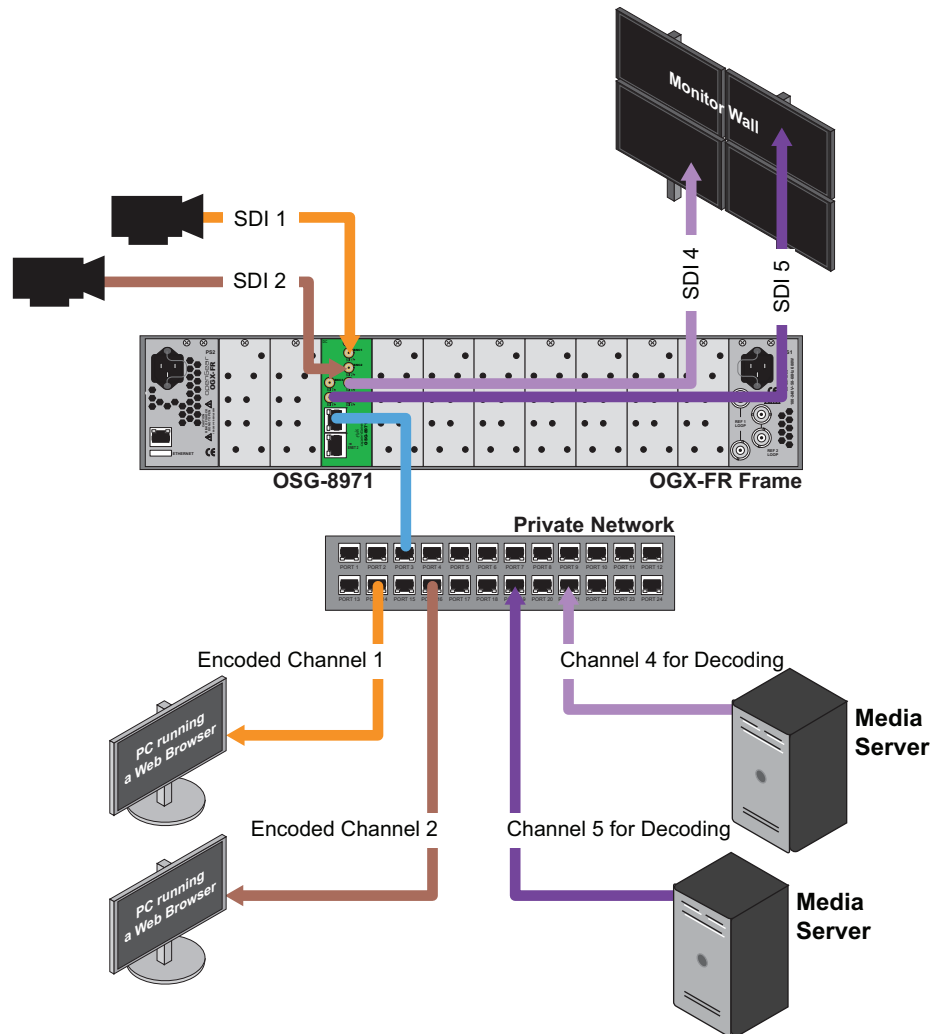


Figure 6 Workflow — Multiple Channel Setup

To configure the encoder channels

1. Connect SDI 1 to an SDI source. Refer to **“Cabling the SDI BNCs on the Rear Module”**.
2. Connect SDI 2 to an SDI source. Refer to **“Cabling the SDI BNCs on the Rear Module”**.
3. Connect the OSG-8971 to your network. Refer to **“Cabling the MEDIA Port on the Rear Module”** and **“Configuring the Initial Network Settings”**.
4. To configure Encoder Channel 1:
 - a. Set the SDI 1 Encode/Decode mode to Input. Refer to **“Assigning a Function to an SDI”**.
 - b. Configure Encode Channel 1 to transmit to an SRT peer. Refer to **“Defining the Transport Stream for Encoding”**.

5. To configure Encoder Channel 2:
 - a. Set the SDI 2 Encode/Decode mode to Input. Refer to **"Assigning a Function to an SDI"**.
 - b. Configure Encode Channel 2 to transmit to an SRT peer. Refer to **"Defining the Transport Stream for Encoding"**.
6. Start each encoder channel. Refer to **"To encode an SDI signal to an SRT stream"**.

To configure the decoder streams

1. Connect SDI 4 to a downstream device. Refer to **"Cabling the SDI BNCs on the Rear Module"**.
2. Connect SDI 5 to a downstream device. Refer to **"Cabling the SDI BNCs on the Rear Module"**.
3. To configure Decoder Channel 4:
 - a. Set the SDI 4 Encode/Decode mode to Output. Refer to **"Assigning a Function to an SDI"**.
 - b. Configure Decoder Channel 4 to receive from an SRT peer. Refer to **"Assigning an SRT Stream to a Decode Channel"**.
4. To configure Decoder Channel 5:
 - a. Set the SDI 5 Encode/Decode mode to Output. Refer to **"Assigning a Function to an SDI"**.
 - b. Configure Decoder Channel 5 to receive from an SRT peer. Refer to **"Assigning an SRT Stream to a Decode Channel"**.

Workflows and UHD Mode

The OSG-8971-UHD-LICENSE licensed feature enables support for 2160p video formats including 6G-SDI and 12G-SDI for a maximum of two channels (SDI 1, SDI 2).

★ UHD Mode applies to SDI 1 and/or SDI 2 only. Each signal path can be configured independently as required by your setup.

Encoding Two Channels of UHD

Figure 7 presents a workflow that encodes two channels of UHD.


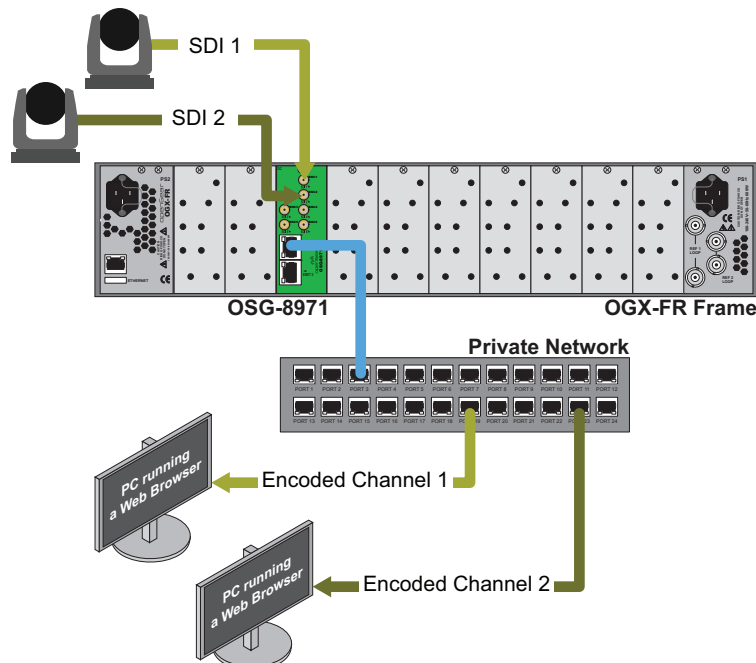


Figure 7 Workflow — Encoding Two Channels of UHD

To configure two UHD encoder channels

1. Install the OSG-8971-UHD-LICENSE. Refer to **“Installing a License Key”**.
2. Connect SDI 1 to an UHD source. Refer to **“Cabling the SDI BNCs on the Rear Module”**.
3. Connect SDI 2 to an UHD source. Refer to **“Cabling the SDI BNCs on the Rear Module”**.
4. Connect the OSG-8971 to your network. Refer to **“Cabling the MEDIA Port on the Rear Module”** and **“Configuring the Initial Network Settings”**.
5. Set the Encode/Decode mode to Input for SDI 1 and SDI 2. Refer to **“Assigning a Function to an SDI”**.
6. Enable the UHD Mode for SDI 1 and SDI 2. Refer to **“Enabling UHD Mode for SDI 1 and/or SDI 2”**.

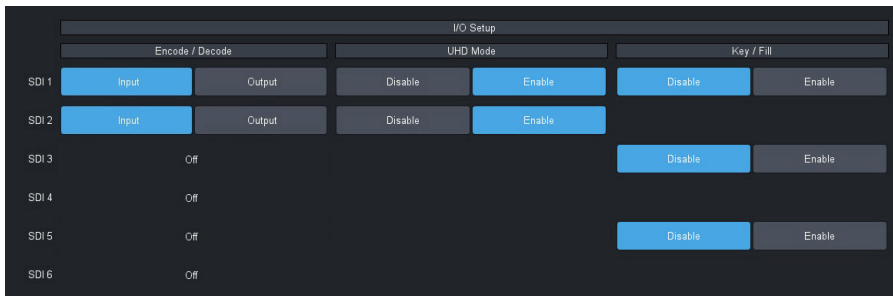

7. Configure Encode Channel 1 to transmit to an SRT peer. Refer to **“Defining the Transport Stream for Encoding”**.
8. Configure Encode Channel 2 to transmit to an SRT peer. Refer to **“Defining the Transport Stream for Encoding”**.
9. Start each encoder channel. Refer to **“To encode an SDI signal to an SRT stream”**.

Decoding Two Channels of UHD

Figure 8 presents a workflow that decodes two channels of UHD.


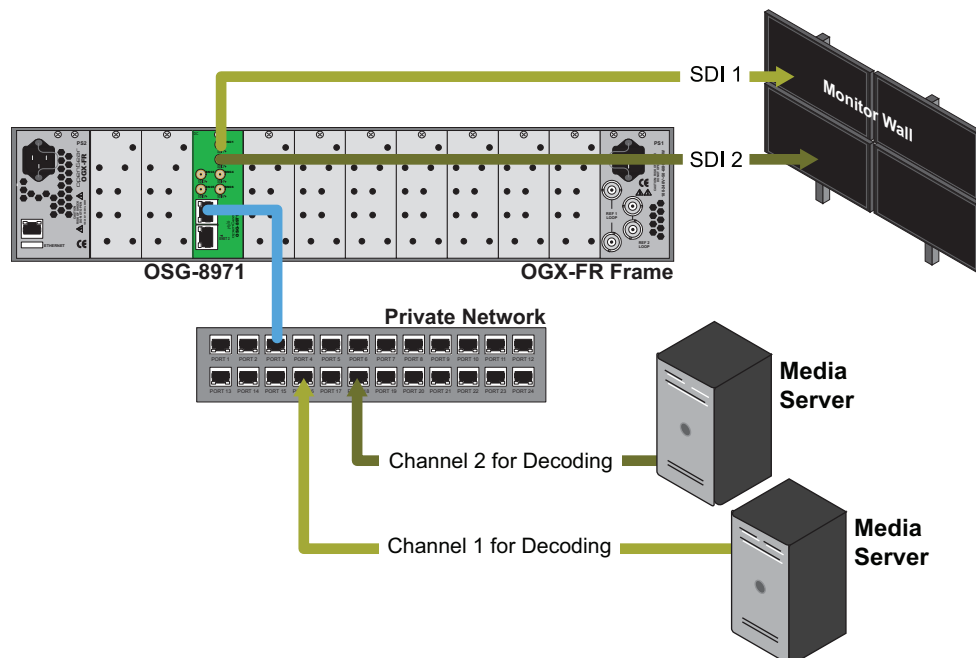


Figure 8 Workflow — Decoding Two SRT Streams of UHD

To configure two UHD decoder channels

1. Install the OSG-8971-UHD-LICENSE. Refer to **“Installing a License Key”**.
2. Connect SDI 1 to an UHD downstream device. Refer to **“Cabling the SDI BNCs on the Rear Module”**.
3. Connect SDI 2 to an UHD downstream device. Refer to **“Cabling the SDI BNCs on the Rear Module”**.
4. Connect the OSG-8971 to your network. Refer to **“Cabling the MEDIA Port on the Rear Module”** and **“Configuring the Initial Network Settings”**.
5. Set the Encode/Decode mode to Output for SDI 1 and SDI 2. Refer to **“Assigning a Function to an SDI”**.
6. Enable the UHD Mode for SDI 1 and SDI 2. Refer to **“Enabling UHD Mode for SDI 1 and/or SDI 2”**.

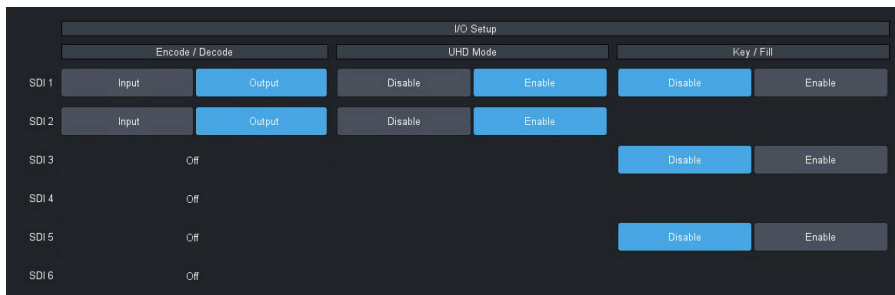

7. Configure Decoder Channel 1 to receive from an SRT peer. Refer to **“Assigning an SRT Stream to a Decode Channel”**.
8. Configure Decoder Channel 2 to receive from an SRT peer. Refer to **“Assigning an SRT Stream to a Decode Channel”**.

Hardware Overview

This chapter outlines the OSG-8971 card components, and the supported rear module.

Overview

The OSG-8971 is an openGear modular system composed of two sub-systems.

- a main PCB which connects to a rear module and the openGear frame midplane
- a rear module that provides physical connectors



Notice — *The OSG-8971 must be installed in a OGX-FR-CN or OGX-FR-CNS frame. It is not supported on -C frames using the MFC-8322-S controller card.*

Installing the OSG-8971 in a frame other than the OGX-FR could damage the card, the rear module, or both.

Main PCB Overview

The main PCB is a typical openGear card. An ejector on one end secures the card to the slot inside the openGear frame, and the other end inserts into a connector on the back of the rear module.

The front-edge of the main PCB includes LED indicators for power, and SDI signal status. A **Reset** button is also located near the front-edge by the card ejector. Pressing this button resets the microprocessor and re-initializes the card. This is a hard reset of the card. This action should only be before as advised by Ross Video Technical Support. **(Figure 9)**

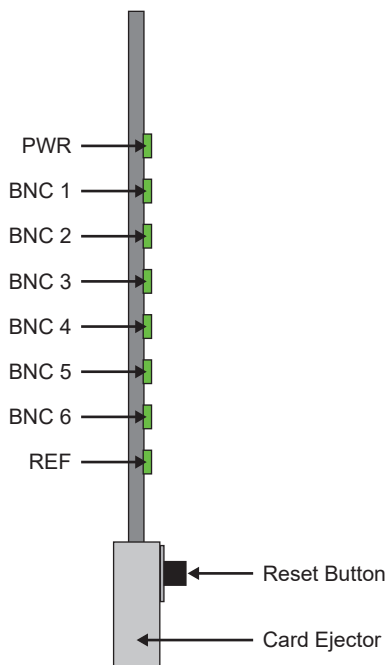


Figure 9 Card-edge Features

Table 1 provides information on the LED displays.

Table 1 OSG-8971 LED Descriptions

LED	Color	Description
PWR	Green	The card is powered on and is operating correctly
	Flashing	The card software is updating
	Red	When lit red, this LED indicates: • the card is booting, or • a major alarm condition is occurring on the card
	Off	The card is not powered on
BNC #	Green	A valid signal is detected on the SDI BNC
	Flashing Green/Red	A valid signal is detected on the SDI BNC, but the card is not locked to a reference signal
	Red	The signal connected to the SDI BNC is not valid
	Off	The SDI BNC is not in use
REF	Green	The reference signal is valid
	Red	The reference signal is invalid or not supported
	Off	The reference signal is not detected

Supported Rear Module

The OSG-8971 requires the R4-8971 (8322AR-331) rear module. This rear module occupies two slots and accommodates one card. (**Figure 10**) The following connections are available:

- 2 x 12G¹ bi-directional HD-BNCs (SDI 1, SDI 2 only)
- 4 x 3G bi-directional HD-BNCs
- 1 x 1GbE connector (MEDIA port)

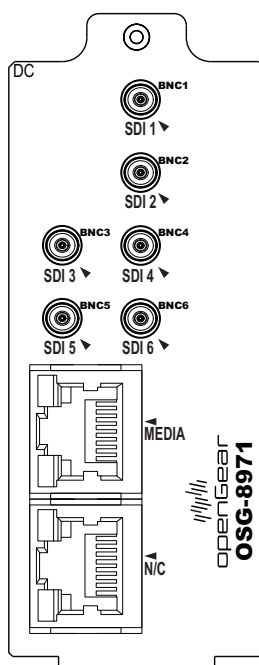


Figure 10 Cabling Designations — Overview

1. UHD support requires an OSG-8971+UHD license. If the license is not enabled, the ports support formats up to 3G.

UHD Mode Configurations

The OSG-8971+UHD license provides the ability to enable UHD Mode on SDI 1 and SDI 2 only. When UHD mode is enabled on one of these SDI, the number of available SDI channels is automatically impacted. This section outlines the SDI cabling when configuring UHD Mode on your card.

For More Information on...

- assigning the SDI as an input or output, refer to **“Assigning a Function to an SDI”**.
- enabling support for UHD formats, refer to **“Enabling UHD Mode for SDI 1 and/or SDI 2”**.

UHD Mode is Disabled on SDI 1 and 2

When UHD mode is disabled on SDI 1 and SDI 2, these ports are still available for 3G signals. SDI 3, 4, 5, and 6 are also available for 3G. (**Figure 11**)

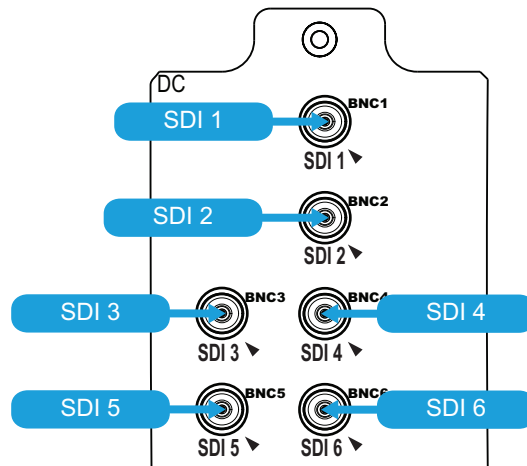


Figure 11 UHD Mode is Disabled on SDI 1 and 2

UHD Mode is Enabled on SDI 1 Only

When UHD mode is enabled on SDI 1 only, SDI 3 and 4 are automatically turned off. SDI 2, 5, and 6 are still available for 3G signals. (**Figure 12**)

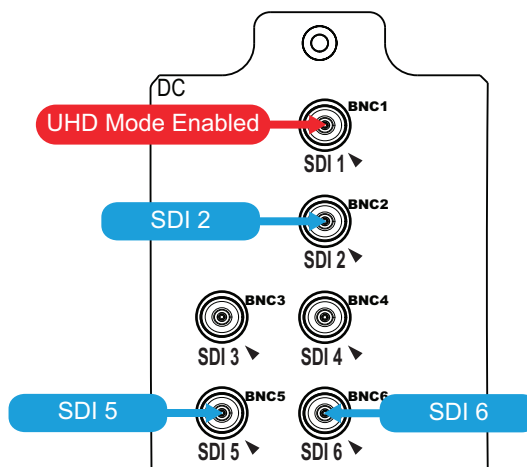


Figure 12 UHD Mode Enabled on SDI 1

UHD Mode is Enabled on SDI 2 Only

When UHD mode is enabled on SDI 2 only, SDI 5 and 6 are automatically turned off. SDI 1, 3, and 4 are still available for 3G signals. **(Figure 13)**

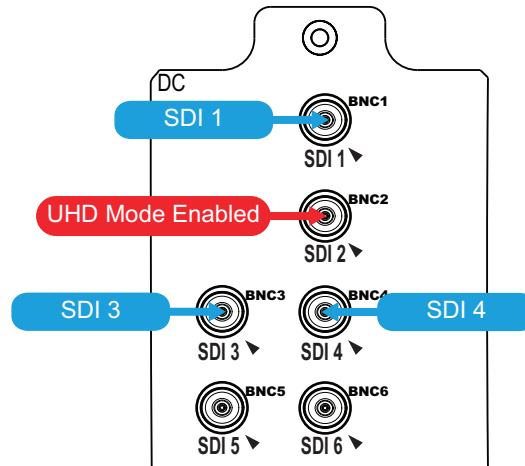


Figure 13 UHD Mode Enabled on SDI 2

UHD Mode is Enabled on SDI 1 and 2

When UHD mode is enabled on SDI 1 and 2, SDI 3, 4, 5, and 6 are automatically turned off. **(Figure 14)**

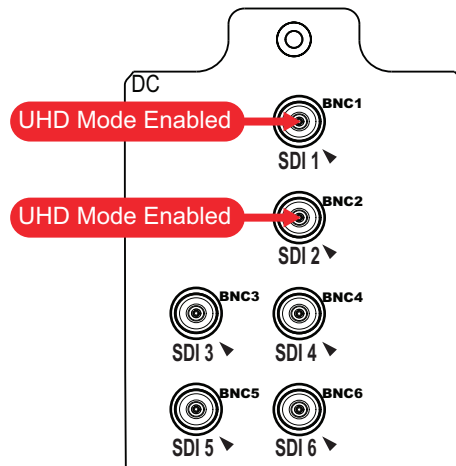


Figure 14 UHD Mode is Enabled on SDI 1 and 2

Physical Installation

This chapter how to install the OSG-8971 in your openGear frame before you can proceed to cabling and configuring your OSG-8971.

If you have questions about the installation of OSG-8971, contact us at the numbers listed in **“Contacting Ross Video Technical Support”**. Our technical staff is always available for consultation, training, or service.

For More Information on...

- the technical specifications for the OSG-8971, refer to **“Technical Specifications”**.

Before You Begin

Installing an OSG-8971 card into the openGear frame requires you to remove the blank plates in the designation frame slots, install the required rear module into the frame rear panel, and then install the OSG-8971 card into the required frame slot. If the rear module is already installed in the openGear frame, proceed to **“Installing the OSG-8971 into an openGear Frame”**.

These installation guidelines assume the following:

- The openGear frame is properly installed. Refer to the **User Guide** for your frame.
- A valid IP address is available for the OSG-8971.

Static Discharge

Throughout this chapter, please heed the following cautionary note:



ESD Susceptibility — *Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments such as carpeted areas and when synthetic fiber clothing is worn. Always exercise proper grounding precautions when working on circuit boards and related equipment.*

Removing the Blank Plates from the Rear Panel

When a frame slot is not populated with an openGear card, a blank plate must be installed to ensure proper frame cooling and ventilation.



Notice — *Installing the rear modules in a frame other than the OGX-FR could damage the card, the rear module, or both.*

To remove a blank plate from the openGear frame

1. Locate the slots in the openGear frame you wish to install the OSG-8971 into.

It is recommended to use the following slot combinations:

- Slots 1, 2
- Slots 3, 4
- Slots 5, 6
- Slots 7, 8
- Slots 9, 10
- Slots 11, 12
- Slots 13, 14
- Slots 15, 16
- Slots 17, 18
- Slots 19, 20

2. Use a Phillips screwdriver to unfasten each blank plate from the openGear frame backplane.
3. Remove each blank plate from the chassis and set aside.

Installing the Rear Module into the openGear Frame

If the rear module is already installed in the openGear frame, proceed to “**Installing the OSG-8971 into an openGear Frame**”.

To install a rear module into the openGear frame

1. For each retaining screw on the rear module, push the o-ring to the end of the screw (but not off the screw). This will help to align the rear module to the frame backplane in step 3.
 2. Seat the bottom of the rear module in the seating slots at the base of the frame's backplane.
 3. Align the top holes of the rear module with the screw holes on the top-edge of the frame backplane.
 4. Using a Phillips screwdriver and the provided screw, fasten the rear module to the backplane.
- ★ Do not fully tighten the screws until after installing the card and you have verified that the OSG-8971 card aligns with the rear module.

Installing the OSG-8971 into an openGear Frame

The slot the OSG-8971 installs into depends on the slot combination you installed the rear module in. This allows adequate spacing to avoid damaging the card, the cards installed in the neighboring slots, or both.

Refer to **Table 2** for valid slot combinations.

Table 2 Card Slot Combinations

Rear Module is Installed in	Card Installs into Slot
Slots 1, 2	1
Slots 3, 4	3
Slots 5, 6	5
Slots 7, 8	7
Slots 9, 10	9
Slots 11, 12	11
Slots 13, 14	13
Slots 15, 16	15
Slots 17, 18	17
Slots 19, 20	19

To install the OSG-8971 into an openGear frame

1. Locate the slot the OSG-8971 card will slide into. Refer to **Table 2**.
 2. Verify that the OSG-8971 card aligns with the rear module.
 3. Using a Phillips screwdriver fasten the rear module to the backplane using the provided screws.
- ★ Do not over tighten the screws.
4. Hold the card by the edges and carefully align the card edges with the slot rails in the frame.
 5. Fully insert the card into the frame until the card is properly seated in the rear module.

Cabling

This chapter outlines how to connect the OSG-8971 rear module to your facility network, and peripheral devices.

If you have questions about the installation of OSG-8971, contact us at the numbers listed in **“Contacting Ross Video Technical Support”**. Our technical staff is always available for consultation, training, or service.

Cabling the Ethernet Port on the openGear Frame

The Network Controller Card in the openGear frame is connected to your network via the Ethernet port on the frame chassis¹. The Network Controller card enables the OSG-8971 to interface with other cards in the frame, and the computer running the DashBoard client software. After a physical connection is established, DashBoard is used to configure the network settings for the OSG-8971.

Keep the following in mind:

- Contact your IT department before connecting to your facility network to ensure that there are no conflicts.
- The OSG-8971 requires the MFC-OG3-N or MFC-OGX-N Network Controller Card to be installed in the openGear frame. The MFC-8322-S does not support the OSG-8971.
- You must provide an ethernet connection to the openGear frame as outlined in the **OGX-FR Series User Guide**.

For More Information on...

- downloading and installing DashBoard, refer to the **DashBoard User Guide**.
 - configuring the ethernet port on the openGear frame, refer to the **OGX-FR Series User Guide**.
- ★ Contact your network administrator if you experience problems when connecting to a network hub.

Cabling the MEDIA Port on the Rear Module

The OSG-8971 provides one 1GbE connector (MEDIA) that is connected to your facility network. **(Figure 15)** The primary function of the MEDIA port is to provide a 1GbE network interface that can be configured as a Receiver and/or a Sender in DashBoard.

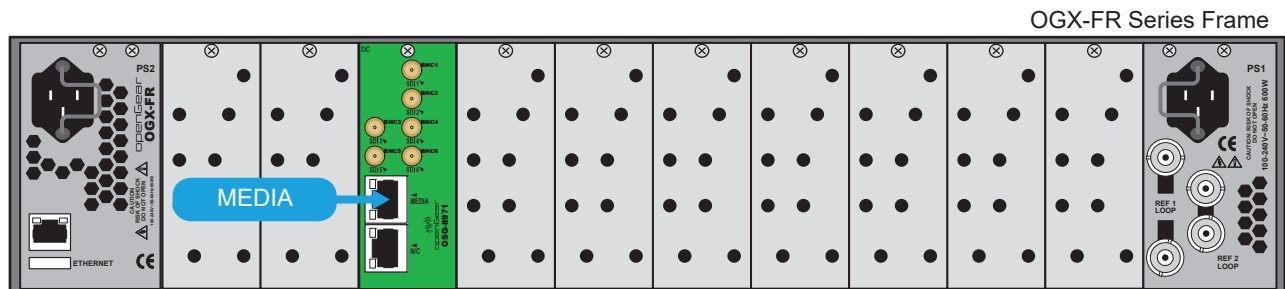


Figure 15 Location of MEDIA Port on the Rear Module

1. This port is labeled as the MEDIA port in the DashBoard interfaces.

Keep the following in mind when connecting the MEDIA port:

- ★ Contact your IT department before connecting to your facility network to ensure that there are no conflicts. They will provide you with an appropriate value for the IP Address, Subnet Mask, and Gateway for your device.
- ★ If difficulties or problems are experienced when connecting the OSG-8971 to a network hub, contact your network administrator.
- ★ The exact steps for connecting your OSG-8971 to your facility via an Ethernet network depend on the network requirements of your facility. Contact your IT department before connecting to your facility network to ensure that there are no conflicts.

Cabling the SDI BNCs on the Rear Module

The OSG-8971 provides six BNCs that can be connected to SDI sources or downstream devices.

Table 3 summarizes the cabling based on the supported SDI format.

Table 3 Rear Module Ports — Supported SDI Formats


Port	Supported Format			
	1.5G	3G	6G	12G ^a
SDI 1	✓	✓	✓	✓
SDI 2	✓	✓	✓	✓
SDI 3	✓	✓		
SDI 4	✓	✓		
SDI 5	✓	✓		
SDI 6	✓	✓		

a. Requires the OSG-8971-UHD-LICENSE. Refer to “Installing a License Key” for details.

To cable your SDI signals

1. Connect each SDI source device to a BNC.
2. Connect each downstream SDI device to a BNC.
3. Make a note of the BNC(s) you connected in steps 1 and 2.

This information is required when assigning a function (inputs/outputs) to the BNCs in DashBoard. Refer to “**I/O Configuration**”.

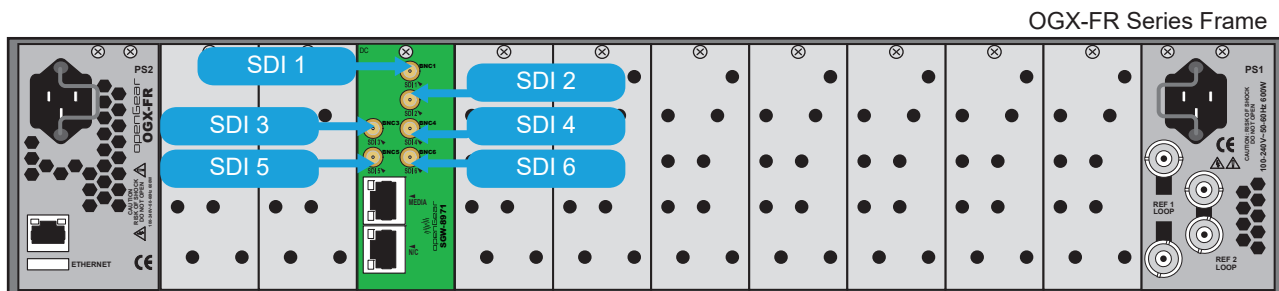

Getting Started

This chapter provides instructions for launching DashBoard, and accessing the OSG-8971 interfaces in DashBoard.

If you have questions about the operation of OSG-8971, contact us at the numbers listed in **“Contacting Ross Video Technical Support”**. Our technical staff is always available for consultation, training, or service.

Before You Begin

Ensure that:

- An MFC-OG3-N or MFC-OGX-N Network Controller Card is installed in your OGX-FR frame.
- The OGX-FR frame that houses the OSG-8971 displays in the Basic Tree View of DashBoard.
- The OSG-8971 displays as a sub-node in the OGX-FR frame tree.
- Your facility IT Department provided the required network settings to be assigned to the OSG-8971.

Launching DashBoard

DashBoard must run on a computer that has a physical wired ethernet connection. Wireless connections do not allow device discovery.

For More Information on...

- downloading and installing the DashBoard client software, refer to the ***DashBoard User Guide***.
- the OSG-8971 interfaces in DashBoard, refer to **“DashBoard Interface Overview”**.

To launch DashBoard

1. Ensure that you are running DashBoard software version 9.15 or higher.
2. Launch DashBoard by double-clicking its icon on your computer desktop.

Configuring the Initial Network Settings

Once the OSG-8971 is physically installed and cabled to your facility network, you will need to assign it an initial IP address in order to gain full access to the card menus, options, and status fields in DashBoard.

★ This procedure requires a reboot of the card.

To assign the initial network settings for the OSG-8971

1. Launch DashBoard.
2. Expand the OGX-FR frame node to display a list of cards installed in that frame.
3. Double-click the **OSG-8971** node under the frame node.

The **Network** interface displays in DashBoard.

4. Select the **Network** tab.
5. Use the **Mode** menu to select **Static**.

★ Ross Video recommends using a static IP address.


6. Use the **Static IP Address** field to assign a unique IP address to the OSG-8971 card.

7. Use the **Subnet Mask** field to assign the subnet mask for the card.
8. Use the **Gateway** field to specify the gateway for communications outside of the local area network (LAN) the card will use.
9. Click **Apply**.

The card is temporarily taken off-line during the reboot of the card to apply the new settings.

10. Verify the new network settings as follows:
 - a. Close the **Network** interface.
 - b. Refresh the Basic Tree View.
 - c. Expand the OGX-FR frame node to display a list of sub-nodes.
 - d. Verify that the OSG-8971 displays as a sub-node of the frame.

In the following example, Frame2 includes one OSG-8971 in Slot 5, and a second OSG-8971 in slot 7.

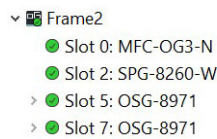

Accessing the OSG-8971 Interfaces in DashBoard

Once you establish the initial network settings for the OSG-8971, you can access the Global, and OSG-8971 interfaces. These interfaces provide options for configuring, monitoring, and operating your card in DashBoard.

To display the Global interface in DashBoard


1. Launch DashBoard.
2. In the Basic Tree View of DashBoard, locate the openGear frame the OSG-8971 is installed in.
3. Expand the openGear frame node to display a list of sub-nodes.

Each sub-node represents a specific card installed in a frame slot.

4. Locate the OSG-8971 sub-node.


★ Look for the slot number that corresponds to the physical frame slot the OSG-8971 is installed in.

5. Expand the OSG-8971 sub-node.

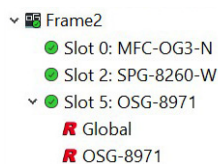

6. Double-click the **Global** sub-node.

The Global interface opens in the right pane of the DashBoard window. The tabs in the Global interface enable you to monitor the overall status of the OSG-8971 software and hardware, configure the network settings for ethernet communications, specify the I/O functions, and select a reference source.

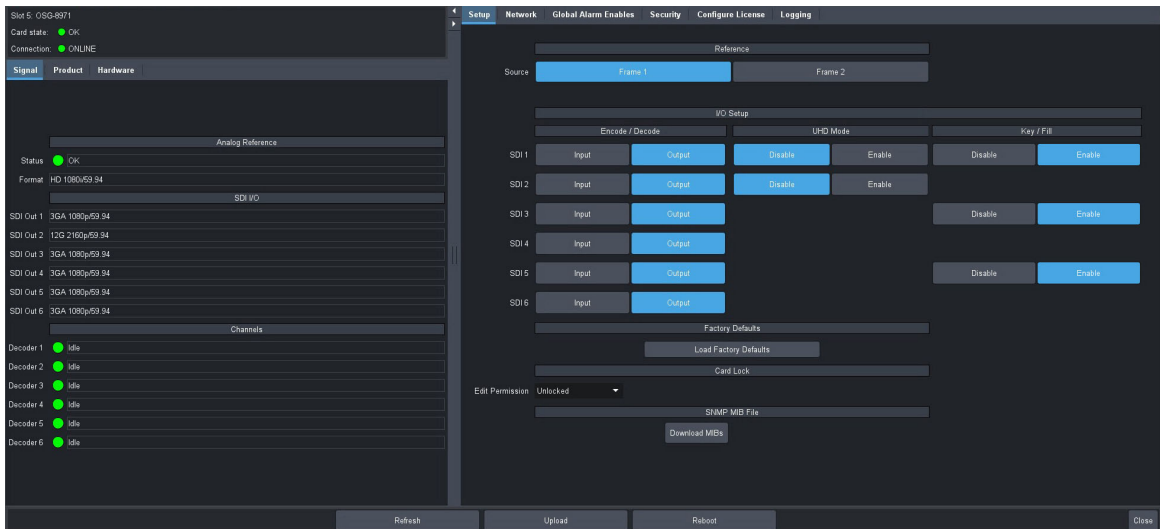


To display the OSG-8971 interface in DashBoard


1. Launch DashBoard.
2. In the Basic Tree View of DashBoard, locate the openGear frame the OSG-8971 is installed in.
3. Expand the openGear frame node to display a list of sub-nodes.
Each sub-node represents a specific card installed in a frame slot.
4. Locate the OSG-8971 node in the frame tree.
- ★ Look for the slot number that corresponds to the physical frame slot the OSG-8971 is installed in.
5. Expand the **OSG-8971** node to display a list of sub-nodes for the card.
6. Double-click the **OSG-8971** sub-node.

The OSG-8971 interface opens in the right pane of the DashBoard window. The tabs in the OSG-8971 interface depend on the encoder/decoder channels enabled on the card.

The following example shows the **Decode** tabs.

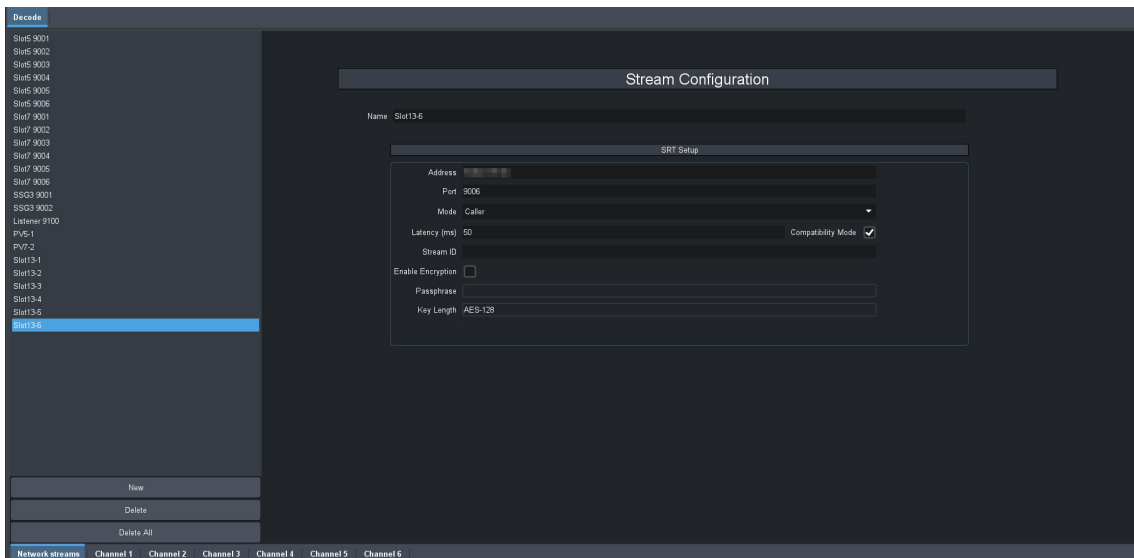

The following example shows the **Encode** tabs.

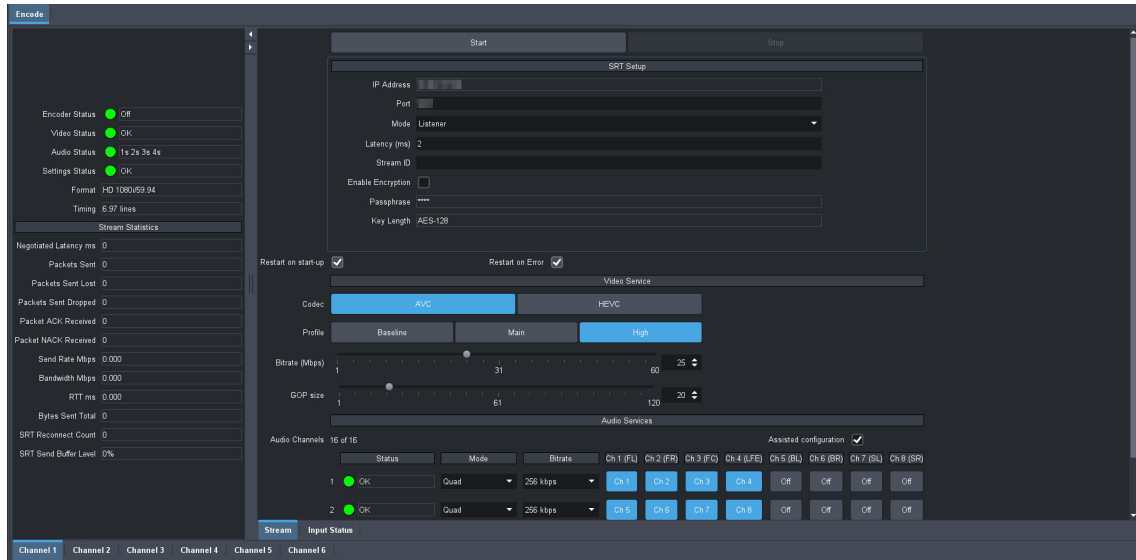

Security Configuration

The Global > Security tab provides the option to disable/enable Secure Shell (SSH) Login services. This is a client-server protocol used by system administrators to securely log onto remote systems and execute commands over an unsecured network. SSH may also be used by Technical Support for advanced troubleshooting. This service is disabled by default on the OSG-8971.

Editing the Network Settings

This chapter outlines how to update the network settings assigned to the OSG-8971.

- ★ If difficulties or problems are experienced when assigning IP addresses, contact your network administrator.

Before You Begin

Ensure that:

- The OGX-FR frame that houses the OSG-8971 displays in the Basic Tree View of DashBoard.
- An MFC-OG3-N or MFC-OGX-N Network Controller Card is installed in your OGX-FR frame.
- The OSG-8971 displays as a sub-node in the OGX-FR frame tree.
- Your facility IT Department provided the required settings to be assigned to the OSG-8971.

Network Scans and Probes



Caution — *Network scans and probes will result in the OSG-8971 requiring a power cycle.*

Ensure that any port scans, security scans or security probes are done during a service window. The OSG-8971 is not qualified for network and/or port scanners while in normal operation. After a scan, the OSG-8971 will require a power cycle.


Configure the MEDIA Port of the OSG-8971

The OSG-8971 provides an 1GbE connector (MEDIA) port. You are able to uniquely identify this MEDIA port on the network and control it via the DashBoard interface. This also allows the MEDIA port be available to for media traffic for the OSG-8971.

- ★ Ross Video recommends using a static IP address.

To update the network settings for the MEDIA port of the OSG-8971

1. Display the **Global** interface as outlined in “**To display the Global interface in DashBoard**”.
2. Select the **Network** tab.

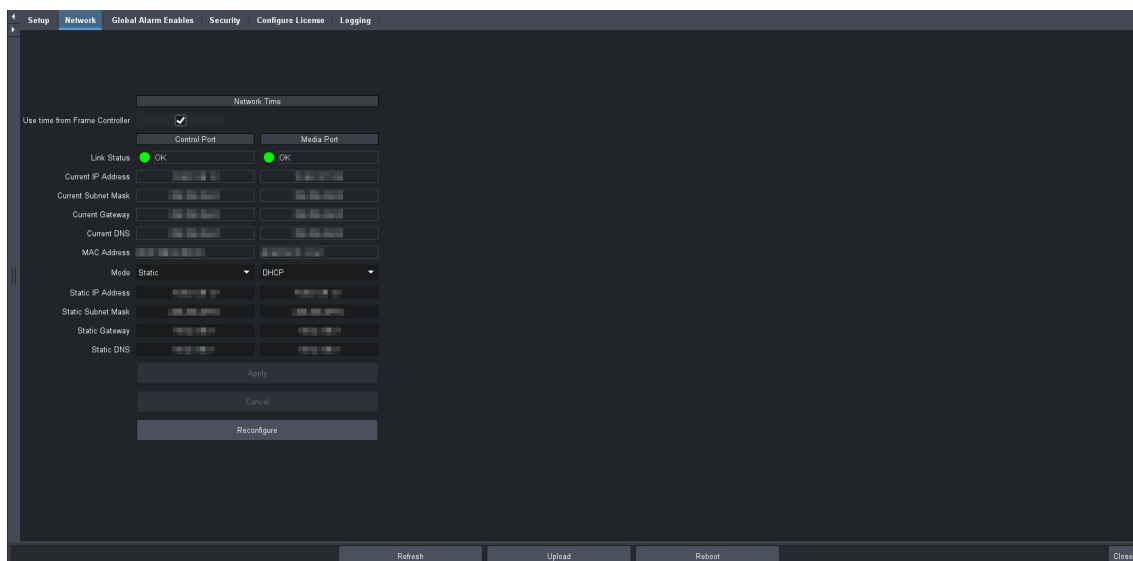

3. Locate the **Media Port** column.
 4. Use the **Mode** menu to select **Static**.
 5. Use the **Static IP Address** field to specify the new static IP Address for the OSG-8971. This is the address the card will use within the OGX-FR frame.
 6. Use the **Subnet** field to specify the subnet mask for your network.
 7. Use the **Static Gateway** field to specify the gateway for communications outside of the local area network (LAN) the card will use.
- ★ If you want the network settings to be automatically obtained, select **DHCP** from the **Mode** menu.
8. Click **Apply** to save the new settings.
- ★ The OSG-8971 card reboots automatically.

Changing the Network Settings of the OSG-8971

Once you have establish connection to the card, it is recommended to change the IP address from the default setting to one that was provided by your IT Department. This procedure is optional.

To update the network settings for the MEDIA port on the OSG-8971 rear module

1. Display the **Global** interface as outlined in “To display the Global interface in DashBoard”.
 2. Select the **Network** tab.
 3. Locate the **Control Port** column of the tab.
 4. Use the **Mode** menu to select **Static**.
 5. Use the **Static IP Address** field to specify the new static IP Address for the OSG-8971. This is the address the card will use within the OGX-FR frame.
 6. Use the **Subnet** field to specify the subnet mask for your network.
 7. Use the **Static Gateway** field to specify the gateway for communications outside of the local area network (LAN) the card will use.
- ★ If you want the network settings to be automatically obtained, select **DHCP** from the **Mode** menu.
8. Click **Apply** to save the new settings.
- ★ The OSG-8971 card reboots automatically.

Licensed Features

This chapter outlines the available software licensed features, and how to install a software key for a licensed feature.

License Keys Overview

Table 4 provides a brief summary on the types of licensed features available for the OSG-8971.

Table 4 *List of OSG-8971 Licensed Features*

License	Description
OSG-8971-UHD-LICENSE	Enables 2160p video formats including 12G-SDI
OSG-8971-A16-LICENSE	Enables 16 audio channels

Installing a License Key

Ross Video uses license keys to control user access to specific OSG-8971 features. You can obtain a key for a OSG-8971 licensed feature from Ross Video Technical Support.

To install a license key

1. Display the **Global** interface as outlined in “**To display the Global interface in DashBoard**”.
2. Select the **Configure Licenses** tab.
3. Make a note of the character string in the **Request Code** field for the feature you wish to enable.
4. Contact Ross Video using the information found in “**Contacting Ross Video Technical Support**”.
 - a. When you speak to your Technical Support representative, tell them your name, your facility name, and the **Request Code** from the **Configure Licenses** tab.
 - b. You will be given a License Key that must be entered in the applicable field in the **Licenses** table.
5. Enter the provided License Key in the applicable **Key** field in the **Configure Licenses** tab.
6. Click **Apply** in the row for the License Key you entered in step 5.

Disabling a License Key

Disabling a License Key removes user access to the OSG-8971 features associated with that License Key.

★ To re-enable the features, contact Ross Technical Support and request a new License Key.

To disable an OSG-8971 license key

1. Display the **Global** interface as outlined in “**To display the Global interface in DashBoard**”.
2. Select the **Configure Licenses** tab.
3. Click in the **Key** field for the licensed feature you want to disable.
4. Type **remove**.
5. Click **Apply**.

Reference Setup

This chapter provides instructions for specifying a reference source for the OSG-8971.

Frame Rate Compatibility

The card supports a number of reference modes for external reference signals. The card allows you to use any interlaced video format to operate the card in any format of the same frequency; however, the use of 480i or 576i (Composite Sync) reference signals for High Definition (720p, or 1080p) video modes is not recommended.

- ★ When using a progressive format reference signal to lock an interlaced format video signal, the lock will be Frame Locked but Field indeterminate.

Table 5 outlines the OSG-8971 frame rate compatibility.

Table 5 Output/Reference Compatibility

Card Format	Reference
HD-SDI Format	
720p 50Hz	576i 50Hz
	720p 50Hz
	1080i 50Hz
	1080p 50Hz
720p 59.94Hz	480i 59.94Hz
	720p 59.94Hz
	1080i 59.94Hz
	1080p 59.94Hz
1080i 50Hz	576i 50Hz
	720p 50Hz
	1080i 50Hz
	1080p 50Hz
	2160p 50Hz
1080i 59.94Hz	720p 59.94Hz
	1080i 59.94Hz
	1080p 59.94Hz
	2160p 59.94Hz
1080p 50Hz	576i 50Hz
	720p 50Hz
	1080i 50Hz
	1080p 50Hz

Table 5 Output/Reference Compatibility (Continued)

Card Format	Reference
1080p 59.94Hz	480i 59.94Hz
	720p 59.94Hz
	1080i 59.94Hz
	1080p 59.94Hz
12G-SDI Formats^a	
2160p 50Hz	576i 50Hz
	720p 50Hz
	1080i 50Hz
	1080p 50Hz
2160p 59.94Hz	480i 59.94Hz
	720p 59.94Hz
	1080i 59.94Hz
	1080p 59.94Hz

a.UHD Mode is only available for SDI 1 and SDI 2 and requires the OSG-8971+UHD license be enabled.

Specifying a Global Analog Reference Source


The OSG-8971 accepts a black-burst or tri-level Genlock reference signal via a **REF** port on the openGear frame. This signal is used to synchronize the SDI outputs of the OSG-8971.

★ The output video frame rate must match this reference frame rate.

To specify a global analog reference source for all outputs of the OSG-8971

1. Display the **Global** interface as outlined in “To display the Global interface in DashBoard”.

The **Setup** tab is automatically selected.

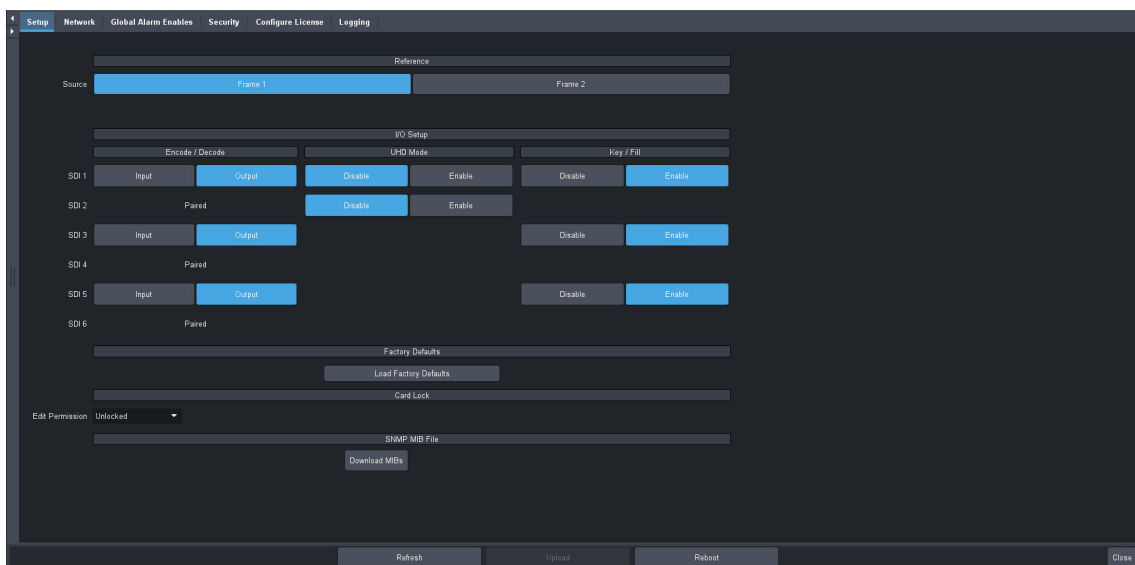

2. Use the **Reference Source** options to specify the source for the reference input signal. Choose from the following:
 - **Frame 1** — uses the source connected to the **REF 1** port on the openGear frame.
 - **Frame 2** — uses the source connected to the **REF 2** port on the openGear frame.
- ★ To lock properly, the reference frame rate and the video output frame rate should be in a ratio of 1:1 or 1:2.

Monitoring the Reference Signal via DashBoard

The status of the OSG-8971 may be monitored via its fields in DashBoard or the LEDs located on the front card-edge.

For More Information on...

- the card-edge LEDs, refer to “**Main PCB Overview**”.

To configure the reference alarm for the OSG-8971

1. Display the **Global** interface as outlined in “**To display the Global interface in DashBoard**”.
2. Select the **Global Alarm Enables** tab.
3. Select the **Reference Format** box to enable the following fields to report when a reference is not detected:
 - Global > Card state (located in the top left corner of the Global interface)
 - Global > Signal > Analog Reference Status

Configuring the Time Source

The Frame Network Controller card in the openGear frame can use an NTP server as a time source. The time data is then made available to any openGear card installed in the same frame. You must manually enable the OSG-8971 to access this time data by selecting an option on its Global > Network tab.

For More Information on...

- communicating with an NTP server, refer to the ***MFC-OG3-N and MFC-8322-S User Guide***.

To enable the OSG-8971 to access the time data from the Frame Network Controller card

1. Display the **Global** interface as outlined in “**To display the Global interface in DashBoard**”.
2. Select the **Network** tab.
3. Locate the **Network Time** area of the tab.
4. Select the **Use time from Frame Controller** box.
5. Click **Apply**.

To enable monitoring of the time data

1. From the **Global** interface, select the **Global Alarm Enables** tab.
2. Locate the **Network Alarm** area of the tab.
3. Select the **Network Time > Alarm Enable** box.

The **Network time** field will report the status of the time data.

I/O Configuration

This chapter outlines how to specify the function of an SDI BNC (input or output), and enable UHD Mode on eligible BNCs.

- ★ Before proceeding, ensure that you verified which SDI BNCs are cabled to sources or downstream devices. Refer to “**Cabling the SDI BNCs on the Rear Module**”.

Default I/O Settings

Table 6 outlines the default Encode/Decode and UHD Mode settings for each SDI BNC on the rear module. These settings can be edited as outlined in “**To assign a function to an SDI**” and “**To enable UHD mode**”.

Table 6 I/O Setup — Default Settings

SDI	Encode/Decode	UHD Mode ^a
1	Input	Disable
2	Input	Disable
3	Input	--
4	Input	--
5	Input	--
6	Input	--

a. Requires the OSG-8971-UHD-LICENSE.

Enabling UHD Mode for SDI 1 and/or SDI 2

The OSG-8971+UHD license provides the ability to enable UHD Mode on the SDI 1 and SDI 2 BNCs.

Keep the following in mind:

- When UHD mode is enabled on one SDI (SDI 1 or SDI 2), the card provides 3 channels up to 1080p, and 1 channel of 2160p.
 - › If UHD mode is enabled on SDI 1: SDI 3 and 4 are turned off. Refer to “**UHD Mode is Enabled on SDI 1 Only**” for cabling designations.
 - › If UHD mode is enabled on SDI 2: SDI 5 and 6 are turned off. Refer to “**UHD Mode is Enabled on SDI 2 Only**” for cabling designations.
- When UHD mode is enabled on SDI 1 *and* 2: the card provides 2 channels of 2160p. SDI 3-6 are turned off. Refer to “**UHD Mode is Enabled on SDI 1 and 2**” for cabling designations.

To enable UHD mode

1. Display the **Global** interface as outlined in “**To display the OSG-8971 interface in DashBoard**”.
2. Select the **Setup** tab.
3. In the **UHD** area, locate the **SDI** you wish to configure.
4. Choose from the following:
 - **Disable** — disables UHD mode. The SDI BNC supports formats up to 3G only.
 - **Enable** — enables UHD mode. The SDI BNC supports the 2160p 50Hz and 2160p 59.94Hz formats.
5. If required, repeat steps 3 and 4 for the second SDI.

Assigning a Function to an SDI


Each rear module includes six SDI bi-directional HD-BNCs. This provides the opportunity to assign each BNC as an input or output as required by your system workflow.

★ Assigning an SDI as an input enables one encoder channel. Assigning an SDI as an output enables one decoder channel.

To assign a function to an SDI

1. Display the **Global** interface as outlined in “**To display the OSG-8971 interface in DashBoard**”.
2. Select the **Setup** tab.
3. In the **I/O Setup > Encode/Decode** area, locate the **SDI** you wish to configure.

★ Each SDI row represents an SDI BNC on the rear module. Refer to **Figure 10** for cabling designations.

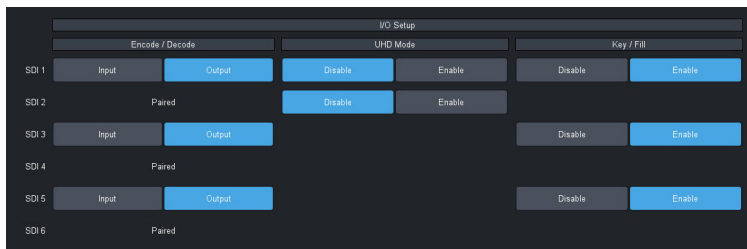

4. Choose from the following:
 - **Input** — assigns the SDI signal as an SDI input. One encoder channel is enabled.
 - **Output** — assigns the SDI signal as an SDI output. One decoder channel is enabled.
5. Repeat steps 3 and 4 for each SDI you wish to configure.

Decoding Setup

This chapter outlines how to configure the OSG-8971 as a decoder for an SRT connection.

- ★ Before proceeding, ensure that the SDI inputs and outputs are cabled and configured as required. Refer to **“Cabling”** and **“I/O Configuration”** respectively.

Overview

The OSG-8971 supports frame synchronization and delay up to 1s on each decoder path so that a user can manually tune delays for each stream. DashBoard reports any media or input signal that is asynchronous to the external reference. Up to 16 channel of audio per decoder can be synchronized and delayed in the same way.

The OSG-8971 supports MPEG-TS presentation timestamp insertion and decode to automatically compensate for network delay at the receiver.

Defining the Network Streams for Decoding


Before you can configure the decode channels, you must first define the network streams that will provide the OSG-8971 with an SRT connection. The mode of operation for the OSG-8971 is determined by its settings in the Decode > Network Streams tab in DashBoard.

- ★ The OSG-8971 only supports SRT connections at this time.

To define an SRT stream for decoding

1. Display the **OSG-8971** interface as outlined in **“To display the OSG-8971 interface in DashBoard”**.
2. Select the **Decode** tab.
The **Network Streams** sub-tab is automatically selected.
3. Click **New**.

A new entry is added to the Decode table, and the **Stream Configuration** options display with the default values. In the following example, the user is configuring the stream slot13-6.

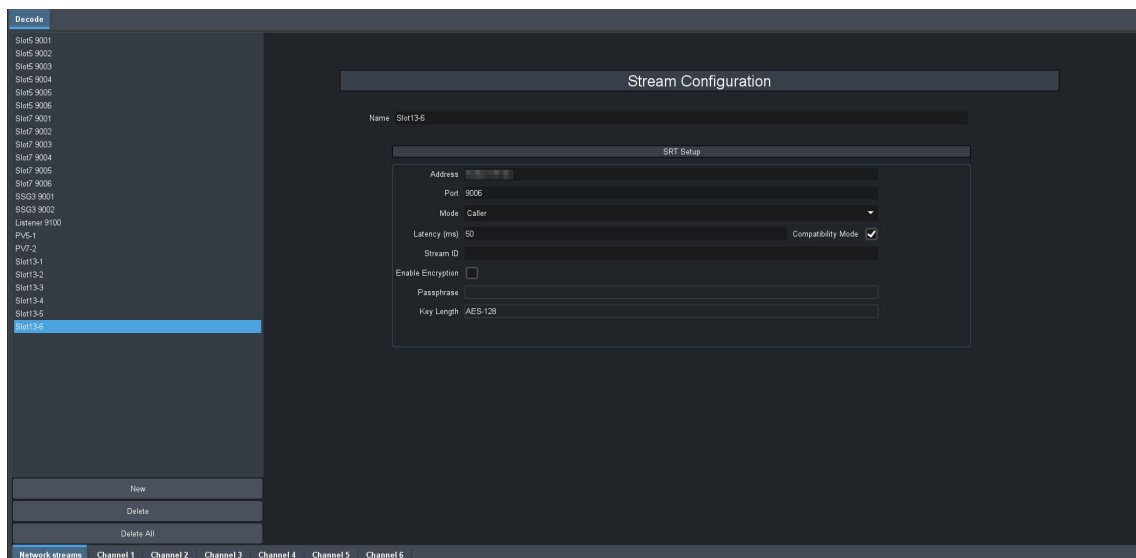

4. Use the **Name** field to assign a unique identifier to the stream.
5. Use the **Address** field to specify the IP address or host name for this network stream.
- ★ The **Address** field is ignored when **Mode** is set to **Listener**.

The OSG-8971 will connect to the peer SRT device assigned to this address on your network.
6. Use the **Mode** menu to assign a function to the OSG-8971 for decoding this network stream. Choose from the following:
 - **Caller** — the OSG-8971 acts as a transmitter using the SRT protocol over the network.
 - **Listener** — the OSG-8971 acts as a receiver using the SRT protocol over the network.
 - **Rendezvous** — enables the SRT end points to auto-negotiate port settings when your network includes a firewall.
7. If the **Mode** is set to **Caller**:
 - a. Use the **Port** menu to specify the Host Port on your network that the peer SRT Listener device is monitoring.
 - b. Use the **Stream ID** field to assign a unique identifier to the stream.
8. If the **Mode** is set to **Listener**, use the **Port** menu to specify the local UDP port the OSG-8971 will use to receive the network stream data from the peer device assigned as the Caller.
9. Use the **Latency** menu to define the minimum receiver buffering delay (in milliseconds) before delivering an SRT data packet from a receiving SRT socket to the stream decoder.

To use data encryption

1. Select the **Enable Encryption** box.
2. Use the **Passphrase** field to specify a string between 10-80 characters long.
- ★ The passphrase must match for both SRT peers.
3. Use the **Key Length** menu to select the desired key length to encrypt the data.

Assigning an SRT Stream to a Decode Channel

This section outlines how to assign an SRT stream as a source for a specific decode channel.


When an SDI is set to Output, a Decode channel is enabled and a sub-tab displays in the Decode interface. Each sub-tab provides options for selecting the network stream to decode, mapping the audio channels, and (if required) assigning a test pattern to the output. You can enable up to six decode channels.

To assign an SRT stream to a decode channel

1. Display the **OSG-8971** interface as outlined in “**To display the OSG-8971 interface in DashBoard**”.
2. Select the **Decode** tab.

The **Network Streams** sub-tab is automatically selected.
3. On the bottom of the **Decode** tab, select the sub-tab for the decode channel you want to assign the SRT stream to.


In the following example, the user selected Channel 6.

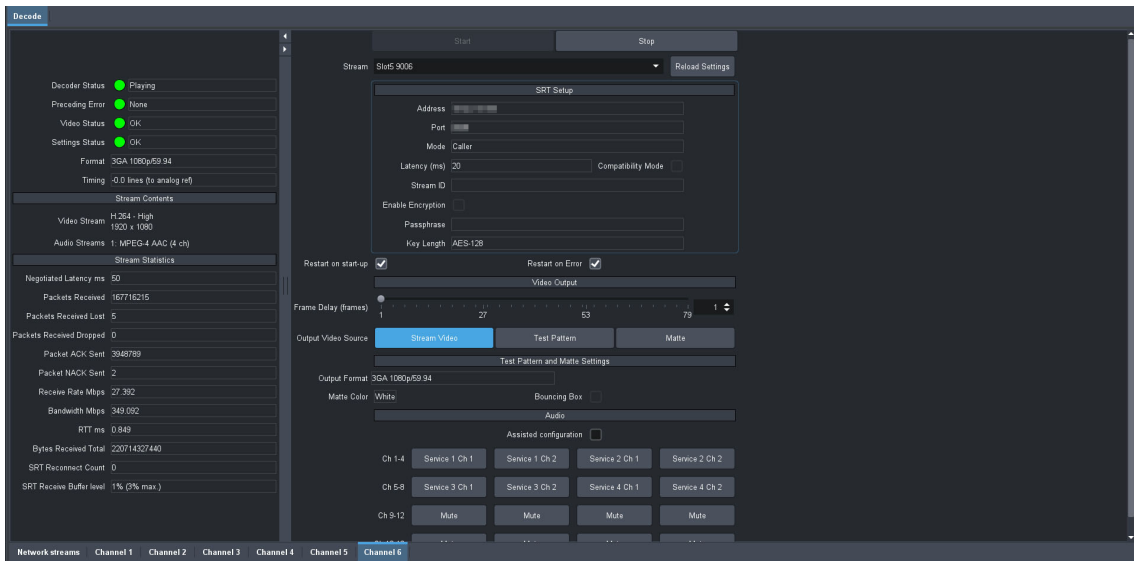

4. Use the **Stream** menu to select the network stream you want to decode on this channel.
- ★ Click **Reload Settings** if you recently made changes to the SRT configuration.
5. Verify the read-only information reported in the **SRT Setup** fields.
6. To enable this channel to automatically start decoding after the OSG-8971 reboots, select the **Restart on start-up** box.
7. To enable this channel to automatically start decoding after an invalid connection was detected but fixed, select the **Restart on Error** box.
8. If required, use the **Frame Delay** slider to adjust the relative position of the video output start of frame as an offset to the reference (in number of frames).
9. Use the **Output Video Source** menu to specify the output of the decode channel. Choose from the following:
 - Stream Video — This channel will output the decoded video from the specified network stream.
 - Test Pattern — This channel will output a test pattern.
 - Matte — This channel will output a matte box.
10. If the **Output Video Source** menu is set to **Test Pattern** or **Matte**, proceed to “**To include a test pattern or matte**”.


To map the audio channels

1. In the **Audio** area, locate the row for the channels you wish to map.
- ★ By default, the first 8 audio channels are enabled (channels 9-16 are reported as Unlicensed). If the OSG-8971-A16-LICENSE is installed, there are 16 audio channels available.

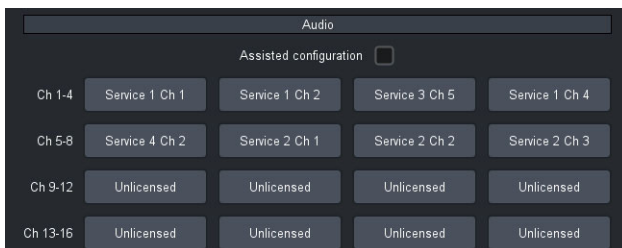

2. Select the button for the audio service you want to map to this decode channel.

The **Audio Config** dialog opens.

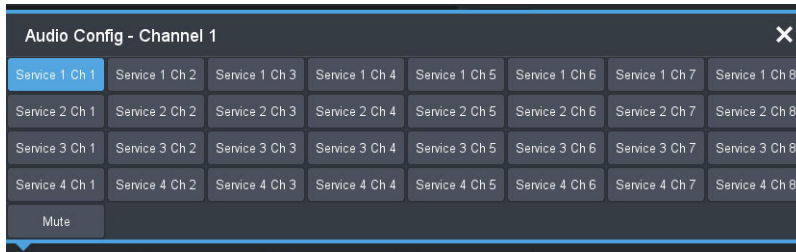

3. Select the channel you wish to assign to the selected service.

In the above example, the user selected **Service 1 Ch 1**.

4. Close the **Audio Config** dialog.

To include a test pattern or matte

1. Set the **Output Video Source** menu to **Test Pattern**.
2. Locate the **Test Pattern and Matte Settings** area.
3. Use the **Test Pattern** options to specify a pattern to output for this channel. Choose from the following:
 - Test Pattern — assign any output format and/or the internally generated test pattern as the output.
 - Matte — assign a matte color, any output format, or the Bouncing Box test pattern as the output.

Decoding an SRT Stream

Each decode channel can be controlled via its **Start** and **Stop** buttons (located at the top of the associated Channel tab) allowing you to customize which decode channels are active.


Decoding an SRT stream requires you to select its tab in the Decode interface, and click the Start button at the top of the tab. When the Start button is selected, the connection is published to downstream devices.

To decode an SRT stream

1. Display the **OSG-8971** interface as outlined in “**To display the OSG-8971 interface in DashBoard**”.
2. Select the **Decode** tab.
3. Select the required **Channel** sub-tab.

In the following example, the user selected Channel 1.
4. Click **Start**.

The **Start** button is read-only, and the **Stop** button is available.

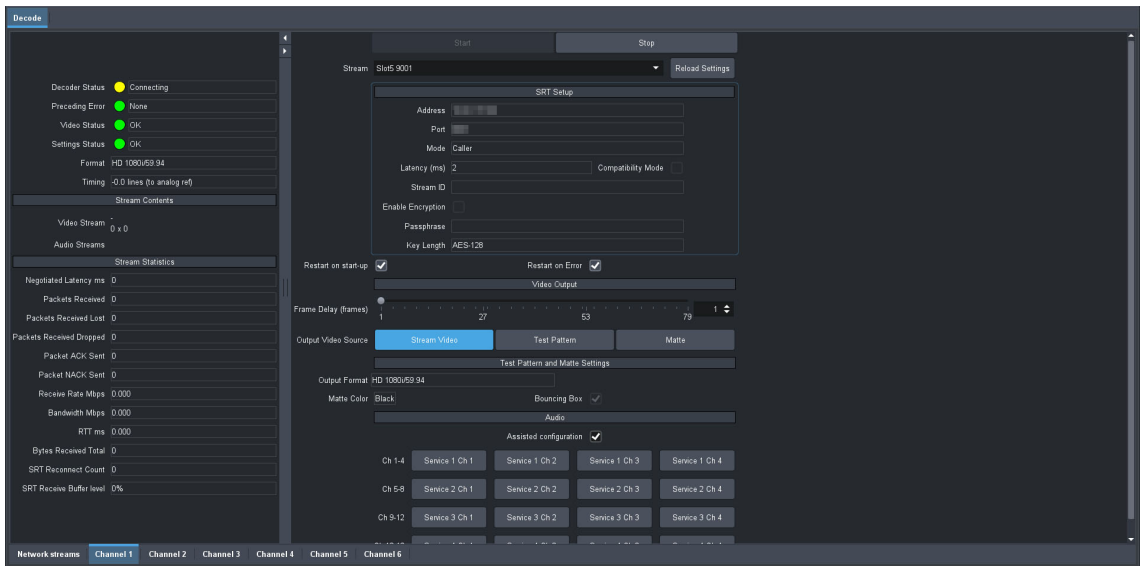

- To verify the decoding, review the fields in the left pane of the Channel sub-tab. Refer to **Table 19** for details.

Encoding Setup

This chapter outlines how to configure a channel on the OSG-8971 as an SRT encoder.

- ★ Before proceeding, ensure that the SDI inputs and outputs are cabled and configured as required. Refer to “**Cabling**” and “**I/O Configuration**” respectively.

Overview

Each connection is configured independently, allowing you to assign the SDI input signal or a SRT stream as the source for a connection. Once all the sources are configured, you can proceed to assign each source to an output (destination) to create a connection.

Defining the Transport Stream for Encoding


This section outlines how to set the mode of operation for the OSG-8971 and define an SRT encoding connection.

- ★ The number of SDI BNCs set to Input (Encode) determines the number of encoding channels that are available (the number of Channel tabs in the OSG-8971 > Encode interface). The Encode interface is blank when no SDIs are set to Input. Refer to “**Assigning a Function to an SDI**”.

To specify a transport stream for encoding

1. Display the **OSG-8971** interface as outlined in “**To display the OSG-8971 interface in DashBoard**”.
2. Select the **Encode** tab.
3. Select the **Channel** tab for the encoder channel you wish to configure.

The **Stream** sub-tab is automatically selected and displays in the right pane.

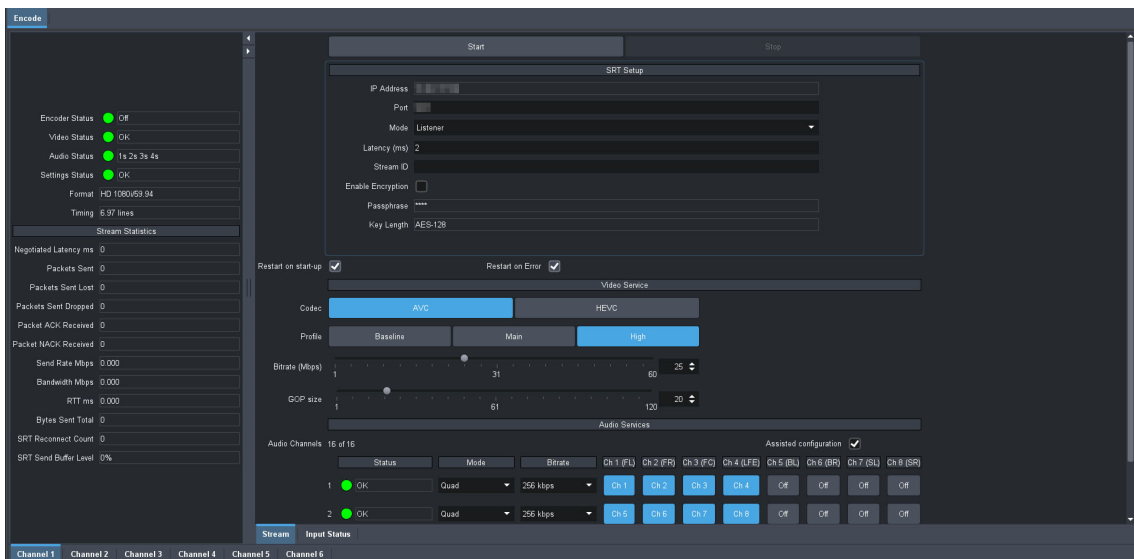

4. Locate the **SRT Setup** area of the **Stream** sub-tab.
 5. Use the **IP Address** field to specify the IP address for the network stream assigned to this Encoder channel.
- ★ The **Address** field is ignored when **Mode** is set to **Listener**.

6. Use the **Mode** menu to assign a function to the OSG-8971 for this network stream. Choose from the following:
 - **Caller** — the OSG-8971 acts as a transmitter using the SRT protocol over the network.
 - **Listener** — the OSG-8971 acts as a receiver using the SRT protocol over the network.
 - **Rendezvous** — enables the SRT end points to auto-negotiate port settings when your network includes a firewall.
7. If the **Mode** is set to **Caller**:
 - a. Use the **Port** menu to specify the Host Port on your network that the peer SRT Listener device is monitoring.
 - b. Use the **Stream ID** field to assign a unique identifier to the stream.
8. If the **Mode** is set to **Listener**, use the **Port** menu to specify the local UDP port the OSG-8971 will use to receive the network stream data from the peer device assigned as the Caller.
9. Use the **Latency** menu to define the minimum receiver buffering delay (in milliseconds) before delivering an SRT data packet from a receiving SRT socket to the stream decoder.
10. To enable this channel to automatically start encoding after the OSG-8971 reboots, select the **Restart on start-up** box.
11. To enable this channel to automatically start encoding after an invalid connection was detected but fixed, select the **Restart on Error** box.

To enable encryption


1. Select the **Enable Encryption** box.
2. Use the **Passphrase** field to specify a string between 10-80 characters long.
- ★ The password must match for both peers.
3. Use the **Key Length** menu to select the desired key length to encrypt the data.

Adjusting the Video Settings

Once the network stream credentials are configured for the encode channel, you can proceed to adjust the settings for the video data.

To configure the video data

1. Configure network settings for the encoder channel. Refer to “**To specify a transport stream for encoding**”.
2. Locate the **Video Service** area of the Channel # > Stream sub-tab.

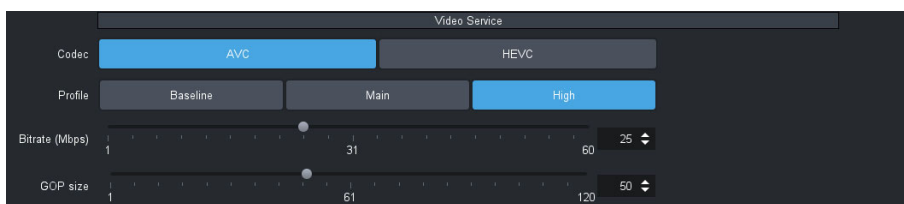

3. Use the **Codec** options to specify the MPEG code to use for encoding on this channel. Choose from the following:
 - **AVC** — uses the H.264 (MPEG-4 Part 10) codec to encode the stream channel.
 - **HEVC** — uses the H.265 (MPEG-H Part 2) codec to encode the stream channel.

- Use the **Profile** options to specify the compression ratio. Choose from the following:
 - Baseline** — uses a compression ratio of approximately 1000:1 (compresses a 1Gbps stream to 1Mbps). For use in low powered systems.
 - Main** — For use with H.264 code to a maximum resolution of 8K UHD.
 - High** — uses a compression ratio of 2000:1 (compresses a 2Gbps stream to 1Mbps). For use in broadcast or storage formats.
- Use the **GOP size** slider to specify the size of the Group of Pictures (GOP) structure in the encoded channel.

Embedded Audio Setup

By default, the OSG-8971 supports up to 8 channels of ACC per video stream. This enables flexible audio workflow for contribution or to support in house productions. The OSG-8971 uses the AAC-LC compression standard to encode the audio data.

- ★ The embedded output channels are configured per processed input to allow different audio mapping that will track the currently processed input.

To map a channel


- Display the **OSG-8971** interface as outlined in “**To display the OSG-8971 interface in DashBoard**”.
- Select the **Encode** tab.

The Channel 1 sub-tab is automatically selected.

- Select the required **Channel** sub-tab.
- Locate the **Audio Services** area of the tab.

The Audio Services area is organized into a table where each row represents an audio group, and each column provides the audio settings. The number of available audio channels is reported at the top of the Audio Services area. In the following example, the Audio Channel Count field reports 8 of 8.

- ★ If the OSG-8971-A16-LICENSE is installed, the OSG-8971 supports up to 16 channels.

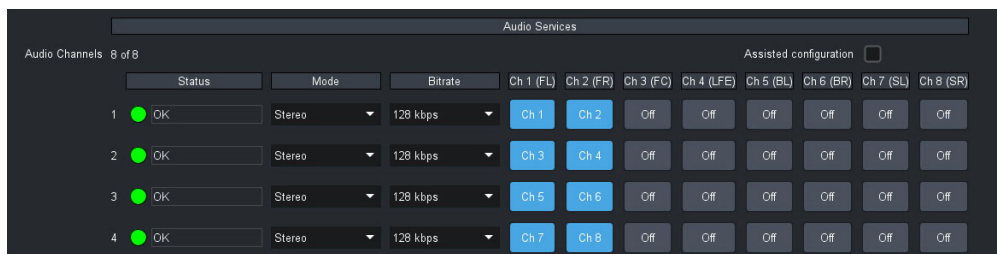

- Locate the row for the embedded audio group you wish to map.
- ★ If the group is not present on the input video, silence is embedded.
- Use the **Mode** menu to specify the type of audio data to include in the encoded stream group. Choose from the following:
 - None** — the audio is not embedded in the encoded stream. The group Status reports Off, and the channels are set to Off (all buttons are unlit).
 - Mono** — the first audio channel is mapped in the encoded stream. All other channels are set to Off (buttons are unlit). The Bitrate is set to 256kbps.
 - Stereo** — the first two audio channels are mapped in the encoded stream (buttons are lit blue). All other channels set to Off (buttons are unlit). The Bitrate is set to 256kbps.

- **Quad** — the first four audio channels (FL, FR, FC, LFE) are mapped in the encoded stream. All other channels set to Off (buttons are unlit). The Bitrate is set to 256kbps.
 - **5.1 Surround** — the first six channels (FL, FR, FC, LFE, BL, BR) are mapped in the encoded stream. All other channels set to Off (buttons are unlit). The Bitrate is set to 256kbps.
 - **7.1 Surround** — the eight channels (FL, FR, FC, LFE, BL, BR, SL, SR) are mapped in the encoded stream. The Bitrate is set to 512kbps.
7. Use the **Bitrate** menu to set the upstream data transfer rate (the number of bytes received in the last field).

The Bitrate is automatically set to the recommended value based on the selected Mode. You can still change the rate to your preferred value.
 8. To change the default mapping:
 - a. Select a channel button to display the **Audio Config** dialog.
 - b. Click the required channel.
 - c. Close the **Audio Config** dialog.
 9. Repeat steps 5 to 8 for each audio group to embed in the selected encoded channel.
- ★ To mute a specific channel in a group, click **Mute**.

Encoding an SRT Stream


Each encode channel can be controlled via its **Start** and **Stop** buttons (located at the top of the associated Channel tab) allowing you to customize which encode channels are active.

Encoding an SRT stream requires you to select its tab in the Encode interface, and click the Start button at the top of the Stream sub-tab. When the Start button is selected, the connection is published to the downstream device.

To encode an SDI signal to an SRT stream

1. Display the **OSG-8971** interface as outlined in “**To display the OSG-8971 interface in DashBoard**”.
2. Select the **Encode** tab.
3. Select the required **Channel** sub-tab.
4. Click **Start**.

The **Start** button is read-only, and the **Stop** button is available.

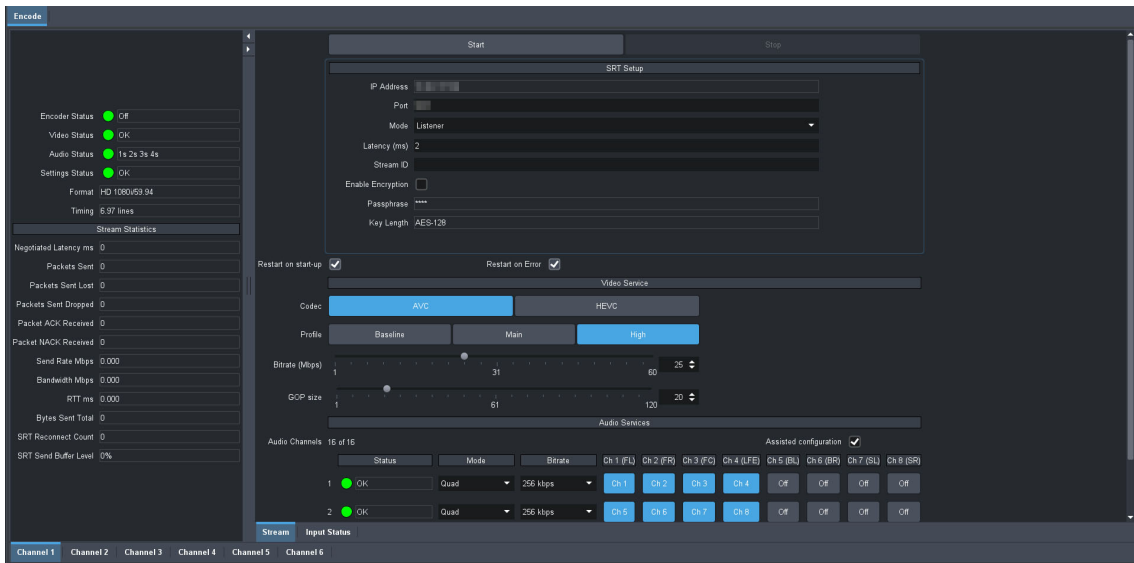

To verify the encoding

1. Review the fields in the left pane of the Channel tab. Refer to **Table 21** for details.
2. To review the embedded audio status, select the **Input Status** sub-tab for the channel.

Mapping the Decoded Key/Fill

This chapter outlines how to map the Key/Fill video from a decoded SRT stream to a specific pair of SDI outputs.

Before You Begin

Ensure the following tasks are performed:

1. If you are decoding an UHD stream:
 - a. Ensure the OSG-8971+UHD license is installed. Refer to **“To install a license key”**.
 - b. Enable UHD Mode for SDI 1 and SDI 2. Refer to **“To enable UHD mode”**.
2. If a softGear Streaming Gateway (SSG) provides the network stream, ensure your SSG is running software v4.0 or later.

Mapping the SDI I/O

This section outlines how to map the Key/Fill to a specific SDI output pair. The SDI outputs are fixed pairs. **Table 7** outlines the default Key/Fill mode settings for each SDI pair on the rear module.

Table 7 I/O Setup — Default Key/Fill Settings

SDI	Encode/Decode	Key/Fill	Output
1	Output	Disabled	Paired
2	Output	--	
3	Output	Disabled	Paired
4	Output	--	
5	Output	Disabled	Paired
6	Output	--	

The number of available SDI outputs for the Key/Fill depends on the video format of the stream.

- If you are decoding an 720p/1080p stream, you select from 1 to 3 output pairs. The key and fill are sent to the selected SDI output pair(s). Timing is within +/- 1 frame for the Key/Fill.
- If you are decoding an UHD stream, the output pair is automatically set to SDI 1, 2. The key and fill are only sent to SDI 1 and SDI 2. Timing is within +/- 1 frame for the Key/Fill.

To map the SDI I/O for Key/Fill mode

1. Display the **Global** interface as outlined in **“To display the OSG-8971 interface in DashBoard”**.
2. Select the **Setup** tab.
3. In the **I/O Setup > Encode/Decode** area, locate each **SDI** pair you wish to map.
4. Ensure that each SDI is assigned as an **Output**. Refer to **“To assign a function to an SDI”** for details.
5. Click **Enable**.

In the following example, the user is decoding an 1080p stream and has enabled 3 output pairs.

SetupNetworkGlobal Alarm EnablesSecurityConfigure LicenseLogging

Reference

Source

Frame 1

Frame 2

VO Setup

Encode / Decode

UHD Mode

Key / Fill

SDI 1

Input

Output

Disable

Enable

Disable

Enable

SDI 2

Paired

Disable

Enable

SDI 3

Input

Output

Disable

Enable

SDI 4

Paired

SDI 5

Input

Output

Disable

Enable

SDI 6

Paired

Factory Defaults

Load Factory Defaults

Card Lock

Edit Permission

Unlocked

SHMP: MIB File

Download MIBs

Refresh

Upload

Reboot

Close

Upgrading the Software

The OSG-8971 can be upgraded in the field via DashBoard.

★ The OSG-8971 is temporarily taken off-line during the upgrade process.

To upgrade the software on the OSG-8971

1. Contact Ross Technical Support for the latest software version file.
2. Ensure the Ethernet cable is connected to the **1G** port on the OSG-8971.
3. Display the OSG-8971 interfaces as outlined in “**Accessing the OSG-8971 Interfaces in DashBoard**”.
4. Select **Upload**, located near the bottom of the interface, to display the **Select file Upload** dialog.
5. Navigate to the ***.bin** file you want to upload.
6. Click **Open**.
7. Click **Next >** to display the **Select Destination** menu.

This menu provides a list of the compatible units.

8. Select the box for the OSG-8971 you want to upload the file to.

The **Error/Warning** fields indicate any errors, such as incompatible software or product type mismatch.

9. Click **Finish**.

10. Monitor the upgrade.

An **Upload Status** dialog enables you to monitor the upgrade process.

11. Click **OK**.

- The **Upload Status** dialog closes.

★ If the **Automatically close when complete** box is selected, the OSG-8971 automatically reboots to complete the upgrade process. Otherwise the user must click **Reboot** once the upload is complete.

- The process is complete once the status indicators in the **Connections Control** tab return to their previous status.

DashBoard Interface Overview

This chapter briefly summarize the menus, items, and parameters available in DashBoard for the OSG-8971.

★ Parameters marked with an asterisk (*) are the factory default values.

Global Interface

The Global interface is accessed by double-clicking the Global sub-node in the OSG-8971 tree. There are two panes in the Global interface: Status (on the left), and Configuration (on the right). (**Figure 16**) This section outlines the tabs displayed in the Global interface starting with the leftmost tab in the Status pane.

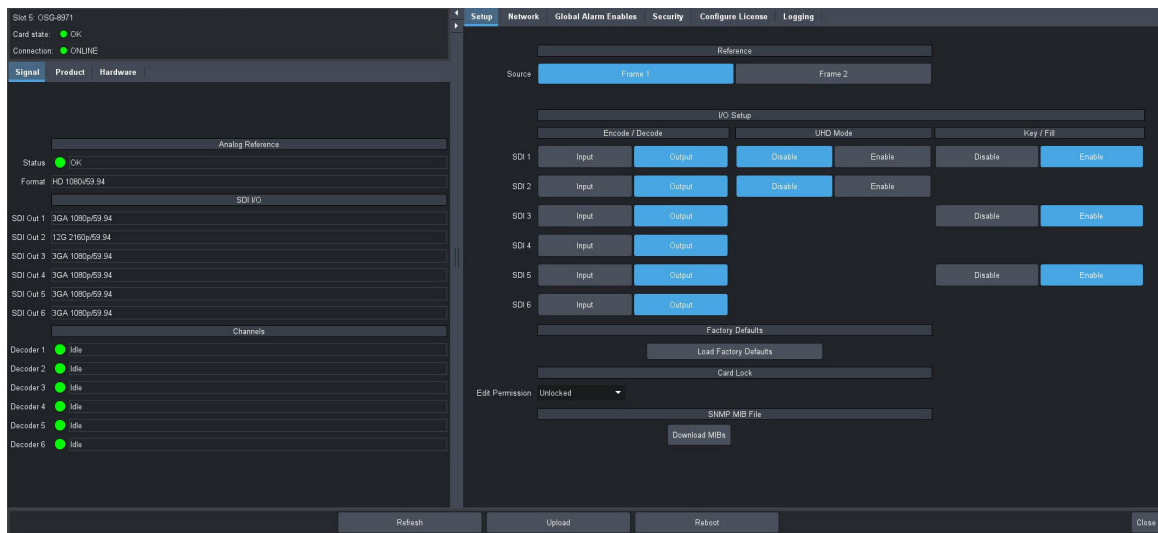


Figure 16 Example of the Global Interface

Signal Tab

Table 8 summarizes the read-only fields displayed in the **Signal** tab.

Table 8 Global > Signal Tab

Item	Parameters	Description
Analog Reference		
Status	OK (Green)	A valid signal is detected from the reference source device
	Alarm suppressed (Green)	There are reference errors detected but the Global Alarm Enables > Reference Error option is disabled (box is not selected)
	Unsupported (Red)	An unsupported signal is detected from the reference source device
	Unlocked (Red)	A valid or present reference signal is not detected by the card

Table 8 Global > Signal Tab (Continued)

Item	Parameters	Description
Format	#	Reports the video format detected on the input reference signal as defined by the Setup > Analog Reference Source menu.
SDI I/O		
SDI #	#	Indicates the following for the SDI BNC: • If the SDI is an IN or OUT (as specified by the Setup > I/O Setup > Encode/Decode option for the SDI) • A valid signal is detected • The format is supported • The selected reference signal is supported and compatible
	N/A	A signal is not detected on the specified SDI BNC. Verify the cable connection.
Channels^a		
Decoder #	OK (Green)	Indicates the following for this decoder channel: • The Start button was selected on the associated Decode > Channel sub-tab • A valid signal is detected • The channel is decoding correctly
	Idle (Green)	Indicates that the Start button is not selected on the associated Decode > Channel sub-tab
	N/A (Green)	The channel is set to Decode (the Setup > I/O Setup menu is set to Output) but this channel is not configured correctly for decoding
Encoder #	OK (Green)	Indicates the following for this encoder channel: • The Start button was selected on the associated Encode > Channel sub-tab • A valid signal is detected • The channel is encoding correctly
	Idle (Green)	Indicates that the Start button is not selected on the associated Encode > Channel sub-tab
	N/A (Green)	The channel is set to Encode (the Setup > I/O Setup menu is set to Input) but this channel is not configured correctly for encoding
	No Input (Red)	The input signal is invalid or unavailable

- a. The number of Decoder and Encoder channels is determined by the Setup > I/O Setup > Encode/Decode setting for each SDI. For example, if SDI 1-4 are set to Inputs and SDI 5-6 are set to Outputs, there will be four Encoder channels and two Decoder channels.

Product Tab

Table 9 summarizes the read-only information displayed in the Product tab.

Table 9 Global > Product Tab

Item	Parameters		Description
Product	OSG-8971		
Supplier	Ross Video Ltd.		
Board Rev	#		Indicates the hardware version
Serial Number	#		Indicates the serial number of the card
Rear Module	#		Indicates the part number of the rear module that the card is installed with
Rear Module Status	OK (Green)		A supported rear module is installed with the card
	Alarm suppressed (Green)		An unsupported rear module is installed but the Global Alarm Enables > Rear Module option is disabled
	Incomp I/O Module (Red)		Card is connected to an unsupported rear module
Software Rev	#. #-#		Indicates the software version running on the card
Firmware Rev	#. #		Indicates the firmware version running on the card
Daughter Card			
Type	#		Reports the daughter card model installed on the main card
OS Version	#		
Status	Indicates if the daughter card is running correctly or whether errors are detected		
Supplier	Ross Video Limited		
Product	OSG-8971		
SW Version	#		Indicates the software running on the daughter card
Build stamp	#		
Encoder	#		Indicates the version used for encoding
System Uptime	# day, # minutes		Reports the length of time since the last reboot of the daughter card
App Uptime	#h		Reports the number of hours since the last reboot of the OSG-8971 software on the daughter card

Hardware Tab

Table 10 summarizes the read-only information displayed in the Hardware tab.

Table 10 Global > Hardware Tab

Item	Parameters	Description
Hardware Status	OK (Green)	Fans are operating correctly; no errors are detected
	Alarm suppressed (Green)	There are fan errors detected but the Global Alarm Enables > Stalled Fan option is disabled (box is not selected)
	Critical Temperature (Red)	The FPGA temperature is 100°C (212°F) or above
	Fan Off/Stalled (Red)	The fan installed on the OSG-8971 is not operating correctly
Voltage (mV)	#	Measured input millivolts
Current (mA)	#	Current consumption in milliamperes
Power (W)	#	Power consumption in watts
FPGA Temp (C)	#	Indicates the FPGA Core temperature where: • A green indicator displays when the temperature is less than 95°C (203°F). • A yellow indicator displays when the temperature is greater than or equal to 95°C (203°F). • A red indicator displays when the temperature is greater than or equal to 100°C (212°F).
 If the temperature is greater than 100°C (212°F), the user must manually power down the card.		
AXI Bridge	OK (Green)	Reports the status of the Advanced Extensible Interface (AXI) bridge running on the OSG-8971. This information is for Ross Technical Support.
	Error (Red)	
Fan Speed	#	Reports the speed (rpm) of the fan on the board
CPU Usage	x.xx / y.yy / z.zz	Displays the CPU Load average where: • x . xx represents in the last minute • y . yy represents the last five minutes • z . zz represents the last fifteen minutes
Uptime (System/App)	a / b	Reports the length of time (hh:mm:ss) where: • a represents the last reboot of the PCB • b represents the last reboot of the OSG-8971 software

Table 10 Global > Hardware Tab (Continued)

Item	Parameters	Description
RAM Available	# / # MB	CPU Memory Used / Total CPU Memory
SD Card Status	# of #GB used	Reports the amount of memory used on the Micro SD card of the main PCB

Setup Tab

The Global > Setup tab provides options for specifying a reference source, assigning a function to each SDI BNC, and enabling UHD Mode on the required SDI. (**Figure 17**)

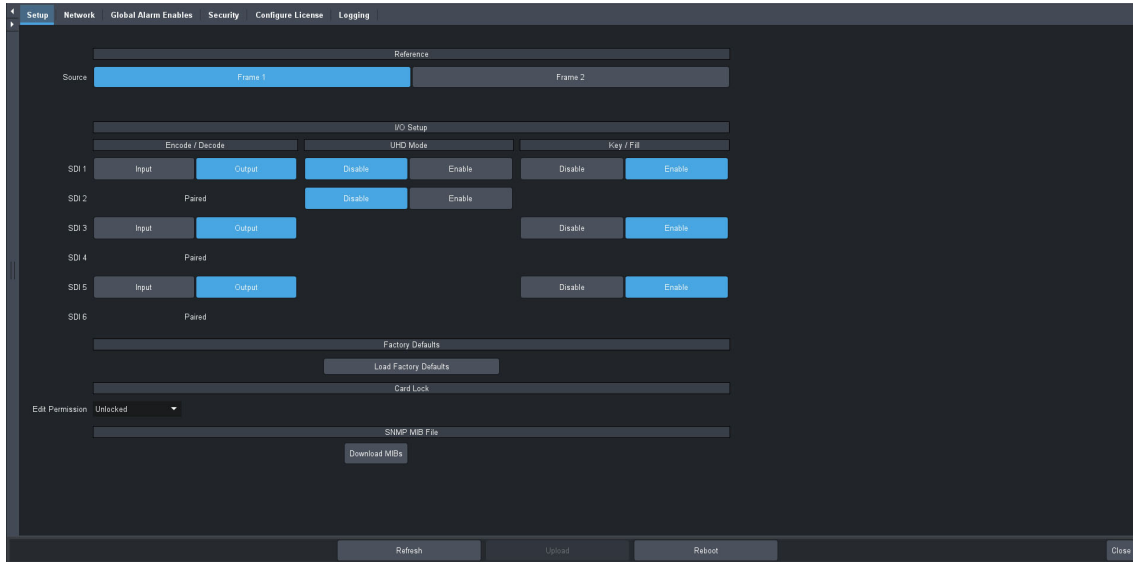


Figure 17 Example of the Global > Setup Tab

Table 11 summarizes the options displayed in the Setup tab.

Table 11 Global > Setup Tab

Item	Parameters	Description
Reference		
Source	Frame 1	Uses the reference signal connected to the REF 1 BNC on the openGear frame
	Frame 2	Uses the reference signal connected to the REF 2 BNC on the openGear frame
I/O Setup		
SDI #	Input	Configures the SDI channel as an input; one encoder channel is automatically available
	Output	Configures the SDI channel as an output; one decoder channel is automatically available
UHD Mode^a		
SDI #	Disable	Disables UHD support on this SDI channel
	Enable ^b	UHD support is available on this SDI channel

Table 11 Global > Setup Tab (Continued)

Item	Parameters	Description
Key/Fill		
SDI #	Disable	This pair does not output the Key/Fill from a decoded network stream
	Enable	Configures the pair to output the Key/Fill from a decoded network stream
Factory Defaults		
Load Factory Defaults	All editable parameters in DashBoard, except those in the Network tab, are reset to the factory default values	
Card Lock		
Enable Permission	Unlocked	All editable parameters in DashBoard can be modified by the user
	Locked	The DashBoard interface is locked. The editable parameters in DashBoard can no longer be modified by the user. To unlock the interface, select the box again.
SNMP MIB File		
Download MIBs	Downloads the Management Information Base (MIB) file that provides the SNMP controls for your card	

- UHD Mode is only available for SDI 1 and SDI 2 and requires the OSG-8971+UHD license be enabled.
- Enabling UHD Mode impacts the number of active SDI channels. When UHD mode is enabled on SDI 1, SDI 3 and 4 are automatically turned off. When UHD mode is enabled on SDI 2, SDI 5 and 6 are turned off. Refer to "UHD Mode Configurations" and "Enabling UHD Mode for SDI 1 and/or SDI 2" for details.

Network Tab

The Global > Network tab provides options for configuring the network settings of the CONTROL and MEDIA ports for the OSG-8971. (**Figure 18**)

★ Each port is configured independently.

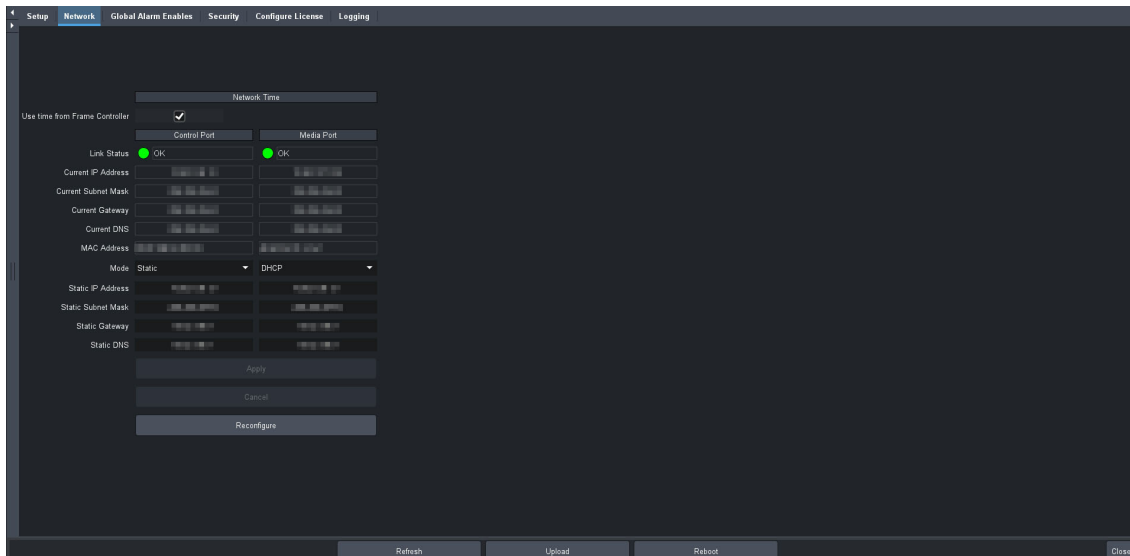


Figure 18 Example of the Global > Network Tab

Table 12 summarizes the menus and read-only fields displayed in the Network tab.

Table 12 Global > Network Tab

Item	Parameters	Description
Network Time		
Use Time from Network Controller	Selected	Enables the OSG-8971 to use the time data reported by the MFC-OG3-N or MFC-OGX-N that is installed in the same openGear frame
	Cleared	
Control Port		
Link Status (read-only)	OK (Green)	The OSG-8971 is communicating on the network via the MFC-OG3-N or MFC-OGX-N
	Invalid Subnet Mask (Yellow)	The Current Subnet Mask value is set incorrectly or is invalid within your network
	Apply/Cancel Changes (Yellow)	One or more setting on this tab was changed but the Apply button was not selected
	Link Down (Red)	The link for the MFC-OG3-N or MFC-OGX-N is invalid
Current IP Address (read-only)	##.##.##	Indicates the IP address currently assigned to the OSG-8971 via the MFC-OG3-N or MFC-OGX-N
Current Subnet Mask (read-only)	##.##.##	Indicates the subnet mask assigned to the OSG-8971 via the MFC-OG3-N or MFC-OGX-N
Current Gateway (read-only)	##.##.##	Indicates the gateway for communications outside of the local area network (LAN)
MAC Address (read-only)	#	Indicates the MAC address currently assigned to the OSG-8971 via the MFC-OG3-N or MFC-OGX-N
Mode	Static	The user manually assigns the network settings for the OSG-8971
	DHCP*	Automates the assignment of network settings for the OSG-8971
Static IP Address	#	The IP address for the OSG-8971 that the user manually assigned
Subnet Mask	#	The Subnet Mask for the OSG-8971 that the user manually assigned
Static Gateway	##.##.##	The Gateway for the OSG-8971 that the user manually assigned
Media Port		
Link Status (read-only)	OK (Green)	The Media port on the OSG-8971 rear module is communicating on the network
	Invalid Subnet Mask (Yellow)	The Current Subnet Mask value is set incorrectly or is invalid within your network

Table 12 Global > Network Tab (Continued)

Item	Parameters	Description
Link Status (read-only)	Apply/Cancel Changes (Yellow)	One or more setting on this tab was changed but the Apply button was not selected
	Link Down (Red)	The link for the Media port is invalid
Current IP Address (read-only)	###.	Indicates the IP address currently assigned to the Media Port on the OSG-8971 rear module
Current Subnet Mask (read-only)	###.	Indicates the subnet mask for the Media port on the OSG-8971 rear module
Current Gateway (read-only)	###.	Indicates the gateway for communications outside of the local area network (LAN)
MAC Address (read-only)	#	Indicates the MAC address currently assigned to the Media port on the OSG-8971 rear module
Mode	Static	The user manually supplies the network settings for the Media port on the OSG-8971 rear module
	DHCP*	Automates the assignment of network settings for the Media port on the OSG-8971 rear module
Static IP Address	#	The IP address for the Media port on the OSG-8971 rear module that the user manually assigned
Subnet Mask	#	The Subnet Mask for the Media port on the OSG-8971 rear module that the user manually assigned
Static Gateway	###.	The Gateway for the Media port on the OSG-8971 rear module that the user manually assigned
Reconfigure	Select this button to re-apply the current network settings. For example, if the OSG-8971 could not be configured with an IP address via DHCP, then clicking this button causes a new attempt to acquire the IP address.	

Global Alarm Enables Tab

The Global Alarm Enables tab provides monitoring options for the OSG-8971. (**Figure 19**)

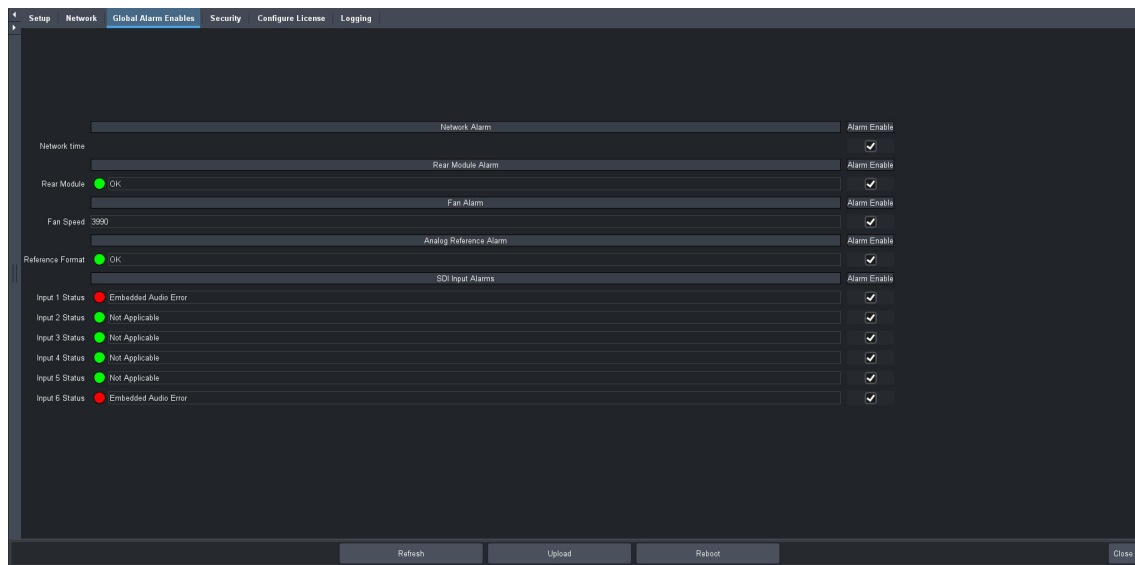


Figure 19 Example of the Global > Global Alarm Enables Tab

Table 13 summarizes the options displayed in the Global Alarm Enables tab.

Table 13 Global > Global Alarm Enables Tab

Item	Parameters	Description
Network Alarm		
Network time (read-only)	#	Displays the time data transmitted by the MFC-OG3-N or MFC-OGX-N in the same openGear frame. Requires that the Global > Network > Use time from Frame Controller box is selected on the OSG-8971.
Alarm Enable	Selected*	The OSG-8971 reports the NTP time as provided by the MFC-OG3-N or MFC-OGX-N in your openGear frame
	Cleared	Disables this alarm
Rear Module Alarm		
Status (read-only)	OK (Green)	A supported rear module is installed with the OSG-8971
	Alarm Suppressed (Green)	The Alarm Enable box is cleared. The status of the rear module will not be reported.
	Incompat Rear Module (Red)	The rear module installed is not supported by the OSG-8971. Refer to “Supported Rear Modules” .
Alarm Enable	Selected*	The Global > Product > Rear Module Status field reports when a rear module is not compatible with the card
	Cleared	Disables this alarm

Table 13 Global > Global Alarm Enables Tab (Continued)

Item	Parameters	Description
Fan Alarm		
Fan Speed (read-only)	#	Reports the speed (rpm) of the fan on the board
Alarm Enable	Selected*	The OSG-8971 reports the detected speed of the fan installed on the board
	Cleared	Disables this alarm
Analog Reference Alarm		
Reference Format (read-only)	OK (Green)	Indicates the detected reference format is supported
	Alarm Suppressed (Green)	The Alarm Enable box is cleared. The status of the reference signal will not be reported.
	Unlocked (Red)	A reference signal is detected, but the card is not locked to it
	Unsupported (Red)	A reference signal is detected, but the format is not supported by the OSG-8971
	Incompatible (Red)	A reference signal is detected but the format is incompatible with the current output mode of the card
Alarm Enable	Selected*	The Global > Signal > Analog Reference Status field reports when there is a loss of reference signal
	Cleared	Disables this alarm
SDI Input Alarms		
Input # Status (read-only)	This field duplicates the information reported in the Input Status field.	
Alarm Enable	Selected*	OSG-8971 reports a loss of the specified input or if the format is incompatible for the specified input
	Cleared	Disables this alarm

Security Tab

Table 14 summarizes the options displayed in the Security tab.

Table 14 Global > Security Tab

Item	Parameters	Description
Security Configuration		
SSH Login	Disable*	Disables the ability for a user to log onto the OSG-8971 via a SSH server
	Enable	The OSG-8971 can be accessed via a secure channel by an SSH server. This should only be selected if directed to do so by Ross Video Technical Support.

Configure Licenses Tab

Table 15 summarizes the read-only information displayed in the Configure Licenses tab.

Table 15 Global > Configure Licenses Tab

Item	Parameters	Description
Base Product Type	OSG-8971	
Feature	<license name>	Specifies the license(s) available for your card
Request Code	#	This character string is used to obtain a license key
Key	#	Specifies the license key that was provided to enable the licensed feature
	Licensed	The license key is valid and the licensed feature is enabled

Logging Tab

Table 16 summarizes the read-only information displayed in the Logging tab.

Table 16 Global > Logging Tab

Item	Parameters	Description
Logging Level	Filters the events the System Log captures	
Remote Logging	##.##.##	Specifies the IP address for the external device that is logging the communication activity for the OSG-8971
System Log	Reports the OSG-8971 events since the last time the log was cleared	

OSG-8971 Interface

The OSG-8971 interface provides options for configuring and monitoring the channels for your card.

Decode Tab

The OSG-8971 > Decode tab displays at least one SDI has its I/O Setup set to Output in the Global > Setup tab. The Decode options are organized into the sub-tabs that display in the bottom toolbar. This section outlines the sub-tabs starting with the leftmost bottom tab.

For More Information on...

- setting the I/O Setup options for the SDI BNCs, refer to **“Assigning a Function to an SDI”**.

Network Streams Sub-tab

The Network Streams tab is organized into two panes. (**Figure 20**) The left pane lists the available network streams that are configured for decoding. Selecting a stream from the list displays the settings for that stream in the right pane.

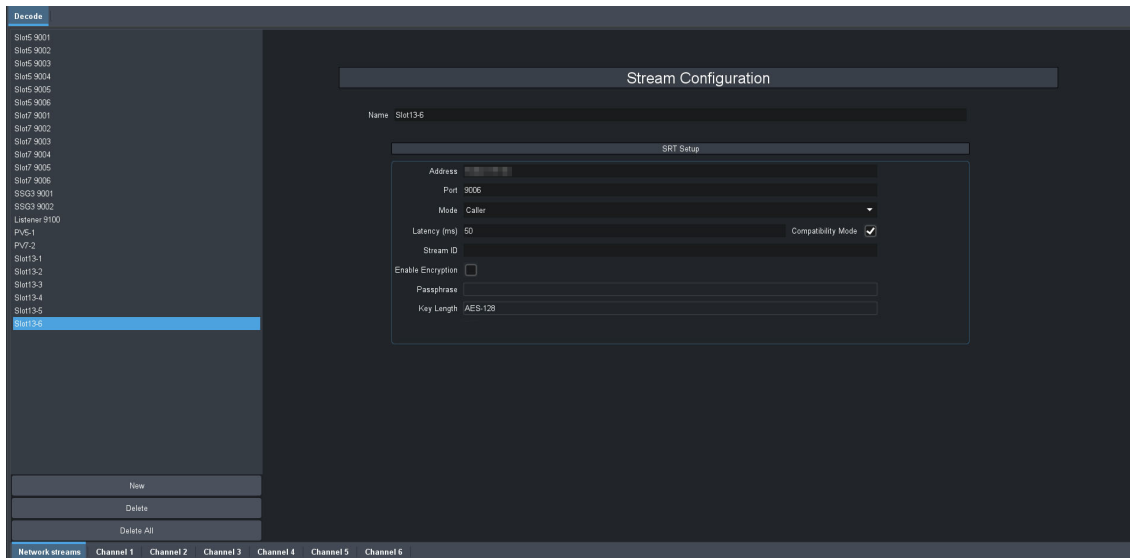


Figure 20 Example of an OSG-8971 > Decode > Network Streams Sub-tab

Table 17 summarizes the information displayed in the leftmost table of the Decode > Network Streams sub-tab.

Table 17 OSG-8971 — Decode > Network Streams Table

Item	Parameters	Description
Stream name (read-only)	This area lists the configured decoder streams in the database	
New	Displays the Stream Configuration options to define a new decoder stream	
Delete	Select this button to remove the selected decoder stream from the database	
Delete All	Removes all decoder streams from the database	

Table 18 summarizes the options displayed in the Decode > Network Streams rightmost pane.

Table 18 OSG-8971 — Decode > Network Streams

Item	Parameters	Description
Stream Configuration		
Name	<text>	Assigns a unique identifier to the stream. This name is used to identify the stream in the OSG-8971 interfaces.
SRT Setup		
Address	###.###.###.###	Specifies the Multicast IP address or host name for the network connection that provides the stream

Table 18 OSG-8971 — Decode > Network Streams (Continued)

Item	Parameters	Description
Port	#	- If the Mode is set to Caller, use the Port menu to specify the Host Port on your network that the peer SRT Listener device is monitoring. - If the Mode is set to Listener, use the Port menu to specify the local UDP port the OSG-8971 will use to receive the network stream data from the peer device assigned as the Caller.
Mode	Caller	The OSG-8971 operates as an SRT transmitter for decoding the media stream
	Listener	The OSG-8971 operates as an SRT receiver for a decoded media stream
	Rendezvous	The OSG-8971 operates within a network with a firewall. The SRT end points auto-negotiate.
Latency (ms)	#	Defines the minimum receiver buffering delay (in milliseconds) before delivering an SRT data packet from a receiving SRT socket to the stream decoder
Compatibility Mode	Selected	This feature is used for troubleshooting audio issues for a stream with a third-party device. Select the box to add a latency to the stream. This setting applies to any decoder channel that uses this stream as a source.
	Cleared	This feature is disabled. This is the default.
Stream ID	#	Assigns a unique identifier to the stream when the Mode is set to Caller. When the Mode is set to Listener, this field is not applicable.
Enable Encryption	Selected	Enables data encryption in transit using AES. The Password and Key Length fields are now editable.
	Cleared	Disables data encryption
Passphrase ^a	<text>	Determines the password that must be the same for both peers, or the connection will be rejected by the receiver and fail. The password must be 10-80 characters long.
Key Length ^a	Default	Defaults key length to 128-bit to encrypt the data
	AES-128	Uses 128-bit key length to encrypt the data
	AES-192	Uses 192-bit key length to encrypt the data
	AES-256	Uses 256-bit key length to encrypt the data

a. Displays only when the Enable Encryption box is selected.

Channel Sub-tabs

Each Channel sub-tab is divided into two panes: status (left), and configuration (right). (**Figure 21**)

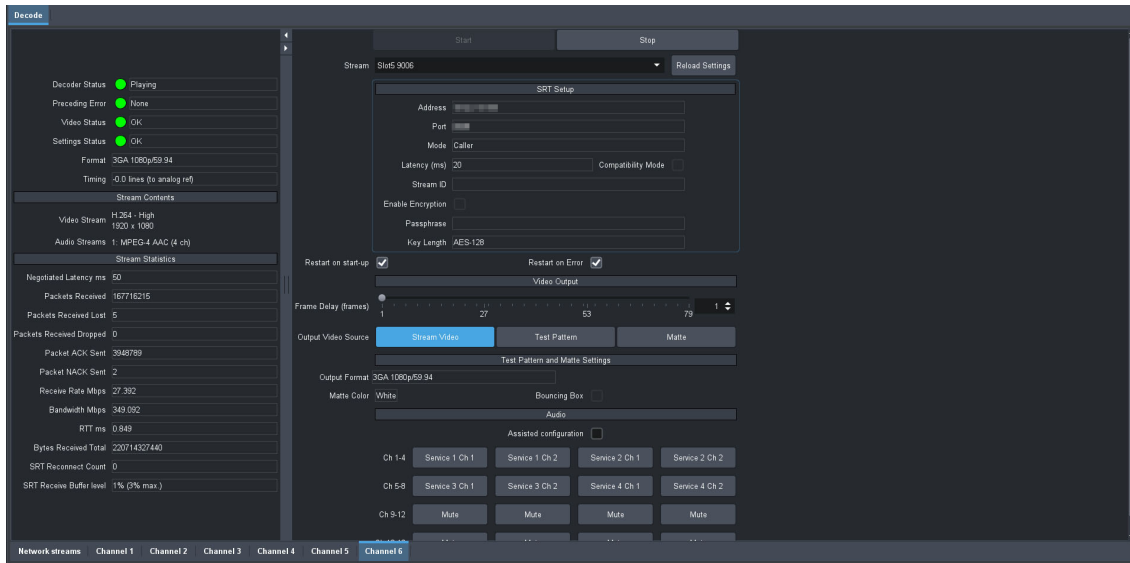


Figure 21 Example of an OSG-8971 > Decode > Channel 6 Sub-tab

Table 19 summarizes the options displayed in the left pane of each Decode > Channel # sub-tab.

Table 19 OSG-8971 — Decode > Channel # > Status

Item	Parameters	Description
Decoder Status	Playing (Green)	A valid link is established using the current settings
	N/A (Green)	The SRT Setup settings are not configured for this channel
	Not Present (Yellow)	A valid link was previously established but is no longer detected
	Link Down (Red)	The link at the specified IP address and port is invalid (fails)
Preceding Error	None (Green)	Errors were not encountered during the last decode session on this channel
	Network Error (Red)	Indicates that an invalid network connection is occurring
Video Status	OK (Green)	No errors are detected on the video signal of the specific input
	Unsupported Format (Yellow)	An input signal is detected but the video is not supported by the card
	Incompatible Video (Yellow)	An input signal is detected but its format is not compatible with the output video format
	Not time to Ref (Yellow)	An input signal is detected but the detected reference signal is incompatible with this input signal

Table 19 OSG-8971 — Decode > Channel # > Status (Continued)

Item	Parameters	Description
Video Status	No Signal (Red)	Indicates one of the following issues is occurring: • the input signal is not detected • the system frame rate does not match the input frame rate
Settings Status	OK (Green)	Indicates correct operation with no impending changes to the settings
	Need Restart (Yellow)	Indicates a change was made in the configuration while running. You must restart the stream before the changes are applied.
Format	#	Indicates the video format of the input signal
Timing	# lines (to analog ref)	Indicates the timing offset between the video input signal and the reference signal. The unit of measure is in respect to the input video format.
Stream Contents		
Video Stream	The current stream includes a video signal	
Audio Streams	The current stream includes audio signals	
Stream Statistics		
Negotiated Latency	# ms	Defines the minimum receiver buffering delay before delivering an SRT data packet from a receiving SRT socket to the stream decoder
Packets Received	#	Reports the total number of packets received on the network stream
Packets Received Lost	#	Reports the total number of error packets received on the network stream
Packets Received Dropped	#	Reports (with respect to the configured latency) that at the receiver point, the packet arrived too late
Packet ACK Sent	#	Reports the number of ACK packets sent on the network stream
Packet NACK Sent	#	Reports the number of ignored ACK packets sent on the network stream
Receive Rate (Mbps)	#	Reports the packets received on the network stream and forwarded to the processor on the specified SDI
Bandwidth (Mbps)	# Mbps	Reports the amount of data the OSG-8971 is currently receiving on the MEDIA port via this network stream

Table 19 OSG-8971 — Decode > Channel # > Status (Continued)

Item	Parameters	Description
RTT (ms)	#	Reports the detected latency on your network (the number of milliseconds that passed from when the OSG-8971 sent a network request was sent and an acknowledgment was received)
Bytes Received Total	#	Reports the amount of data the OSG-8971 received on the MEDIA port via this network stream since the Start button was selected
SRT Reconnect Count	#	Indicates the number of SRT managed reconnections (in case of a momentarily loss of network)
SRT Receive Buffer Level	# (# max)	The maximum value is the highest level recorded since the stream started

Table 20 summarizes the options displayed in the right pane of each Decode > Channel # sub-tab.

Table 20 OSG-8971 — Decode > Channel #

Item	Parameters		Description
Start	The stream channel is now active. The OSG-8971 connects to the stream using the credentials set in the Decode > Network Streams tab.		
Stop	The stream channel is inactive. The OSG-8971 stops decoding data on this channel.		
Stream	#		Specifies a network stream for the channel. The network stream is defined using the options in the Decode > Network Streams sub-tab.
Reload Settings	Updates the list of streams in the Stream menu		
SRT Setup			
Address (read-only)	#		Indicates the IP address or host name for the stream assigned to this decode channel
Port (read-only)	#		Indicates the communications port for the stream assigned to this decode channel
Mode (read-only)	#		Indicates the if the stream assigned to this decode channel is a Caller or Listener
Latency (ms) (read-only)	#		Indicates the assigned receiver buffering delay
Compatibility Mode	Selected		This feature is used for troubleshooting audio issues for a stream with a third-party device. Select the box to add a latency to the stream. This setting applies to any decoder channel that uses this stream as a source.
	Cleared		This feature is disabled. This is the default.

Table 20 OSG-8971 — Decode > Channel # (Continued)

Item	Parameters	Description
Stream ID	#	Indicates the unique identifier for the stream when the Mode is set to Caller. When the Mode is set to Listener, this field is not applicable.
Enable Encryption	Selected	Enables data encryption in transit using AES. The Password and Key Length fields are now editable.
	Cleared	Disables data encryption
Passphrase ^a	<text>	Determines the password that must be the same for both peers, or the connection will be rejected by the receiver and fail. The password must be 10-80 characters long.
Key Length ^a	Default	Defaults key length to 128-bit to encrypt the data
	AES-128	Uses 128-bit key length to encrypt the data
	AES-192	Uses 192-bit key length to encrypt the data
	AES-256	Uses 256-bit key length to encrypt the data
Restart on start-up	Selected	This decode channel will automatically start after a reboot or once the OSG-8971 comes online after a loss of power
	Cleared	Disables this feature
Restart on Error	Selected	This decode channel will automatically start after an error condition is detected
	Cleared	Disables this feature
Video Output		
Frame Delay (frames)	#	Adjusts the relative position of the video output start of frame as an offset to the reference.
Output Video Source	Stream Video	Assigns the decoded SRT stream as the output
	Test Pattern	Specifies that a SMPTE bars test pattern will replace all of the output picture (but not the HANC and VANC)
	Matte	Specifies that the output is a solid color signal as determined by the Matte Color setting. The matte is a full raster signal.
Test Pattern and Matte Settings		
Output Format	#	Specifies the video format for the test pattern output
Matte Color	#	Specifies the color of the Matte Pattern when Output Video Source is set to Matte

Table 20 OSG-8971 — Decode > Channel # (Continued)

Item	Parameters	Description
Bouncing Box	Selected	An overlay in the shape of a box, filled with the specified Matte Color, moves across the screen in a pre-determined pattern
	Cleared	Disables this feature
Audio > Ch #^b		
Audio Channels (read-only)	x of y	Reports the number of audio channels allocated where: - x represents the number of channels in use - y represents the total number of available audio channels
Assisted Configuration	Selected	Automates 1:1 channel mapping. You can still edit the audio channel mapping as required.
	Cleared	Disables this feature
Service # Ch #	Enables you to customize the audio mapping for the decoded channel	
Mute	Mutes the input source for the specified channel that is inserted into the embedded group (if present)	

- Displays only when the Enable Encryption box is selected.
- By default, a total of 8 audio channels are available to map. If the OSG-8971-A16-LICENSE is installed, there are 16 available channels.

Encode Tab

The Encode tab displays a sub-tab for each channel that is configured to encode data. (**Figure 22**) Each channel sub-tab is organized into two areas. The left area displays the read-only fields that report the status, format, and timing for the channel. The right area displays the options for configuring and managing the specific channel, and includes the Input Status read-only fields.

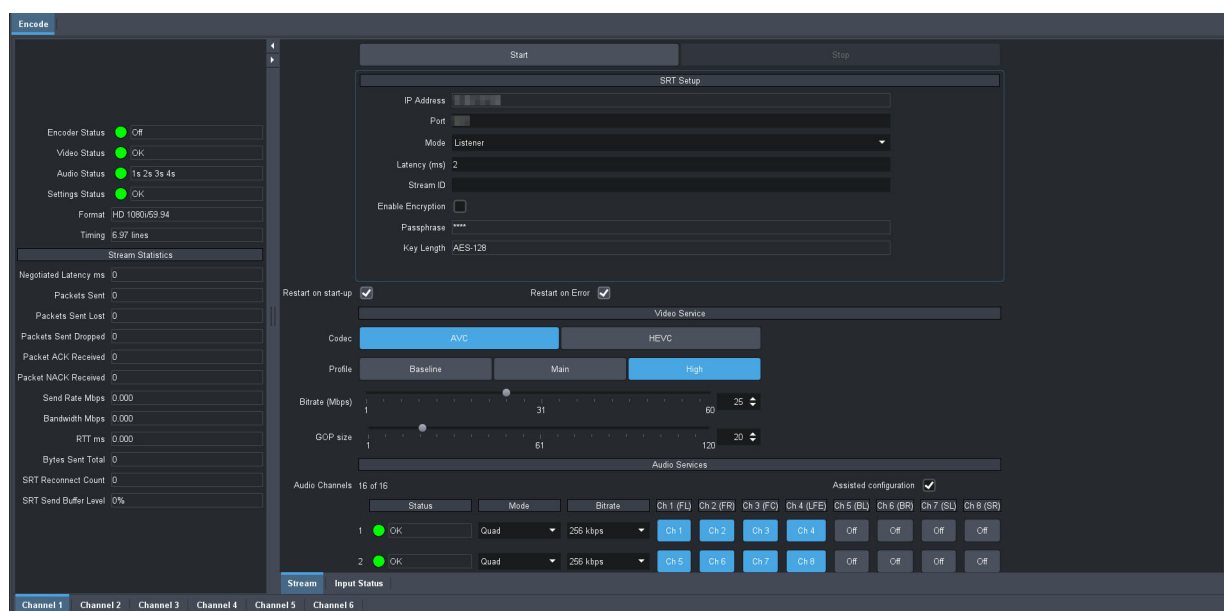


Figure 22 Example of an OSG-8971 > Encode > Channel 1 Interface in DashBoard

Table 21 summarizes the read-only information displayed in the left pane of each Encode > Channel sub-tab.

Table 21 OSG-8971 — Encode > Channel # > Status

Item	Parameters	Description
Encoder Status	Playing	A valid peer connection is established using the current settings; the stream is active
	Idling	The encoder has started but is in a transient state; first step after the Start button is clicked
	Ready	The encoder is ready to stream; second step after the Start button is clicked
	Paused	The encoder is in a transient state; third step after the Start button is clicked
	Connecting	The encoder is waiting for a peer connection to be established
	Pipeline error	The encoder encountered an error in connection
	Network error	The peer connection was stopped
	Unreachable	Unable to control the encoder
	Missing reply	The encoder failed to answer a request to connect
	Unknown reply	The encoder received an unexpected answer on the peer connection
	Internal error	The encoder is not operating in a normal state; an error condition is detected
	Video input error	An error is detected on the SDI input
	UHD video error	An error is detected with the UHD signal
Video Status	OK (Green)	No errors are detected on the video signal of the specific SDI input
	Alarm suppressed (Green)	The OSG-8971 is not monitoring the input signal
	Unsupported Format (Yellow)	An input signal is detected on the specific SDI but the video format is not supported by the card
	Incompatible Video (Yellow)	An input signal is detected on the specific SDI but its format is not compatible with the output video format
	Not time to Ref (Yellow)	An input signal is detected on the specific SDI but the detected reference signal is incompatible with this input signal
	No Signal (Red)	Indicates one of the following issues is occurring: • the SDI input signal is not detected • the system frame rate does not match the input frame rate

Table 21 OSG-8971 — Encode > Channel # > Status (Continued)

Item	Parameters	Description
Audio Status	#a #x #s #s	Indicates the input audio status where: • # represents the audio group (e.g. 1, 2) • a represents an async audio group • x represents a missing audio group • s represents a sync audio
Settings Status	OK (Green)	Indicates correct operation with no impending changes to the settings
	Need Restart (Yellow)	Indicates a change was made in the configuration while running. You must restart the stream before the changes are applied.
Format	#	Indicates the output video format
	NA: Port directed to input	The SDI port is configured as an Output via the Setup > Encode/Decode menu
	Invalid Selection	The output video format is not supported or does not match the reference format
Timing	#	Indicates the timing offset between the video input signal and the reference signal. The unit of measure is lines and pixels with respect to the input video format.
Stream Statistics		
Negotiated Latency	# ms	Reports the minimum sender buffering delay before delivering an SRT data packet to a receiving SRT socket of the stream encoder
Packets Sent	#	Reports the total number of packets sent on the network stream
Packets Sent Lost	#	Reports the total number of error packets sent on the network stream
Packets Sent Dropped	#	Reports (with respect to the configured latency) that at the sender point, the packet was too late to be sent
Packet ACK Received	#	Reports the number of acknowledged (ACK) packets received on the network stream
Packet NACK Received	#	Reports the number of ignored ACK packets received on the network stream
Send Rate (Mbps)	#	Reports the packets sent on the network stream that was forwarded by the processor on the specified SDI
Bandwidth (Mbps)	# Mbps	Reports the amount of data the OSG-8971 is currently sending on the MEDIA port via this network stream

Table 21 OSG-8971 — Encode > Channel # > Status (Continued)

Item	Parameters	Description
RTT (ms)	#	Reports the detected latency on your network (the number of milliseconds that passed from when the OSG-8971 sent a network request and an acknowledgment was received)
Bytes Sent Total	#	Reports the amount of data the OSG-8971 sent on the MEDIA port via this network stream since the Start button was selected
SRT Reconnect Count	#	Indicates the number of SRT managed reconnections (in case of a momentarily loss of network)
SRT Sent Buffer Level	# (# max)	The maximum value is the highest level recorded since the stream started

Stream Sub-tab

The Stream sub-tab enables you to configure and use the Encode channel. (**Figure 23**)

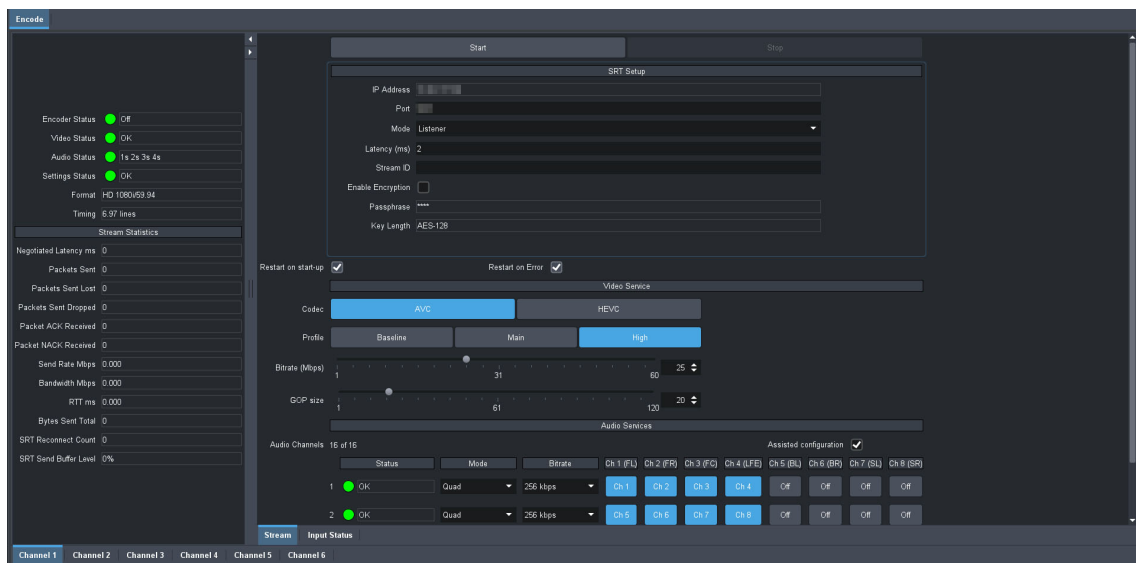


Figure 23 Example of an Encode > Channel 1 > Stream Sub-tab

Table 22 summarizes the options displayed in each Channel > Stream sub-tab.

Table 22 OSG-8971 — Encode > Channel # > Stream

Item	Parameters	Description
Start		The stream channel is now active. The OSG-8971 connects to the stream using the credentials set in the Decode > Network Streams tab.
Stop		The stream channel is inactive. The OSG-8971 stops encoding data on this channel.
SRT Setup		

Table 22 OSG-8971 — Encode > Channel # > Stream (Continued)

Item	Parameters	Description
IP Address	###.###.###.###	Specifies the Multicast IP address for the host network connection that provides the stream
Port	#	Specifies the remote port that the OSG-8971 will try to connect to. • When the Mode is set to Caller, this field indicates the host and port used • When the Mode is set to Listener, this field displays and indicates the port used
Mode	Listener	The OSG-8971 operates as an SRT client for encoding the specified media stream. When in Listener mode, the OSG-8971 is listening on a port to establish a connection.
	Caller	The OSG-8971 operates as an SRT server for encoding the specified media stream. When in Caller mode, the OSG-8971 sends out a message to the IP address and port to connect.
	Rendezvous	The OSG-8971 operates within a network with a firewall. The SRT end points auto-negotiate the port settings.
Latency (ms)	#	Defines the minimum receiver buffering delay before transmitting an SRT data packet
Stream ID	#	Assigns a unique identifier to the stream when the Mode is set to Caller. When the Mode is set to Listener, this field is not applicable.
Enable Encryption	Selected	Enables data encryption in transit using AES. The Password and Key Length fields are now editable.
	Cleared	Disables data encryption
Passphrase ^a	<text>	Determines the password that must be the same for both peers, or the connection will be rejected by the receiver and fail. The password must be 10-80 characters long.
Key Length ^b	Default	Defaults key length to 128-bit to encrypt the data
	AES-128	Uses 128-bit key length to encrypt the data
	AES-192	Uses 192-bit key length to encrypt the data
	AES-256	Uses 256-bit key length to encrypt the data

Table 22 OSG-8971 — Encode > Channel # > Stream (Continued)

Item	Parameters	Description
Restart on start-up	Selected	This encode channel will automatically start after a reboot or once the OSG-8971 comes online after a loss of power
	Cleared	Disables this feature
Restart on error	Selected	This encode channel will automatically start after an error condition is detected
	Cleared	Disables this feature
Video Service		
Codec	AVC	Uses the H.264 (MPEG-4 Part 10) codec to encode the stream channel
	HEVC	Uses the H.265 (MPEG-H Part 2) codec to encode the stream channel
Profile	Baseline	For use in low powered systems. Uses a compression ratio of approximately 1000:1 (compresses a 1Gbps stream to 1Mbps).
	Main	For use with H.264 codec to a maximum resolution of 8K UHD
	High	For use with broadcast or storage formats. Uses a compression ratio of 2000:1 (compresses a 2Gbps stream to 1Mbps).
Bitrate (Mbps)	#	Sets the upstream data transfer rate; the number of bytes received in the last field
GOP size	#	Specifies the size of the Group of Pictures (GOP) structure in the encoded channel
Audio Services > Group #^c		
Audio Channels (read-only)	x of y	Reports the number of audio channels allocated where: • x represents the number of channels in use • y represents the total number of available audio channels
Assisted configuration	Selected	Automates 1:1 channel mapping. You can still edit the audio channel mapping as required.
	Cleared	Disables this feature
Status (read-only)	OK (Green)	Displays the status of the specified Group # channel # input
	No Input (Red)	
	Async (Red)	
	Too many channels (Red)	Indicates that the user attempted to assign a Mode that requires more channels than the number of currently available channels

Table 22 OSG-8971 — Encode > Channel # > Stream (Continued)

Item	Parameters	Description
Mode	None	Specifies the type of audio data and number of channels to include in the encoded stream
	Mono	
	Stereo	
	Quad	
	5.1 Surround	
	7.1 Surround	
Bitrate	#	Sets the upstream data transfer rate; the number of bytes received in the last field. This value is automatically set by the Mode.
Channel #	On	The channel is embedded in the encoded stream
	Off	The channel is not embedded in the encoded stream
	Mute	• Mutes the specified channel • The channel is no longer embedded

- Displays only when the Enable Encryption box is selected.
- Displays only when the Enable Encryption box is selected.
- This area displays 8 audio channels by default. If the OSG-8971-A16-LICENSE is installed, there are 16 audio channels.

Input Status Sub-tab

Table 23 summarizes the options displayed in each Channel > Input Status sub-tab.

Table 23 OSG-8971 — Encode > Channel # > Input Status

Item	Parameters	Description
Video Format (read-only)	#	Indicates the detected SDI input format and bitrate
Status (read-only)	OK (Green)	No errors are detected on the video signal of the specific encoder channel
	Alarm suppressed (Green)	The OSG-8971 is not monitoring the input signal
	Unsupported Format (Yellow)	An SDI input signal is detected but the video is not supported by the OSG-8971
	Not time to Ref (Yellow)	An SDI input signal is detected but the reference signal is incompatible with this input signal
	No Signal (Red)	Indicates one of the following issues is occurring: • the SDI input signal is not detected • the system frame rate does not match the input frame rate

Table 23 OSG-8971 — Encode > Channel # > Input Status (Continued)

Item	Parameters	Description
Alarm Enable	Selected*	An alarm is reported during a loss of the specified input or the format is incompatible for the specified input
	Cleared	Disables this alarm
CRC Errors (read-only)	#	Displays the count of the CRC errors on the video input. This counter is reset on loss of video, or by user request. The counter is non-latching, and the count can roll over the counter.
Reset CRC Errors	Resets the CRC Errors field	
Embedded Audio Status > Group #		
Channel # (read-only)	PCM	The channel is PCM audio
	Non-PCM	The channel is non-PCM audio
Async Alarm	Selected	An alarm is reported when the embedded audio is incompatible
	Cleared	Disables the alarm
Presence Alarm	Selected	An alarm is reported when the embedded audio is not present
	Cleared	Disables the alarm

Technical Specifications

This chapter provides technical information for the OSG-8971.

★ Specifications are subject to change without notice.

Supported Rear Modules

- R4-8971 (8322AR-331) rear module

Supported Video Formats

Encoders and Decoders

Table 24 Supported Video Formats — Encoding and Decoding

Video Format
HD Formats
720p 50Hz
720p 59.94Hz
1080i 50Hz
1080i 59.94Hz
1080p 50Hz
1080p 59.94Hz
UHD Formats^a
2160p 50Hz
2160p 59.94Hz

a. An OSG-8971+UHD license must be enabled.

Test Patterns

Table 25 Supported Video Formats — Test Patterns

Resolution (lines)	Frame Rate (Hz)
720p	50
	59.94
1080i	50
	59.94
1080p	50
	59.94
2160p ^a	50
	59.94

a. An OSG-8971+UHD license must be enabled.

SDI Specifications

Table 26 Technical Specifications — SDI Ports

Item	Specifications
Number of Ports	If the UHD Mode is not licensed: • up to 6 x 3G / 1.5G If the UHD Mode is licensed ^a : • up to 6 x 3G / 1.5G • 2 x 12G
Connector Type	Bi-directional HD-BNC
Input(s)	
Standards Accommodated	1.485Gbps Component, SMPTE 292M
	2.97Gbps Component, SMPTE 424M
	5.94Gbps Component, SMPTE ST-2081
	11.88Gbps Component, SMPTE ST-2082
Impedance	75ohms
Return Loss	>15dB to 1.5GHz
	>10dB to 3GHz
	>7dB to 6GHz
	>4dB to 12GHz
Equalization	200m @ 1.485Gbps
	100m @ 2.97Gbps
	70m @ 5.94Gbps (SDI IN 1 and SDI IN 2 only)
	55m @ 11.88Gbps (SDI IN 1 and SDI IN 2 only)
Output(s)	
Standards Accommodated	1.485Gbps Component, SMPTE 292M
	2.97Gbps Component, SMPTE 424M
	5.94Gbps Component, SMPTE ST-2081
	11.88Gbps Component, SMPTE ST-2082
Impedance	75ohms
Return Loss	>15dB to 1.5GHz
	>10dB to 3GHz
	>7dB to 6GHz
	>4dB to 12GHz
Signal Level	±800mV 10%
DC Offset	0V +/- 50mV

Table 26 Technical Specifications — SDI Ports (Continued)

Item		Specifications
Rise and Fall Time (20-80%)	1.485Gbps:	<270ps, <100ps difference
	2.97Gbps:	<135ps, <50ps difference
	5.94Gbps:	<80ps, <30ps difference
	11.88Gbps:	<45ps, <18ps difference
Jitter	1.485Gbps:	<1.0UI 10Hz-100kHz, <0.2UI above 100kHz
	2.97Gbps:	<2.0UI 10Hz-100kHz, <0.3UI above 100kHz
	5.94Gbps:	<2.0UI 10Hz-100kHz, <0.3UI above 100kHz
	11.88Gbps:	<2.0UI 10Hz-100kHz, <0.3UI above 100kHz, band limit @1188MHz
Overshoot	<10%	

a. UHD support requires an OSG-8971+UHD license to be enabled.

MEDIA Port Specifications

Table 27 Technical Specifications — MEDIA Port

Item		Specifications
Number of Ports	1	
Standards Accommodated	10/100/1000BASE-T	
Connector Type	RJ45 (1GbE)	

Environment

Table 28 Technical Specifications — Environment

Item		Specifications
Max. Ambient Temperature	40°C (104°F)	

Power

Table 29 Technical Specifications — Power

Item		Specifications
Max. Power Consumption	40W	

Service Information

Routine maintenance to this product is not required. In the event of problems with your card, the following basic troubleshooting checklist may help identify the source of the problem. If the frame still does not appear to be working properly after checking all possible causes, please contact your openGear products distributor, or the Technical Support department at the numbers listed under the “**Contacting Ross Video Technical Support**”.

1. **Visual Review** — Performing a quick visual check may reveal many problems, such as connectors not properly seated or loose cables. Check the card, the frame, and any associated peripheral equipment for signs of trouble.
2. **Power Check** — Inspect the power indicator LED on the distribution frame front panel for the presence of power. If the power LED is not illuminated, verify that the power cable is connected to a power source and that power is available at the power main. Confirm that the power supplies are fully seated in their slots. If the power LED is still not illuminated, replace the power supply with one that is verified to work.
3. **Input Signal Status** — Verify that source equipment is operating correctly and that a valid signal is being supplied.
4. **Output Signal Path** — Verify that destination equipment is operating correctly and receiving a valid signal.
5. **Unit Exchange** — Exchanging a suspect unit with a unit that is known to be working correctly is an efficient method for localizing problems to individual units.

Reloading the Software on the Card

In the unlikely event of a complete card failure, you may be instructed by a Ross Technical Support specialist to perform a complete software reload on the card.

To reload the software on the card

1. Eject the card from the frame.
2. Press and hold the **Bootload** button, while re-inserting the card into the frame.
3. Release the button.
 - If a new software load is not sent to the card within 60 seconds, the card will attempt to re-start with its last operational software load.
 - Software loads can be sent to the card via the connection on the rear of the frame.

Warranty and Repair Policy

The OSG-8971 is warranted to be free of any defect with respect to performance, quality, reliability, and workmanship for a period of FIVE (5) years from the date of shipment from our factory. In the event that your card proves to be defective in any way during this warranty period, Ross Video Limited reserves the right to repair or replace this piece of equipment with a unit of equal or superior performance characteristics.

Should you find that this card has failed after your warranty period has expired, we will repair your defective product should suitable replacement components be available. You, the owner, will bear any labor and/or part costs incurred in the repair or refurbishment of said equipment beyond the FIVE (5) year warranty period.

In no event shall Ross Video Limited be liable for direct, indirect, special, incidental, or consequential damages (including loss of profits) incurred by the use of this product. Implied warranties are expressly limited to the duration of this warranty.

This User Manual provides all pertinent information for the safe installation and operation of your openGear product. Ross Video policy dictates that all repairs to the card are to be conducted only by an authorized Ross Video Limited factory representative. Therefore, any unauthorized attempt to repair this product, by anyone other than an authorized Ross Video Limited factory representative, will automatically void the warranty. Please contact Ross Video Technical Support for more information.

In Case of Problems

Should any problem arise with your card, please contact the Ross Video Technical Support Department. (Contact information is supplied at the end of this publication.)

A Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions, should you wish our factory to repair your card. If required, a temporary replacement frame will be made available at a nominal charge. Any shipping costs incurred will be the responsibility of you, the customer. All products shipped to you from Ross Video Limited will be shipped collect.

The Ross Video Technical Support Department will continue to provide advice on any product manufactured by Ross Video Limited, beyond the warranty period without charge, for the life of the equipment.

Software Licenses

The OSG-8971 may use one or more software components subject to the following licenses.

BSD

Copyright (c) 1991,1993, The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Kenneth Almquist.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. <BSD Advertising Clause omitted per the July 22, 1999 licensing change <ftp://ftp.cs.berkeley.edu/pub/4bsd/README.Impt.License.Change>> California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Dual GPL

Portions of this software are copyright (C) 1996-2002 The FreeType Project (www.freetype.org). All rights reserved.

This project is also covered under the GPL v2.

GPL

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

Preamble

The GNU General Public License is a free, copyleft license for software and other kinds of works.

The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program—to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

Developers that use the GNU GPL protect your rights with two steps: (1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.

For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.

Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS

0. Definitions.

"This License" refers to version 3 of the GNU General Public License.

"Copyright" also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

"The Program" refers to any copyrightable work licensed under this License. Each licensee is addressed as "you". "Licensees" and "recipients" may be individuals or organizations.

To "modify" a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a "modified version" of the earlier work or a work "based on" the earlier work.

A "covered work" means either the unmodified Program or a work based on the Program.

To "propagate" a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.

To "convey" a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.

An interactive user interface displays "Appropriate Legal Notices" to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

1. Source Code.

The "source code" for a work means the preferred form of the work for making modifications to it. "Object code" means any non-source form of a work.

A "Standard Interface" means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.

The "System Libraries" of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A "Major Component", in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The "Corresponding Source" for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work's System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source.

The Corresponding Source for a work in source code form is that same work.

2. Basic Permissions.

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law.

You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you.

Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

3. Protecting Users' Legal Rights From Anti-Circumvention Law.

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures.

When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

4. Conveying Verbatim Copies.

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

5. Conveying Modified Source Versions.

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

- The work must carry prominent notices stating that you modified it, and giving a relevant date.
- The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to "keep intact all notices".
- You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.
- If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.

A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an "aggregate" if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation's users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

6. Conveying Non-Source Forms.

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

- Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.
- Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.
- c) Convey individual copies of the object code with a copy of the written offer to provide the Corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.

- d. d) Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.
- e. e) Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d.

A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A "User Product" is either (1) a "consumer product", which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, "normally used" refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

"Installation Information" for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made.

If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM).

The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network.

Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

7. Additional Terms.

"Additional permissions" are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission.

Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- a. Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or
- b. Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or
- c. Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- d. Limiting the use for publicity purposes of names of licensors or authors of the material; or
- e. Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- f. Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered "further restrictions" within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms.

Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

8. Termination.

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

9. Acceptance Not Required for Having Copies.

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

10. Automatic Licensing of Downstream Recipients.

Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.

An "entity transaction" is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever

licenses to the work the party's predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts.

You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

11. Patents.

A "contributor" is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor's "contributor version".

A contributor's "essential patent claims" are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, "control" includes the right to grant patent sublicenses in a manner consistent with the requirements of this License.

Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a "patent license" is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To "grant" such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.

If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. "Knowingly relying" means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.

If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.

A patent license is "discriminatory" if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.

Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

12. No Surrender of Others' Freedom.

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

13. Use with the GNU Affero General Public License.

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

14. Revised Versions of this License.

The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation.

If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Program.

Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

15. Disclaimer of Warranty.

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. Limitation of Liability.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

17. Interpretation of Sections 15 and 16.

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

LGPL

GNU LESSER GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

This version of the GNU Lesser General Public License incorporates the terms and conditions of version 3 of the GNU General Public License, supplemented by the additional permissions listed below.

0. Additional Definitions.

As used herein, "this License" refers to version 3 of the GNU Lesser General Public License, and the "GNU GPL" refers to version 3 of the GNU General Public License.

"The Library" refers to a covered work governed by this License, other than an Application or a Combined Work as defined below.

An "Application" is any work that makes use of an interface provided by the Library, but which is not otherwise based on the Library. Defining a subclass of a class defined by the Library is deemed a mode of using an interface provided by the Library.

A "Combined Work" is a work produced by combining or linking an Application with the Library. The particular version of the Library with which the Combined Work was made is also called the "Linked Version".

The "Minimal Corresponding Source" for a Combined Work means the Corresponding Source for the Combined Work, excluding any source code for portions of the Combined Work that, considered in isolation, are based on the Application, and not on the Linked Version.

The "Corresponding Application Code" for a Combined Work means the object code and/or source code for the Application, including any data and utility programs needed for reproducing the Combined Work from the Application, but excluding the System Libraries of the Combined Work.

1. Exception to Section 3 of the GNU GPL.

You may convey a covered work under sections 3 and 4 of this License without being bound by section 3 of the GNU GPL.

2. Conveying Modified Versions.

If you modify a copy of the Library, and, in your modifications, a facility refers to a function or data to be supplied by an Application that uses the facility (other than as an argument passed when the facility is invoked), then you may convey a copy of the modified version:

- a. under this License, provided that you make a good faith effort to ensure that, in the event an Application does not supply the function or data, the facility still operates, and performs whatever part of its purpose remains meaningful, or
- b. under the GNU GPL, with none of the additional permissions of this License applicable to that copy.

3. Object Code Incorporating Material from Library Header Files.

The object code form of an Application may incorporate material from a header file that is part of the Library. You may convey such object code under terms of your choice, provided that, if the incorporated material is not limited to numerical parameters, data structure layouts and accessors, or small macros, inline functions and templates (ten or fewer lines in length), you do both of the following:

- a. Give prominent notice with each copy of the object code that the Library is used in it and that the Library and its use are covered by this License.
- b. Accompany the object code with a copy of the GNU GPL and this license document.

4. Combined Works.

You may convey a Combined Work under terms of your choice that, taken together, effectively do not restrict modification of the portions of the Library contained in the Combined Work and reverse engineering for debugging such modifications, if you also do each of the following:

- a. Give prominent notice with each copy of the Combined Work that the Library is used in it and that the Library and its use are covered by this License.
- b. Accompany the Combined Work with a copy of the GNU GPL and this license document.
- c. For a Combined Work that displays copyright notices during execution, include the copyright notice for the Library among these notices, as well as a reference directing the user to the copies of the GNU GPL and this license document.
- d. Do one of the following:
 - 1) Convey the Minimal Corresponding Source under the terms of this License, and the Corresponding Application Code in a form suitable for, and under terms that permit, the user to recombine or relink the Application with a modified version of the Linked Version to produce a modified Combined Work, in the manner specified by section 6 of the GNU GPL for conveying Corresponding Source.
 - 2) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (a) uses at run time a copy of the Library already present on the user's computer system, and (b) will operate properly with a modified version of the Library that is interface-compatible with the Linked Version.
- e. Provide Installation Information, but only if you would otherwise be required to provide such information under section 6 of the GNU GPL, and only to the extent that such information is necessary to install and execute a modified version of the Combined Work produced by recombining or relinking the Application with a modified version of the Linked Version. (If you use option 4d0, the Installation Information must accompany the Minimal Corresponding Source and Corresponding Application Code. If you use option 4d1, you must provide the Installation Information in the manner specified by section 6 of the GNU GPL for conveying Corresponding Source.)

5. Combined Libraries.

You may place library facilities that are a work based on the Library side by side in a single library together with other library facilities that are not Applications and are not covered by this License, and convey such a combined library under terms of your choice, if you do both of the following:

- a. Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities, conveyed under the terms of this License.
- b. Give prominent notice with the combined library that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

6. Revised Versions of the GNU Lesser General Public License.

The Free Software Foundation may publish revised and/or new versions of the GNU Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library as you received it specifies that a certain numbered version of the GNU Lesser General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that published version or of any later version published by the Free Software Foundation. If the Library as you received it does not specify a version number of the GNU Lesser General Public License, you may choose any version of the GNU Lesser General Public License ever published by the Free Software Foundation.

If the Library as you received it specifies that a proxy can decide whether future versions of the GNU Lesser General Public License shall apply, that proxy's public statement of acceptance of any version is permanent authorization for you to choose that version for the Library.

MIT

Copyright 1987, 1988 by MIT Student Information Processing Board.

Permission to use, copy, modify, and distribute this software and its documentation for any purpose is hereby granted, provided that the names of M.I.T. and the M.I.T. S.I.P.B. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. M.I.T. and the M.I.T. S.I.P.B. make no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

zlib

Copyright (C) 1995-1998 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
3. This notice may not be removed or altered from any source distribution. Jean-loup Gailly Mark Adler jloup@gzip.org madler@alumni.caltech.edu

The data format used by the zlib library is described by RFCs (Request for Comments) 1950 to 1952 in the files <ftp://ds.internic.net/rfc/rfc1950.txt> (zlib format), [rfc1951.txt](ftp://ds.internic.net/rfc/rfc1951.txt) (deflate format) and [rfc1952.txt](ftp://ds.internic.net/rfc/rfc1952.txt) (gzip format).

Glossary

The following terms are used throughout this guide:

AVC — refers to the H.264 or MPEG-4 Part 10 codec.

CBR — Constant Bit Rate

DHCP — Dynamic Host Configuration Protocol

GOP — Group of Pictures

HEVC — High Efficiency Video Coding. Refers to the H.265 or MPEG-H Part 2 codec.

Network Controller Card — refers to the MFC-OG3-N or MFC-OGX-N.

NTP — Network Time Protocol

Operator and **User** — the person who uses the OSG-8971.

SRT — Secure Reliable Transport protocol

Tree View — the area located to the left pane of the DashBoard window. This area displays devices in a tree structure.

URI — Uniform Resource Identifier

VBR — Variable Bit Rate

WebRTC — Web Real-Time Communication

