

Auxiliary Control Panel Mounting


The auxiliary control panel is designed to mount onto the back of the Acuity control panels that have the same number of source buttons.

- AP-AUX2RU16 — rack/desk mount only
- AP-AUX2RU24 — A1S, A2M, A3M
- AP-AUX2RU32 — A2X, A3
- AP-AUX2RU40 — A4

1


The auxiliary control panel comes pre-installed with the mounting bracket for the control panel it is intended to be installed on.

Note: The AP-AUX2RU16 does not mount onto a panel and comes with the side mounting brackets instead.

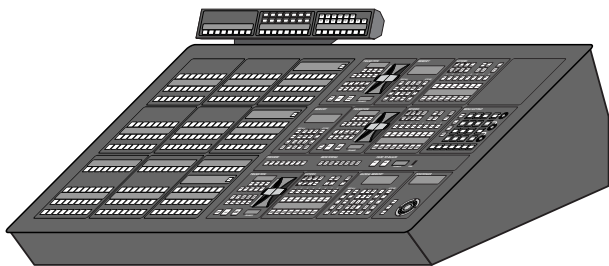

2

Align the auxiliary control panel to the back of the control panel and install the three (3) screws at either end of the mounting bracket.

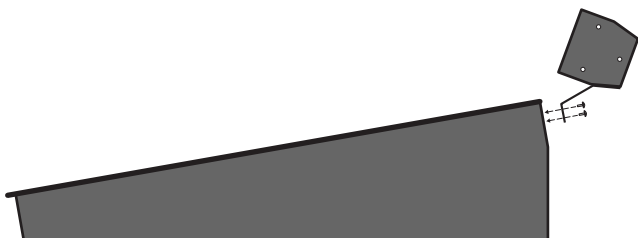


3


Cable the auxiliary control panel as outlined on the QuickStart poster that came with your switcher.

or

The auxiliary control panel can be mounted into a desk (or equipment rack for the AP-AUX2RU16) or onto a desk using the provided side mounting brackets.



In Desk

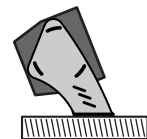


On Desk

Both brackets mount onto the panel in the same manner.

1


The auxiliary control panel comes pre-installed with the mounting bracket for mounting on a control panel. Remove this bracket by removing the three (3) screws at either end of the mounting bracket.

Note: The AP-AUX2RU16 comes with the rack mounting brackets installed.

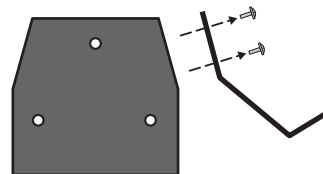


2

Install the side mounting brackets onto both sides of the auxiliary control panel using the six (6) screws provided.



3

Use the two (2) mounting holes on both mounting brackets to secure the auxiliary control panel to the desk or rack.

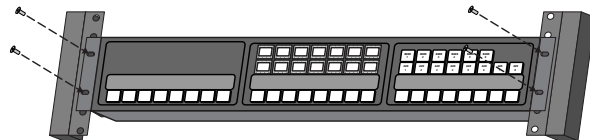

4

Cable the auxiliary control panel as outlined on the QuickStart poster that came with your switcher.

ROSS