

openGear

---

ADC-8434-A User Guide

# Thank You for Choosing Ross

You've made a great choice. We expect you will be very happy with your purchase of Ross Technology.

Our mission is to:

1. Provide a Superior Customer Experience
  - offer the best product quality and support
2. Make Cool Practical Technology
  - develop great products that customers love

Ross has become well known for the Ross Video Code of Ethics. It guides our interactions and empowers our employees. I hope you enjoy reading it below.

If anything at all with your Ross experience does not live up to your expectations be sure to reach out to us at [solutions@rossvideo.com](mailto:solutions@rossvideo.com).



David Ross  
CEO, Ross Video  
[dross@rossvideo.com](mailto:dross@rossvideo.com)

## Ross Video Code of Ethics

Any company is the sum total of the people that make things happen. At Ross, our employees are a special group. Our employees truly care about doing a great job and delivering a high quality customer experience every day. This code of ethics hangs on the wall of all Ross Video locations to guide our behavior:

1. We will always act in our customers' best interest.
2. We will do our best to understand our customers' requirements.
3. We will not ship crap.
4. We will be great to work with.
5. We will do something extra for our customers, as an apology, when something big goes wrong and it's our fault.
6. We will keep our promises.
7. We will treat the competition with respect.
8. We will cooperate with and help other friendly companies.
9. We will go above and beyond in times of crisis. *If there's no one to authorize the required action in times of company or customer crisis - do what you know in your heart is right. (You may rent helicopters if necessary.)*

# ADA-8434-A · User Guide

- Ross Part Number: **8434ADR-004-02**
- Revision: 2
- Release Date: October 2, 2025

The information contained in this Guide is subject to change without notice or obligation.

## Copyright

©2025 Ross Video Limited, Ross®, and any related marks are trademarks or registered trademarks of Ross Video Limited. All other trademarks are the property of their respective companies. PATENTS ISSUED and PENDING. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording or otherwise, without the prior written permission of Ross Video. While every precaution has been taken in the preparation of this document, Ross Video assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

## Patents

Patent numbers US 7,034,886; US 7,508,455; US 7,602,446; US 7,802,802 B2; US 7,834,886; US 7,914,332; US 8,307,284; US 8,407,374 B2; US 8,499,019 B2; US 8,519,949 B2; US 8,743,292 B2; GB 2,419,119 B; GB 2,447,380 B; and other patents pending.

## Notices

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as commitment by Ross Video Limited. Ross Video Limited assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

## Safety Notices

Refer to the “**Important Regulatory and Safety Notices**” document that accompanied your product.

## Statement of Compliance

This product has been determined to be compliant with the applicable standards, regulations, and directives for the countries where the product is marketed.

Compliance documentation, such as certification or Declaration of Compliance for the product is available upon request by contacting [techsupport@rossvideo.com](mailto:techsupport@rossvideo.com). Please include the product; model number identifiers and serial number and country that compliance information is needed in request.

## EMC Notices

### US FCC Part 15

This equipment has been tested and found to comply with the limits for a class A Digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a Commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



**Notice** — *Changes or modifications to this equipment not expressly approved by Ross Video Ltd. could void the user's authority to operate this equipment.*

**Canada**

This Class "A" digital apparatus complies with Canadian ICES-003 and part 15 of the FCC Rules.  
Cet appareil numerique de la classe "A" est conforme a la norme NMB-003 du Canada.

**European Union**

This equipment is in compliance with the essential requirements and other relevant provisions established under regulation (EC) No 765/2008 and Decision No 768/2008/EC referred to as the "New Legislative Framework".



**Warning** — *This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.*

**Australia/New Zealand**

This equipment is in compliance with the provisions established under the Radiocommunications Act 1992 and Radiocommunications Labeling (Electromagnetic Compatibility) Notice 2008.

**Korea**

This equipment is in compliance with the provisions established under the Radio Waves Act.

Class A equipment (Broadcasting and communications service for business use)

This device is a business-use (Class A) EMC-compliant device. The seller and user are advised to be aware of this fact. This device is intended for use in areas outside home.

Type of Equipment	User's Guide
A급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.
Class A Equipment (Industrial Broadcasting & Communication Equipment)	This equipment is <b>Industrial (Class A) electromagnetic wave suitability equipment</b> and seller or user should take notice of it, and this equipment is to be used in the places except for home.

**International**

This equipment has been tested under the requirements of CISPR 22:2008 or CISPR 32:2015 and found to comply with the limits for a Class A Digital device.



**Notice** — *This is a Class A product. In domestic environments, this product may cause radio interference, in which case the user may have to take adequate measures.*

## Maintenance/User Serviceable Parts

Routine maintenance to this openGear product is not required. This product contains no user serviceable parts. If the module does not appear to be working properly, please contact Technical Support using the numbers listed in "**Contact Us**" of this manual. All openGear products are covered by a generous 5-year warranty and will be repaired without charge for materials or labor within this period. See the "**Warranty and Repair Policy**" section in this manual for details.

## Environmental Information

The equipment may contain hazardous substances that could impact health and the environment. To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Ross Video encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.



If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration. You can also contact Ross Video for more information on the environmental performances of our products.

## Company Address

**ROSS**

### Ross Video Limited

8 John Street  
Iroquois, Ontario  
Canada, K0E 1K0

### Ross Video Incorporated

P.O. Box 880  
Ogdensburg, New York  
USA 13669-0880

---

General Business Office: (+1) 613 • 652 • 4886

Fax: (+1) 613 • 652 • 4425

Technical Support: (+1) 613 • 652 • 4886

After Hours Emergency: (+1) 613 • 349 • 0006

E-mail (Technical Support): [techsupport@rossvideo.com](mailto:techsupport@rossvideo.com)

E-mail (General Information): [solutions@rossvideo.com](mailto:solutions@rossvideo.com)

Website: <http://www.rossvideo.com>



# Contents

<b>Introduction</b>	<b>9</b>
Related Publications .....	9
Documentation Conventions .....	9
Interface Elements .....	9
User Entered Text .....	9
Referenced Guides .....	10
Menu Sequences .....	10
Important Instructions .....	10
Contacting Technical Support .....	10
<b>Before You Begin</b>	<b>11</b>
Features .....	11
Functional Block Diagram .....	11
User Interfaces .....	12
DashBoard Control System .....	12
Card-edge Controls .....	12
<b>Hardware Overview</b>	<b>13</b>
Card Overview .....	13
SW1 — Remote Control .....	13
SW2 — DIP Switch Control .....	13
SW3 .....	14
SW4 .....	14
SW5, SW6 — Output Mode Selection 1 .....	14
SW7, SW8 — Output Mode Selection 2 .....	14
SW9, SW10 — Input Level Selection .....	14
Configuring the DIP Switches .....	14
Enabling Card-edge Control .....	14
Setting the Output Modes .....	14
Setting the Nominal Input Level .....	15
Monitoring Features .....	15
Status LEDs on the ADC-8434-A .....	16
<b>Physical Installation</b>	<b>17</b>
Before You Begin .....	17
Static Discharge .....	17
Unpacking .....	17
Supported Rear Modules .....	17
Installing a Rear Module .....	17
Installing the ADC-8434-A .....	18
<b>Cabling</b>	<b>19</b>
DFR-8310 Series Frame Cabling .....	19
DFR-8321, OG3-FR, and OGX-FR Series Frame Cabling .....	19
<b>Getting Started</b>	<b>21</b>
Launching DashBoard .....	21
Accessing the ADC-8434-A Interfaces in DashBoard .....	21

Upgrading the Software	23
DashBoard Menus	25
Status Tabs .....	25
Card Info Tab .....	25
Card Status Tab .....	25
Settings Tab .....	26
Technical Specifications	27
Service Information	29
Troubleshooting Checklist .....	29
Warranty and Repair Policy .....	29
Glossary	31

# Introduction

This guide covers the installation, configuration, and use of the ADC-8434-A Quad Analog Audio to AES Converter. The following chapters are included:

- “**Introduction**” summarizes the guide and provides important terms, and conventions.
- “**Before You Begin**” provides general information to keep in mind before installing and configuring your card.
- “**Hardware Overview**” provides a basic introduction to the hardware and monitoring features of the card. This chapter also outlines how to configure the card-edge DIP Switches.
- “**Physical Installation**” provides instructions for the physical installation of the card and its rear module.
- “**Cabling**” provides information on cabling each supported rear module.
- “**Getting Started**” provides a general overview of the accessing the ADC-8434-A in DashBoard.
- “**Upgrading the Software**” provides instructions for upgrading the software for your ADC-8434-A using DashBoard.
- “**DashBoard Menus**” summarizes the ADC-8434-A menus, items, and parameters in DashBoard.
- “**Technical Specifications**” provides technical specification details on the ADC-8434-A.
- “**Service Information**” provides information on the warranty and repair policy for your card.
- “**Glossary**” provides a list of terms used throughout this guide.

## Related Publications

It is recommended to consult the following Ross documentation before installing and configuring your ADC-8434-A:

- ***DashBoard User Guide***, Ross Part Number: 8351DR-004
- ***MFC-OG3-N and MFC-8322-S User Guide***, Ross Part Number: 8322DR-004
- ***OG3-FR Series User Guide***, Ross Part Number: 8322DR-005
- ***OGX-FR Series User Guide***, Ross Part Number: 8322DR-204

## Documentation Conventions

Special text formats are used in this guide to identify parts of the user interface, text that a user must enter, or a sequence of menus and sub-menus that must be followed to reach a particular command.

### Interface Elements

Bold text is used to identify a user interface element such as a dialog box, menu item, or button. For example:

In the **Network** tab, click **Apply**.

### User Entered Text

Courier text is used to identify text that a user must enter. For example:

In the **Language** box, enter `English`.

## Referenced Guides

Text set in bold and italic represent the titles of referenced guides, manuals, or documents. For example:

For more information, refer to the ***DashBoard User Manual***.

## Menu Sequences

Menu arrows are used in procedures to identify a sequence of menu items that you must follow. For example, if a step reads "**File > Save As**," you would click the **File** menu and then click **Save As**.

## Important Instructions

Star icons are used to identify important instructions or features. For example:

- ★ Contact your IT department before connecting to your facility network to ensure that there are no conflicts. They will provide you with an appropriate value for the IP Address, Subnet Mask, and Gateway for your device.

## Contacting Technical Support

At Ross Video, we take pride in the quality of our products, but if problems occur, help is as close as the nearest telephone.

Our 24-hour Hot Line service ensures you have access to technical expertise around the clock. After-sales service and technical support is provided directly by Ross Video personnel. During business hours (Eastern Time), technical support personnel are available by telephone. After hours and on weekends, a direct emergency technical support phone line is available. If the technical support person who is on call does not answer this line immediately, a voice message can be left and the call will be returned shortly. This team of highly trained staff is available to react to any problem and to do whatever is necessary to ensure customer satisfaction.

- **Toll Free Technical Support (North America):** 1-844-652-0645
- **Toll Free Technical Support (International):** +800 1005 0100
- **Technical Support:** (+1) 613-652-4886
- **After Hours Emergency:** (+1) 613-349-0006
- **E-mail:** [techsupport@rossvideo.com](mailto:techsupport@rossvideo.com)
- **Website:** <http://www.rossvideo.com>

# Before You Begin

The ADC-8434-A Quad Analog Audio to AES Converter is a broadcast quality, modular product used to convert four analog audio channels to two, 24bit, unbalanced AES-3id signals. The ADC-8434-A accepts four analog audio signals (two stereo pairs) and provides two copies of each of the two AES / EBU output signals.

The conversion from analog to digital is performed with 24bit precision. The ADC-8434-A supports sampling rates of 32kHz to 96kHz with AES (DARS) reference, video black reference, or 48kHz internal reference. The AES output frequency (32kHz to 96kHz) can be determined by the reference selected as long as it is a valid DARS Audio reference.

## Features

The following features make the ADC-8434-A the best solution for analog to AES conversion:

- 4 Channels of Audio Conversion
- Can synchronize to one of the two frame reference inputs, Digital Audio Reference Signal (DARS)
- Internal clock generates audio sampling frequencies of 48kHz
- Supports audio sampling frequencies from 32kHz to 96kHz
- 24-bit technology provides the highest quality signal conversion
- 75ohm unbalanced AES-3id input/output
- Balanced Analog Audio input/output
- Provides level control of output signals
- 5-year transferable warranty

## Functional Block Diagram

This section provides a functional block diagram that outlines the workflow of the ADC-8434-A.

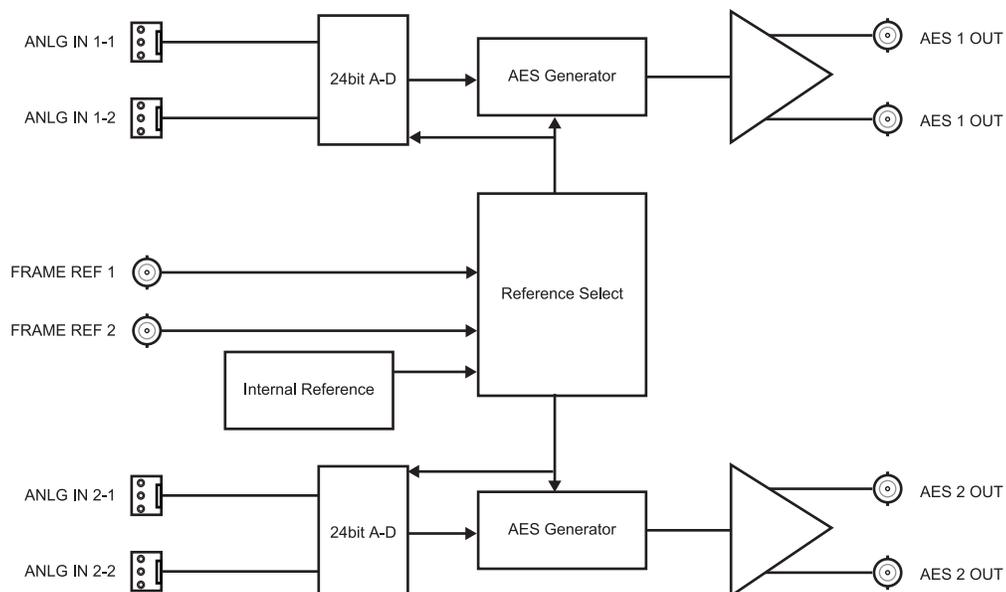


Figure 1 Simplified Block Diagram — 8310AR-036 and 8320AR-036 Full Rear Modules

## User Interfaces

The ADC-8434-A offers the following interfaces for control and monitoring.

### DashBoard Control System

DashBoard enables you to monitor and control openGear frames and cards from a computer. DashBoard communicates with other cards in the openGear frame through the Network Controller Card.

#### For More Information on...

- on the menus in DashBoard, refer to “**DashBoard Menus**”.
- on using DashBoard, refer to the ***DashBoard User Manual*** available from our website.

### Card-edge Controls

The ADC-8434-A provides card-edge controls for adjusting the gain levels, selecting the reference, and configuring remote control options. The front-edge of the ADC-8434-A also includes LEDs that display the status of the input signals. As selections are made in the menus, the LEDs display the status of the input signals.

#### For More Information on...

- on adjusting the output levels, refer to “**Card Overview**”.
- on using the DIP switches on the card-edge, refer to “**Configuring the DIP Switches**”.
- on monitoring the status using the card-edge LEDs, refer to “**Monitoring Features**”.

# Hardware Overview

This chapter provides a general overview of the user controls available on the ADC-8434-A.

## Card Overview

This section provides a general overview of the ADC-8434-A **DIP SW1-10** jumpers available on the card surface. Refer to **Figure 2** for DIP Switch locations.

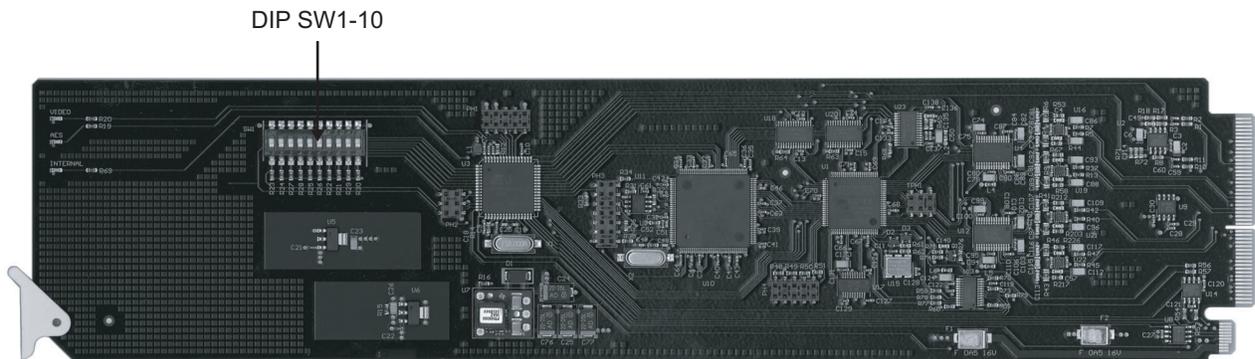


Figure 2 ADC-8434-A — Components

This section provides a brief summary of the DIP Switches of the ADC-8434-A. Refer to **Figure 2** for the DIP Switch locations. Refer to **Figure 3** for the switch designations (SW1 - SW10).

★ **Figure 3** shows all the DIP Switches in the **OFF** position.

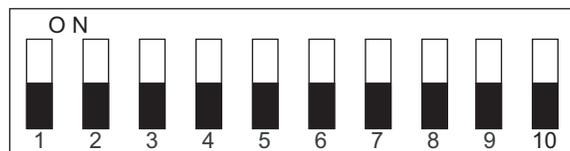


Figure 3 Jumper and Switch Locations

### SW1 — Remote Control

Use **SW1** to disable remote control of the ADC-8434-A from DashBoard.

Set **SW1** as follows:

- **ON** — Select this setting to disable remote control from DashBoard. The parameters and settings cannot be changed via DashBoard and must be changed using the card-edge controls. You can still monitor the status of the card using DashBoard.
- **OFF** — Select this setting to control the ADC-8434-A exclusively from DashBoard. The card-edge controls are ignored.

### SW2 — DIP Switch Control

Use **SW2** to determine whether DIP Switch settings are applied or ignored.

Set **SW2** as follows:

- **ON** — DIP Switch status is reported in DashBoard, and DIP Switch settings are applied. Any parameter adjustments made in DashBoard are ignored.
- **OFF** — DIP Switch status is reported in DashBoard, however DIP Switch settings are ignored. Parameter adjustments made in DashBoard are applied.

## SW3

**SW3** is used for factory service only. Do not use **SW3** unless instructed to do so by Ross Technical Support personnel.

## SW4

**SW4** is used for factory service only. Do not use **SW4** unless instructed to do so by Ross Technical Support personnel.

## SW5, SW6 — Output Mode Selection 1

**SW5** and **SW6** are used in conjunction to set the output mode of the first audio converter. Refer to “Setting the Output Modes” for details.

## SW7, SW8 — Output Mode Selection 2

**SW7** and **SW8** are used in conjunction to set the output mode of the second audio converter. Refer to “Setting the Output Modes” for details.

## SW9, SW10 — Input Level Selection

**SW9** and **SW10** are used in conjunction to specify the input level (+4dB). Refer to “Setting the Nominal Input Level” for details.

## Configuring the DIP Switches

This section outlines how to configure the ADC-8434-A using the DIP Switches.

### Enabling Card-edge Control

Ensure that **SW1** is set to **ON** and **SW2** is set to **ON** if you are going to use the card-edge DIP Switches to change settings on the card. You can still monitor the card status in Dashboard.

### Setting the Output Modes

Use **SW5** and **SW6** in conjunction to set the output mode of the first audio converter. **Table 1** lists the combinations of DIP Switch settings for **SW5** and **SW6**.

**Table 1** *Setting the Output Mode — Converter 1*

SW5	SW6	Mode Selected
OFF	OFF	Stereo
OFF	ON	Mono
ON	OFF	Left Only
ON	ON	Right Only

Use **SW7** and **SW8** in conjunction to set the output mode of the second audio converter. **Table 2** lists the combinations of DIP Switch settings for **SW7** and **SW8**.

**Table 2 Setting the Output Mode — Converter 2**

SW7	SW8	Mode Selected
OFF	OFF	Stereo
OFF	ON	Mono
ON	OFF	Left Only
ON	ON	Right Only

## Setting the Nominal Input Level


Use **SW9** and **SW10** in conjunction to select the analog input level of the ADC-8434-A. **Table 3** lists the combinations of DIP Switch settings for **SW9** and **SW10**.

**Table 3 Nominal Input Levels**

SW9	SW10	Level (dB)
OFF	OFF	-20
OFF	ON	-18
ON	OFF	-16
ON	ON	-12

## Monitoring Features

This section provides information on the LEDs for the ADC-8434-A. Refer to **Figure 4** locations.

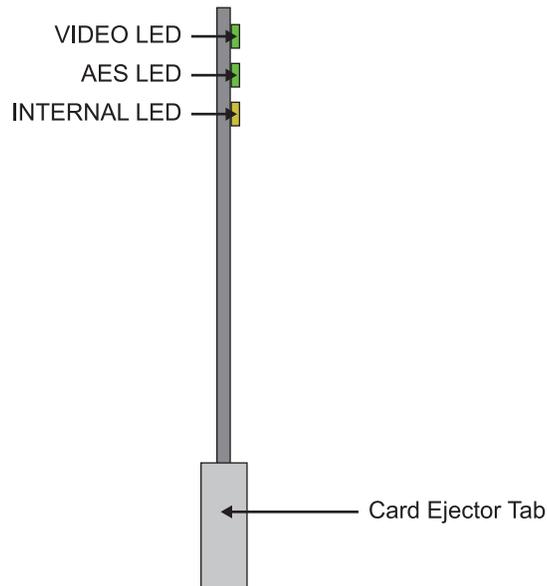

*Figure 4 ADC-8434-A Card-edge Controls*

## Status LEDs on the ADC-8434-A

The front-edge of the ADC-8434-A has LED indicators for the communication activity. Basic LED displays and descriptions are provided in **Table 4**.

**Table 4 LEDs on the ADC-8434-A**

LED	Color	Display and Description
<b>VIDEO</b>	Green	When lit green, this LED indicates a valid reference is selected.
<b>AES</b>	Green	When lit green, this LED indicates a valid AES DARS reference is selected.
<b>INTERNAL</b>	Yellow	When lit, this LED indicates that the card is locked to an internal reference 48kHz reference signal.

# Physical Installation

This chapter provides instructions for installing the rear module(s) for the ADC-8434-A, and installing the card into the frame.

## Before You Begin

Before proceeding with the instructions in this chapter, ensure that your openGear frame is properly installed according to the instructions in its user manual.

## Static Discharge

Throughout this chapter, please heed the following cautionary note:



---

**ESD Susceptibility** — *Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments such as carpeted areas and when synthetic fiber clothing is worn. Always exercise proper grounding precautions when working on circuit boards and related equipment.*

---

## Unpacking

Unpack each ADC-8434-A you received from the shipping container and ensure that all items are included. If any items are missing or damaged, contact your sales representative or Ross Video directly.

## Supported Rear Modules

The rear module for the ADC-8434-A depends on the openGear frame you are installing the card into. The following rear modules are required:

- **DFR-8310 series frame** — The 8310AR-036 rear module (R1A-8434) is required. The ADC-8434-A is not compatible with the DFR-8310-BNC frame.
- **DFR-8321 series frame** and **OG3-FR series frame** — The 8320AR-036 full rear module (R2A-8434) is required.


## Installing a Rear Module

This section outlines how to install a rear module in an openGear frame. The same procedure applies regardless of the frame or card type. However, the specific rear module you need to install depends on the frame you are using. Note that Slot 1 is the left most slot as you look into the openGear frame from the front.

If the rear module is already installed, proceed to the section “**Installing the ADC-8434-A**”.

### To install a rear module in your openGear frame

1. Locate the card frame slots on the rear of the frame.
2. Remove the blank plate from the slot you have chosen for the ADC-8434-A installation. If there is no blank plate installed, proceed to the next step.
3. Install the bottom of the rear module in the **Module Seating Slot** at the base of the frame’s back plane.

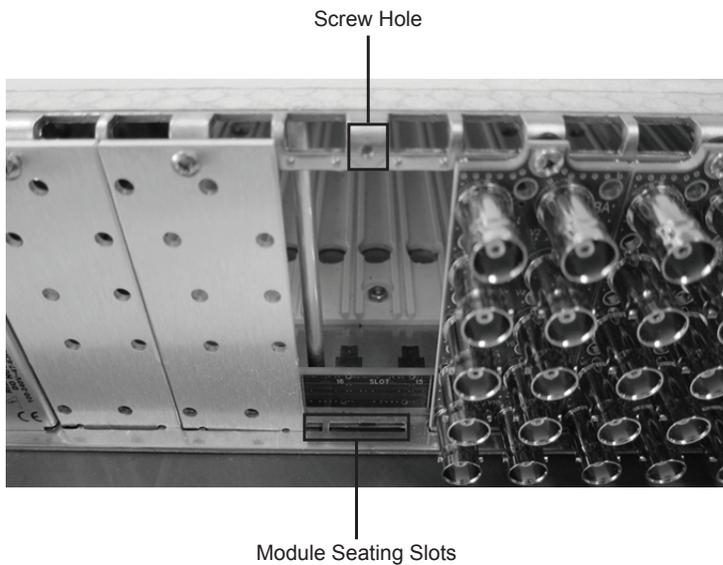

4. Align the top hole of the rear module with the screw on the top-edge of the frame back plane.
5. Using a Phillips screwdriver and the supplied screw, fasten the rear module to the back plane of the frame. Do not over tighten.
6. Ensure proper frame cooling and ventilation by having all rear frame slots covered with rear modules or Blank Plates.

## Installing the ADC-8434-A

This section outlines how to install the ADC-8434-A card into the frame. The same procedure applies regardless of the frame or rear module type.

### To install the ADC-8434-A in an openGear frame

1. Locate the rear module you installed in the procedure **“Installing a Rear Module”**.
2. Hold the ADC-8434-A by the edges and carefully align the card-edges with the slots in the frame.
3. Fully insert the card into the frame until the rear connection pins are properly seated in the rear module.
4. Verify whether your rear module label is self-adhesive by checking the back for a thin wax sheet. You must remove this wax sheet before affixing the label to the rear module surface.
5. Affix the supplied rear module label to the BNC area of the rear module.

# Cabling

This section provides information for connecting cables to the installed rear modules on the openGear frames. Connect the input and output cables according to the following sections.

## DFR-8310 Series Frame Cabling

In the DFR-8310 series frames, the ADC-8434-A is used with the 8310AR-036 rear module. Each module occupies one slot and accommodates one card. This rear module provides four 75ohm AES/EBU outputs, and one stereo analog audio input.

Refer to **Figure 5** for cabling designations.

## DFR-8321, OG3-FR, and OGX-FR Series Frame Cabling

In the DFR-8321, OG3-FR, and OGX-FR series frames, the ADC-8434-A is used with the following full rear modules:

- **8320AR-036** — Each module occupies two slots and accommodates one card. This rear module provides four 75ohm AES/EBU outputs, and one stereo analog audio input. Refer to **Figure 5**.
- **8320AR-036A** — Each module occupies two slots and accommodates one card. This rear module provides four 75ohm AES/EBU outputs, and one stereo analog audio input. Refer to **Figure 6**

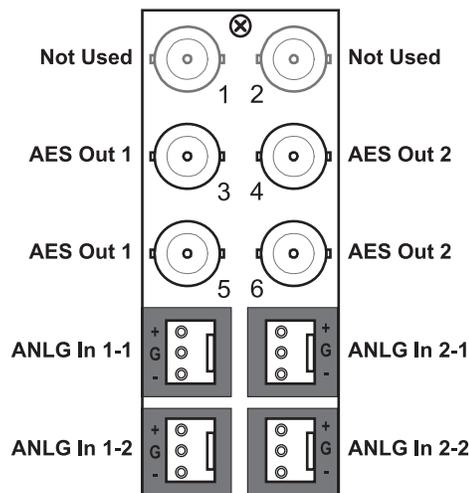


Figure 5 Cabling for the 8310AR-036 and 8320AR-036

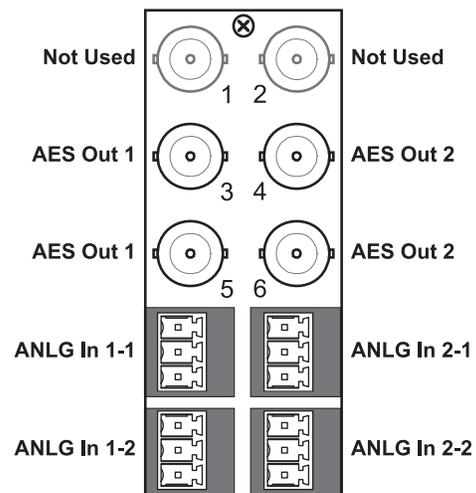


Figure 6 Cabling for the 8320AR-036A



# Getting Started

The DashBoard Control System enables you to monitor and control openGear frames and cards from a computer. DashBoard communicates with other cards in the frame through the Network Controller Card. The DashBoard Control System software and manual are available for download from our website. This chapter provides instructions for launching DashBoard, and accessing the ADC-8434-A interfaces.

## For More Information on...

- on the ADC-8434-A interfaces in DashBoard, refer to “**DashBoard Menus**”.

## Launching DashBoard

Before proceeding, ensure that the DashBoard is installed on a PC connected to your facility network. The DashBoard software and user manual are available from the Ross Video website.

## For More Information on...

- using DashBoard, refer to the ***DashBoard User Manual***.

## To launch DashBoard

1. Ensure that you are running DashBoard software version 6.2.0 or higher.
2. Launch DashBoard by double-clicking its icon on your desktop.
3. Ensure that the openGear frame with the ADC-8434-A card is displayed in the Tree View located on the left-side of the DashBoard window.

★ It may take 30 seconds or more to update the Tree View. Consult the ***MFC-8300 Series*** or ***MFC-OG3 Series User Manual*** and ***DashBoard User Manual*** should the Tree View not display the ADC-8434-A card.

## Accessing the ADC-8434-A Interfaces in DashBoard

The interfaces are accessed by double-clicking the ADC-8434-A node in the DashBoard Tree View.

## To access a card in DashBoard

1. In the Basic Tree View of DashBoard, locate the openGear frame the ADC-8434-A is installed in.
2. Expand the openGear frame node to display a list of sub-nodes.  
Each sub-node represents a slot in the frame that is populated with an openGear card.
3. Double-click the **ADC-8434-A** sub-node to display its interface in the DashBoard window.



# Upgrading the Software

The ADC-8434-A can be upgraded in the field via DashBoard.

## To upgrade the software on a card

1. Contact Ross Technical Support for the latest software version file.
  2. Ensure the Ethernet cable is connected to the **Ethernet** port on the openGear frame.
  3. From the **Tree View**, expand the node for the ADC-8434-A you want to access.
  4. Double-click the **Global** sub-node to display the interface in the right-half of DashBoard.
  5. Select **Upload**, located near the bottom of the interface, to display the **Select file Upload** dialog.
  6. Navigate to the **\*.bin** file you want to upload.
  7. Click **Open**.
  8. If you are upgrading a single card:
    - a. Click **Finish** to start the upgrade.
    - b. Proceed to step 10.
  9. If you are upgrading multiple cards:
    - a. Click **Next >** to display the **Select Destination** menu. This menu provides a list of the compatible cards.
    - b. Specify the card(s) to upload the file to by selecting the check box(es) for the cards you want to upload the file to.
    - c. Verify the card(s) you want to upload the file to. The **Error/Warning** fields indicate any errors, such as incompatible software or card type mismatch.
    - d. Click **Finish**.
  10. Monitor the upgrade.
    - An **Upload Status** dialog enables you to monitor the upgrade process.
    - Notice that each card is listed in the dialog with a  button. This button is replaced with a **Reboot** button once the software file is loaded to that card.
- ★ Avoid clicking the individual Reboot buttons until all cards have successfully completed the file upload process and the OK button, located in the bottom right corner of the dialog, is enabled.
- Click **OK** to reboot all the cards listed in the **Uploading to Selected Devices** dialog.
  - The **Reboot Confirm** dialog displays, indicating the number of cards that will reboot. Click **Yes** to continue the upgrade process. Note that clicking **Cancel** or **No** returns you to the **Uploading to Selected Devices** dialog without rebooting the card(s).
  - The card(s) are temporarily taken off-line during the reboot process. The process is complete once the status indicators for the **Card State** and **Connection** return to their previous status.



# DashBoard Menus

This chapter provides a summary of the menus available for the ADC-8434-A. Parameters noted with an asterisk (\*) are the default values.

- ★ Wait 30 seconds after the last setting change to ensure all changes are saved to the non-volatile memory of the card.

## Status Tabs

This section summarizes the read-only information displayed in the **Status** tabs. The fields in the **Status** tabs can vary in severity from green (valid), yellow (caution), to red (alarm). DashBoard reports the most severe alarm for a single field.

## Card Info Tab

**Table 5** summarizes the read-only information displayed in the **Card Info** tab.

**Table 5 Card Info Tab Items**

Item	Parameters	Description
Card Name	Quad Analog Audio to AES Converter	
Product	ADC-8434-A	
Supplier	Ross Video Ltd.	
Serial Number	#	Indicates the serial number of the board
Software Rev	##.##	Indicates the software version

## Card Status Tab

**Table 6** summarizes the read-only information displayed in the **Card Status** tab.

**Table 6 Card Status Tab Items**

Item	Parameters	Description
Card Status	Green	Indicates that the card is functioning normally and no anomalies are detected
	Yellow	Indicates that the reference input is unlocked
	Red	Indicates that an error has occurred
Ref Input	Unlocked	Indicates the reference source is missing or invalid
	Locked	Indicates a valid reference source is present

## Settings Tab

**Table 7** summarizes the **Settings** options available in DashBoard.

**Table 7 Settings Menu Items**

Item	Parameters	Description
Reference	Frame Ref 1	External reference connected to Frame 1 and selected
	Frame Ref 2	External reference connected to Frame 2 and selected
	Internal	Uses the internally generated 48kHz reference signal
ADC # Output Mode	Mono	Specifies the operating mode of the audio converter
	Stereo	
	Left Only	
	Right Only	
Input Calibration	-20	Calibrates the analog nominal input level of the card. Note that this setting overwrites the value set by <b>SW9</b> and <b>SW10</b> .
	-18	
	-16	
	-12	

# Technical Specifications

This chapter provides the technical specifications for the ADC-8434-A.

★ Specifications are subject to change without notice.

**Table 8 ADC-8434-A Technical Specifications**

Parameter	Specification
<b>Analog Inputs</b>	
Number of Inputs	4 balanced channels (2 stereo pairs)
Connector	Terminal Block (WECO™)
Impedance	>20kOhms
Nominal Input Level	+4dB
<b>Reference Input</b>	
Signal (from DFR-8300 series frame)	AES-3id, DARS, Video Black
Internal Reference	48kHz
<b>AES/EBU Digital Outputs</b>	
Number of Outputs	4 (2 outputs of each input signal)
Connector	BNC
Sample Frequency Rate	32kHz to 96kHz
Return Loss	-25dB
Impedance	75ohm
Rise & Fall Time	30nS
Output Level	1.0V p-p ±10%
<b>Performance</b>	
Quantization	24Bits
Frequency Responses	±0.5dB (20Hz to 20kHz)
Signal to Noise Ratio	-114dB unweighted
Measure at -20dBFS	-118dB 'A' weighted
THD+N at -20dBFS	-110dB (<0.002%)
Crosstalk	<-100dB
Jitter	<5ns
<b>Power</b>	
Maximum Power Consumption	>3.8W



# Service Information

This chapter provides information on the warranty and repair policy for your ADC-8434-A.

## Troubleshooting Checklist

Routine maintenance to this openGear product is not required. In the event of problems with your ADC-8434-A, the following basic troubleshooting checklist may help identify the source of the problem. If the frame still does not appear to be working properly after checking all possible causes, please contact your openGear products distributor, or the Technical Support department at the numbers listed in “**Contacting Technical Support**”.

1. **Visual Review** — Performing a quick visual check may reveal many problems, such as connectors not properly seated or loose cables. Check the card, the frame, and any associated peripheral equipment for signs of trouble.
2. **Power Check** — Verify the power indicator LED on the distribution frame front panel for the presence of power. If the power LED is not illuminated, verify that the power cable is connected to a power source and that power is available at the power main. Confirm that the power supplies are fully seated in their slots. If the power LED is still not illuminated, replace the power supply with one that is verified to work.
3. **Re-seat the Card in the Frame** — Eject the card and reinsert it in the frame.
4. **Check Control Settings** — Refer to the Installation and User Control sections of the manual and verify all user-adjustable component settings.
5. **Input Signal Status** — Verify that source equipment is operating correctly and that a valid signal is being supplied.
6. **Output Signal Path** — Verify that destination equipment is operating correctly and receiving a valid signal.
7. **Unit Exchange** — Exchanging a suspect unit with a unit that is known to be working correctly is an efficient method for localizing problems to individual units.

## Warranty and Repair Policy

The ADC-8434-A is warranted to be free of any defect with respect to performance, quality, reliability, and workmanship for a period of FIVE (5) years from the date of shipment from our factory. In the event that your ADC-8434-A proves to be defective in any way during this warranty period, Ross Video Limited reserves the right to repair or replace this piece of equipment with a unit of equal or superior performance characteristics.

Should you find that this ADC-8434-A has failed after your warranty period has expired, we will repair your defective product should suitable replacement components be available. You, the owner, will bear any labor and/or part costs incurred in the repair or refurbishment of said equipment beyond the FIVE (5) year warranty period.

In no event shall Ross Video Limited be liable for direct, indirect, special, incidental, or consequential damages (including loss of profits) incurred by the use of this product. Implied warranties are expressly limited to the duration of this warranty.

This ADC-8434-A User Manual provides all pertinent information for the safe installation and operation of your openGear Product. Ross Video policy dictates that all repairs to the ADC-8434-A are to be conducted only by an authorized Ross Video Limited factory representative. Therefore, any unauthorized attempt to repair this product, by anyone other than an authorized Ross Video Limited factory representative, will automatically void the warranty. Please contact Ross Video Technical Support for more information.

## In Case of Problems

Should any problem arise with your ADC-8434-A, please contact the Ross Video Technical Support Department. (Contact information is supplied at the end of this publication.)

A Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions, should you wish our factory to repair your ADC-8434-A. If required, a temporary replacement frame will be made available at a nominal charge. Any shipping costs incurred will be the responsibility of you, the customer. All products shipped to you from Ross Video Limited will be shipped collect.

The Ross Video Technical Support Department will continue to provide advice on any product manufactured by Ross Video Limited, beyond the warranty period without charge, for the life of the equipment.

# Glossary

The following terms are used throughout this guide:

**DashBoard** — the DashBoard Control System.

**Frame** — the openGear frame that houses the ADC-8434-A unless otherwise noted.

**Network Controller Card** — the MFC-OG3-N, MFC-OGX-N, MFC-8322-S, and any available options unless otherwise noted.

**openGear Frame** — refers to the OG3-FR and OGX-FR series frames unless otherwise noted.

**System**— the mix of interconnected production and terminal equipment in your environment.

**User** — the person who uses the ADC-8434-A.

